

DP50747-00

Panel: Self Test

Panel is capable of generating internal patterns without the Main Signal Board attached. (rotating: white / red / green / blue / and various other patterns)

This test eliminates Main Signal Board from circuit and confirms if panel itself is operating properly.

1) Unplug these connectors from SMPS and Logic Board.

CN8003 (SMPS)

CN8004 (SMPS)

CN2001 (LOGIC BD.)

2) Short pins 1-4 together on Logic Bd. at CN2007.

(a small screw works good to short all together)

3) Shorting pins Gnd & PS_ON at CN8003, (3rd & 4th pin from bottom of connector) will energize the panel, after AC power has been applied in step #4 below.



(If AC power is applied and panel is working, it will energize with rotating patterns just as soon as pins Gnd & PS_ON are shorted)

4) AC power must be applied to panel. Power cord can still be attached to AC Filter, or power can be applied directly to CN8001 on SMPS.

(recommend that AC Filter still be used for ease of connection, but can be bypassed if needed)

5) Please remember to remove short at CN2007, when finished.

note: no audio is available with panel self test

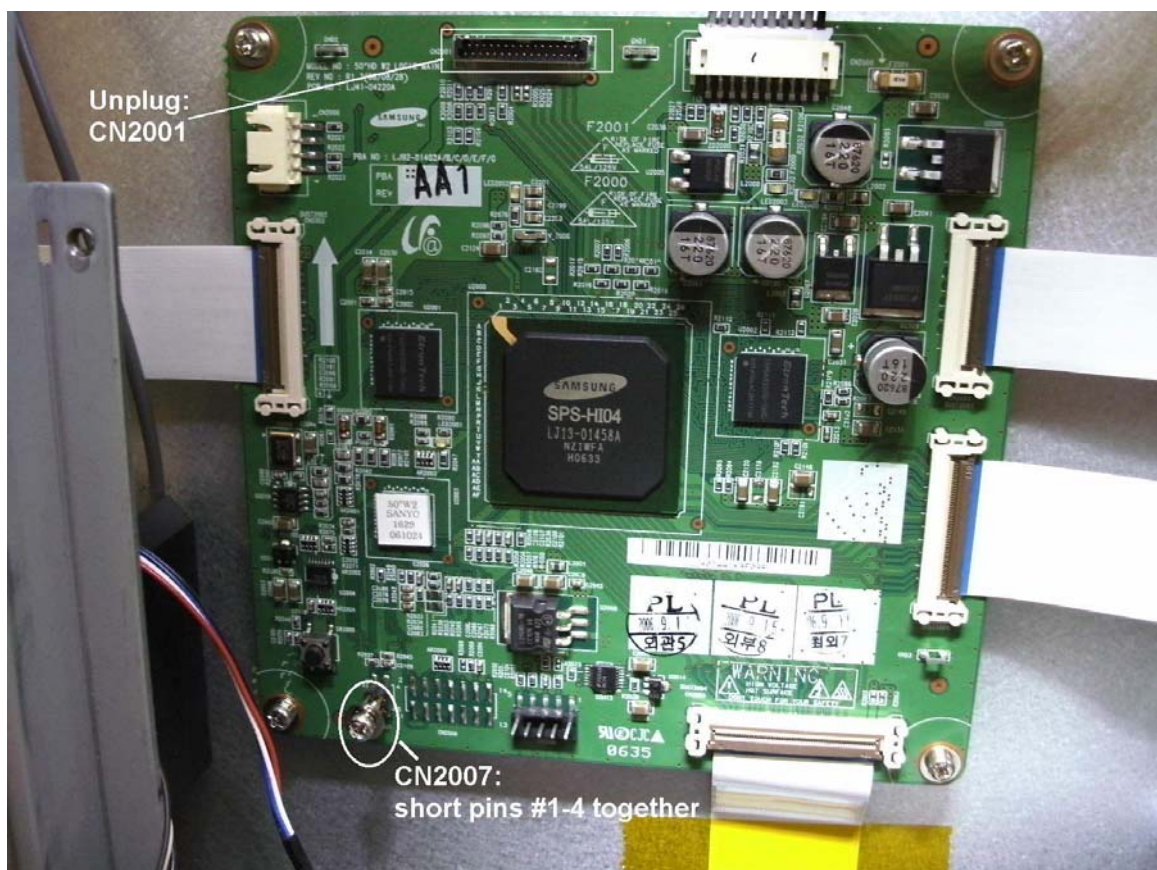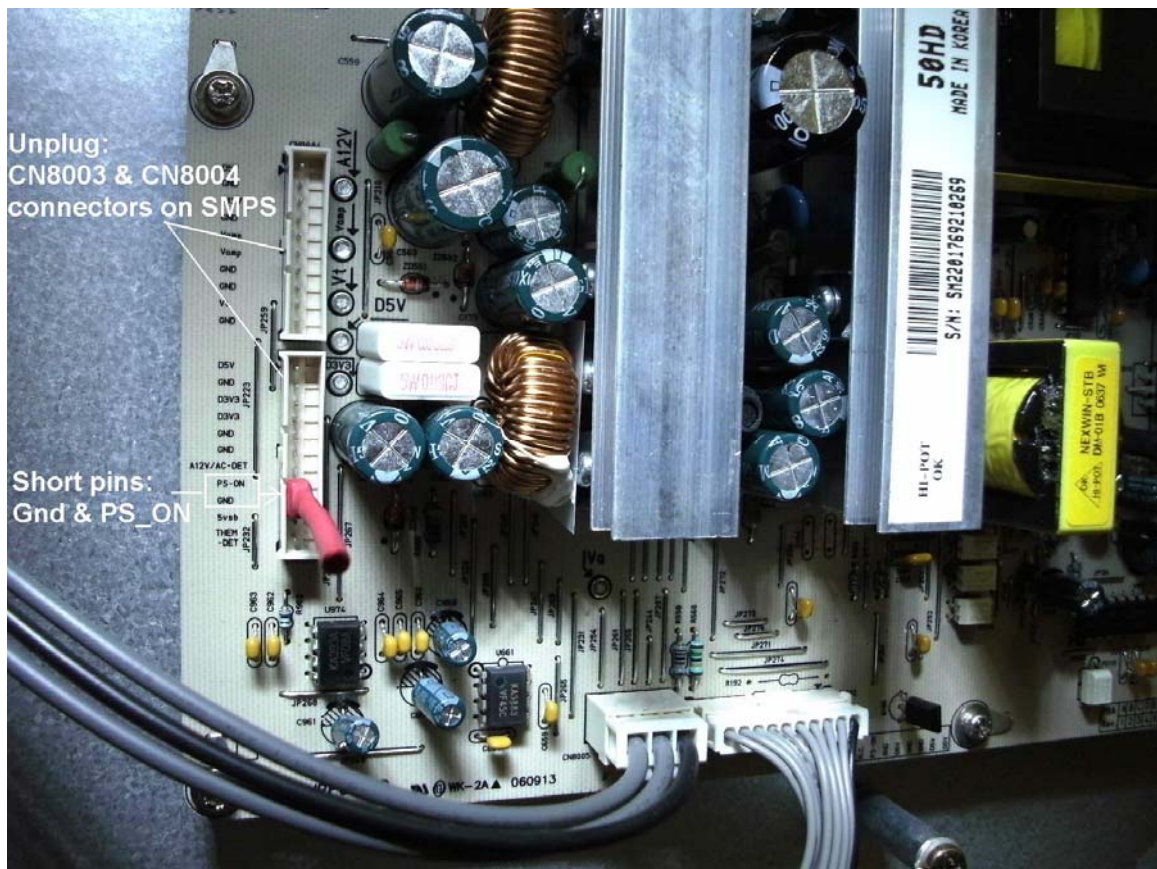

FILE NO.

SERVICE MANUAL

Remote Control Plasma Color Television

DP50747 (U.S.A.)
(CANADA)

ORIGINAL VERSION



Chassis No. P50747-00

NOTE: Match the Chassis No. on the unit's back cover with the Chassis No. in the Service Manual.

If the Original Version Service Manual Chassis No. does not match the unit's, additional Service Literature is required. You **must** refer to "Notices" to the Original Service Manual prior to servicing the unit.

Servicing should be performed by only trained and qualified service personnel.

Contents

SAFETY INSTRUCTIONS	2
SERVICE ADJUSTMENTS	3
ON-SCREEN SERVICE MENU	4
POWER FAILURE CIRCUIT	5
Mechanical Disassembly	6-10
CHASSIS ELECTRICAL PARTS LIST	11-25
CABINET PARTS LIST	26
COMPONENT AND TESTPOINT LOCATIONS	27-29
BLOCK DIAGRAM POWER LINES	30
BLOCK DIAGRAM SIGNAL LINES	31
IC BLOCK DIAGRAMS	32-41
troubleshooting FLOW CHARTS	42-44
CONTROL PORT FUNCTIONS	45-46
SIGNAL FLOW CHARTS	47-54
SCHEMATIC NOTES	55
IC, DIODE, AND TRANSISTOR PIN LAYOUTS	56
PC BOARD CONNECTIONS AND LOCATIONS	57
CAPACITOR AND RESISTOR CODE CHART	58
SCHEMATIC DIAGRAMS	59-60

Specifications

POWER RATING	120VAC 420W (AVG.)
ANTENNA INPUT IMPEDANCE	75Ω UHF/VHF/CATV DIGITAL
RECEIVING CHANNEL	2 - 13 (VHF), 14 - 69 (UHF), 01, 14-94, 95-125 (CATV) 1-135 (DIGITAL)
REMOTE READY	32 KEY REMOTE CONTROL
SOUND OUTPUT	7.0 W/CH
INTERMEDIATE FREQUENCY	
PICTURE IF CARRIER	45.75MHz
SOUND IF CARRIER	41.25MHz
COLOR SUB CARRIER	42.17MHz
CABINET DIMENSIONS	
WIDTH	1255mm
HEIGHT	846mm
DEPTH INCLUDING BASE	281mm

SAFETY INSTRUCTIONS

SAFETY PRECAUTIONS

WARNING: The chassis of this receiver has a floating ground with the potential of one half the AC line voltage in respect to earth ground. Service should not be attempted by anyone not familiar with the precautions necessary when working on this type of equipment.

The following precautions must be observed:

1. An isolation transformer must be connected in the power line between the receiver and the AC line before any service is performed on the receiver.
2. Comply with all caution and safety-related notes provided inside the cabinet, on the chassis, and on the back.
3. When replacing a chassis in the cabinet, always be certain that all the protective devices are installed properly, such as control knobs, adjustment covers, shields and barriers.
4. Before replacing the back cover of the set, thoroughly inspect the inside of the cabinet to see that no stray parts or tools have been left inside.

Before returning any television to the customer, the service technician must perform the following safety checks to be sure that the unit is completely safe to operate without danger of electrical shock.

ANTENNA COLD CHECK

Remove AC plug from the 120 VAC outlet and place a jumper across the two blades. Connect one lead of an ohmmeter to the jumpered AC plug, and touch the other lead to each exposed antenna terminal (UHF and VHF antenna terminals). The resistance must measure between 1M ohm and 5.2M ohm. Any resistance value below or above this range indicates an abnormality which requires corrective action.


LEAKAGE CURRENT CHECK

Plug the AC line cord directly into a 120 VAC outlet. (Do not use an isolation transformer for this check.) Use an AC voltmeter, that has 5000 ohms per volt or more sensitivity. Connect a 1500 ohm 10 watt resistor, paralleled by a 0.15 μ F 150 VAC capacitor, between a known good earth ground (water pipe, conduit, etc.) and all exposed metal parts of the cabinet (antennas, handle bracket, metal cabinet, screw heads, metal overlays, control shafts, etc.). Measure the AC voltage across the 1500 ohm resistor. The AC voltage should not exceed 750 mV. A reading exceeding 750 mV indicates that a dangerous potential exists. The fault must be located and corrected. Repeat the above test with the receiver power plug reversed.

NEVER RETURN A RECEIVER TO THE CUSTOMER WITHOUT TAKING THE NECESSARY CORRECTIVE ACTION.

PRODUCT SAFETY NOTICE

When replacing components in a receiver, always keep in mind the necessary product safety precautions. Pay special attention to the replacement of components marked with a ⚠ in the parts list and in the schematic diagrams. To ensure safe product operation, it is necessary to replace those components with the exact same PARTS.

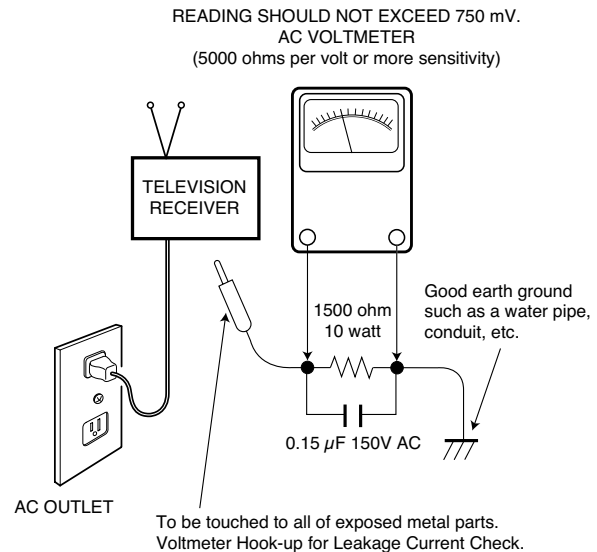

SERVICING ELECTROSTATICALLY SENSITIVE DEVICES

Semiconductors (solid-state devices) that can be damaged by static electricity are referred to as Electrostatically Sensitive (ES) devices. Examples of typical ES devices are: Integrated Circuits (IC), Field-Effect Transistors (FET), and "chip" components. The following techniques should be observed strictly, to reduce the occurrence of semiconductor damage due to electrostatic discharge.

1. Immediately prior to handling any semiconductor component or an assembly containing a semiconductor device or devices, discharge the electrostatic buildup on your body by touching a known earth ground. You may also obtain and wear a commercially available discharging wrist strap device.

CAUTION: Be sure to remove the wrist strap before applying power to any unit being serviced.

2. After removing an ES equipped assembly, place it on a conductive surface, such as, aluminum foil, to prevent buildup or exposure to static electricity.
3. Use only grounded-tip soldering irons to solder or unsolder ES devices.
4. Use only anti-static solder removal devices. Some suction-type devices can generate static electricity adequate to damage ES devices.
5. A replacement ES device will come packaged in protective material (conductive foam, aluminum foil, or some comparable conductive material). Do Not remove an ES device from its protective packaging unless you are prepared to install it immediately.
6. Precisely prior to removing an ES device from its protective packaging, touch the protective packaging to the chassis or assembly in which the device will be installed.

CAUTION: Be sure that no power is applied to the chassis or circuit assembly.

7. Incidental body movements, such as, lifting a foot from a carpeted floor or the rubbing of fabric together can generate static electricity sufficient to damage ES devices. Therefore, minimize all body movements while handling exposed (unpacked) ES devices.

SERVICE ADJUSTMENTS

GENERAL

This set has an On-screen Service Menu system included in the CPU that allows remote operation for most of the service adjustments.

ON-SCREEN SERVICE MENU SYSTEM

1. Enter the Service Menu:

- Turn off the receiver and disconnect the AC power supply.
- While pressing the Volume (–) button on the television, reconnect the AC power supply. The Service Menu will now appear. The remote can now be used to make adjustments. See Figure 1 below.



Figure 1. Service Menu Display



2. Service Adjustments:

- Press the **Cursor** ▲ or ▼ key to select the desired service menu item you want to adjust. See page 4 for the On-screen Service Menu.
- Use the **Cursor** < or > key to adjust the data. The < or > key will increase or decrease the data sequentially.

3. Exit from the Service Menu:

- Press the **MENU** key to turn off the Service Menu display.

Volume – : Enter Service Menu

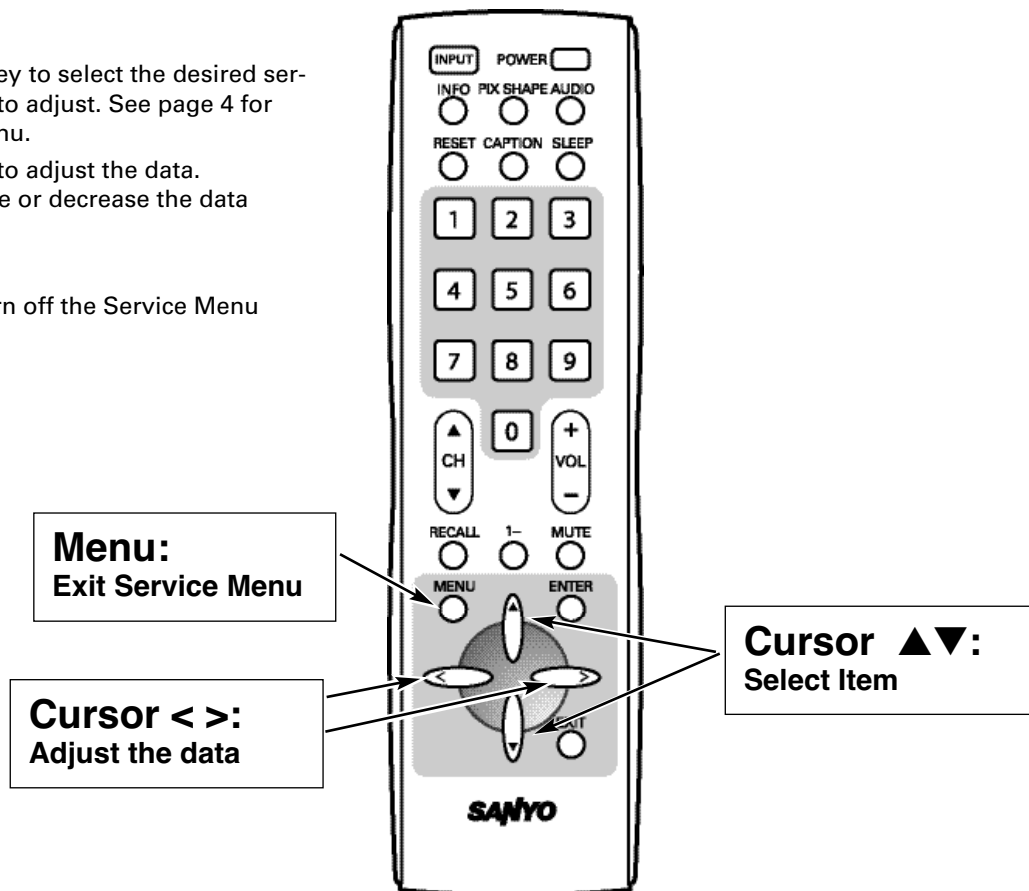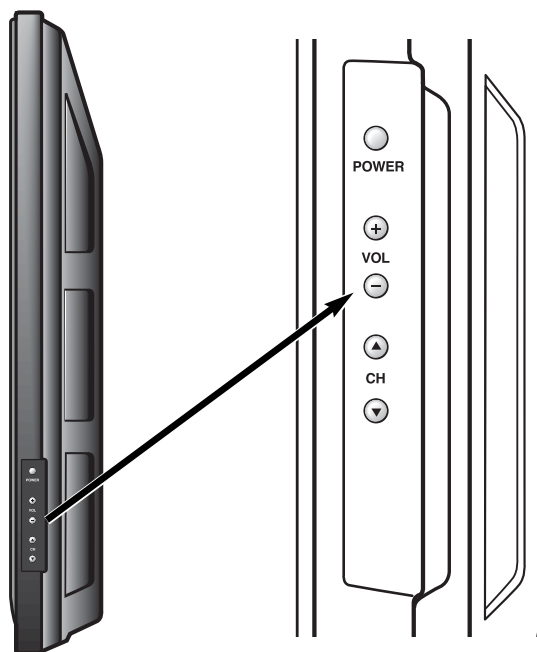

ON-SCREEN SERVICE MENU

Table 1. ON-SCREEN SERVICE MENU

When IC802 (EEPROM) is replaced, check the bus data to confirm they are the same as below. See page 3 for On-Screen Service Menu access and adjustments.

No.	Title	Initial Data	Note
086	VOL	30h	Volume setup inspection
087	OP1	18h	Option 1 Data
088	OP2	14h	Option 2 Data
101	1R00	00h	ROM Correction Data
102	1R02	00h	ROM Correction Data
↓	↓	↓	↓
197	2R47	00h	ROM Correction Data
198	2R48	00h	ROM Correction Data

PROGRAM CODES

The microprocessor used in this model is a multi-purpose type and is used in several different models. To ensure proper operation and the correct features for your particular model, the program codes must be correct.

Note 1. Option Data 1 (NO. 087 OPT) should be hexadecimal 18. See 087 above. If this program code is wrong the TV will not operate properly.

Note 2. Option Data 2 (NO. 088 OP2) should be hexadecimal 14. See 088 above. If this program code is wrong the TV will not operate properly.

POWER FAILURE CIRCUIT

This unit is equipped with a Power Failure Detector function included in the CPU which checks for an abnormal condition in the chassis power supplies.

If, while the power is on, a failure is caused by any of the following that results in a low voltage supply, the CPU will turn the unit off in 1.5 seconds to prevent further damage:

- Failure within the power supply circuits.
- A short circuit in the load side from the supply.

1. **Power Failure 1:** Detected voltage failure for analog and digital circuits. (Connected to IC801 pin 32.)

2. **Power Failure 2:** Not used on this model. (Connected to IC801 pin 36.)


(Normal: High; Failure: Low)

If, while the power is off, the power is switched on and any of these failures remains uncorrected, the CPU will shut off the power within three seconds.

Check the following if the unit is turned off by the power failure detector.

1. Disconnect the AC power cord (120V AC line) for at least 10 seconds.
2. Connect a DC Voltmeter to the circuits shown below.
3. Press the Power key and check for the proper voltage supplies.
4. If any of these voltages is low, the power failure detector should turn the unit off within three seconds.
5. Check all circuits shown below.

Note: This unit is equipped with a Power Surge Protection feature included in the CPU. If power failure occurs three times within 15 minutes, the CPU will stop functioning automatically to help prevent secondary damage. (TV will not turn on by pressing the power key.) To reset the operating programs within the CPU, disconnect the AC power cord for at least 10 seconds.

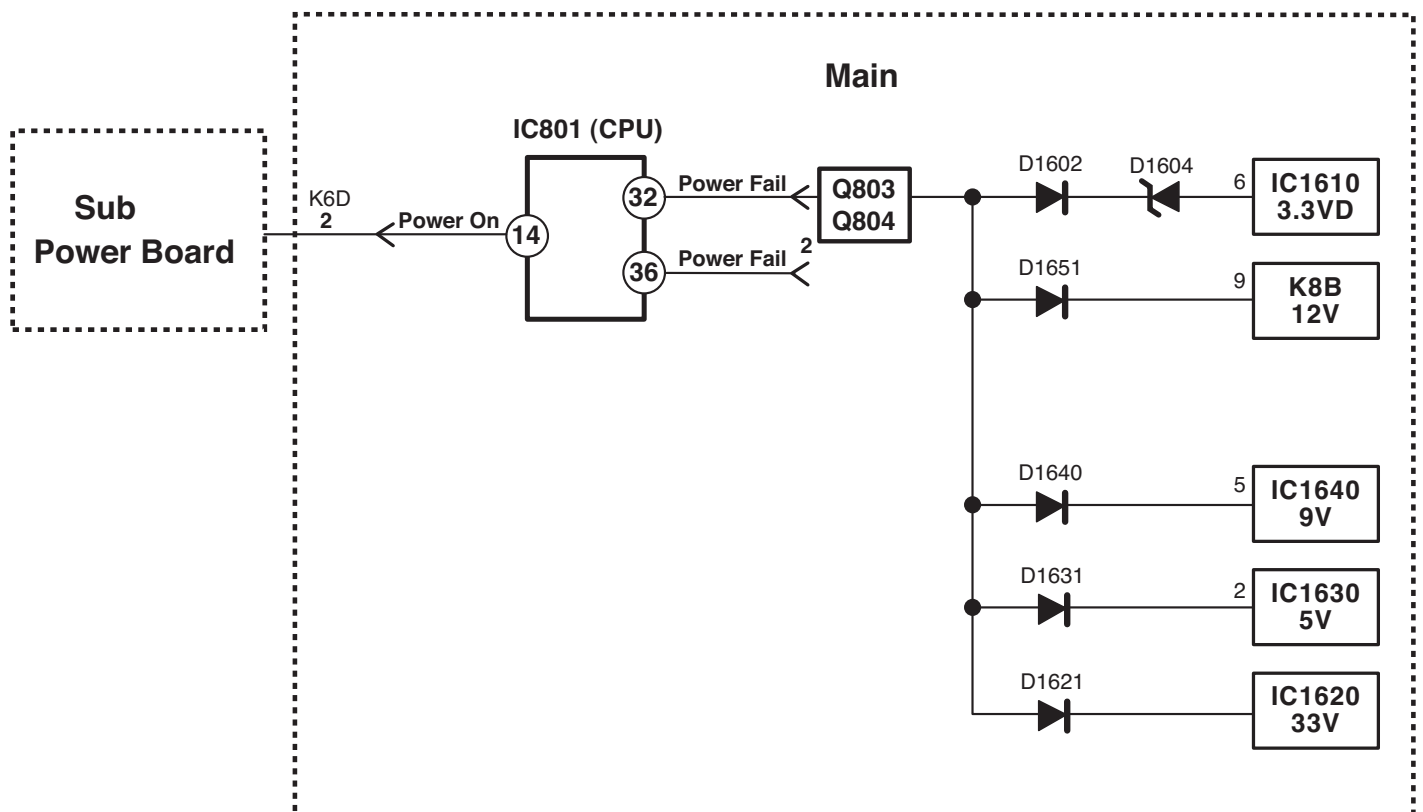


MECHANICAL DISASSEMBLY

ATTENTION

- This PDPTV uses several different kinds of screws. Using the **correct screw** is required to prevent damage.
- The **gasket** is provided to prevent interference to other radio and television receivers. The gasket must be returned to its previous position after servicing.
- Lead wires must be redressed to previous positions after servicing.


STAND REMOVAL

Position TV face down on a padded or cushioned surface to protect the screen and finish. Remove 4 screws (6X18) and remove stand.

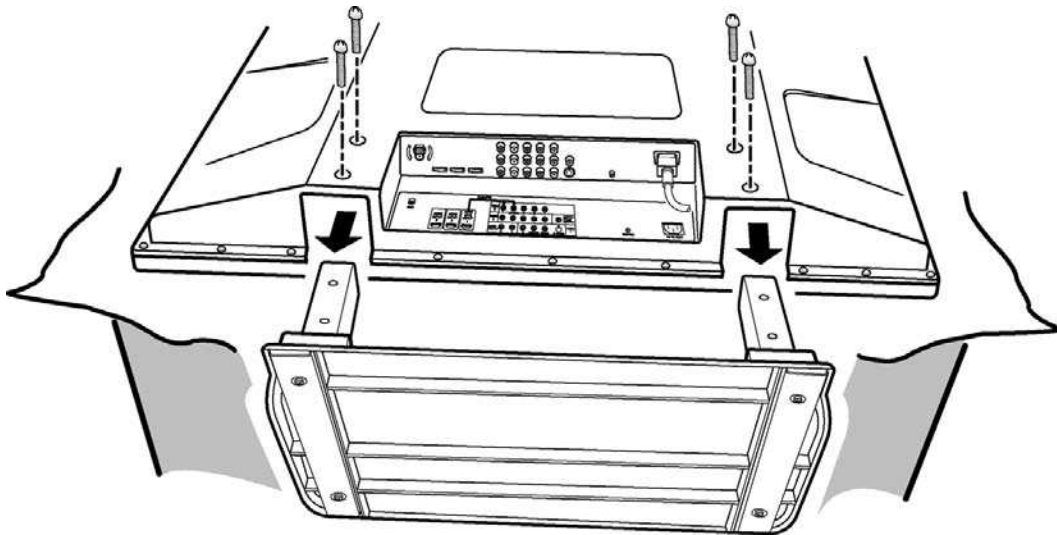


BACK CABINET REMOVAL

Remove 43 screws to take the cabinet back off.
(A:4X14, 22pcs; B:6X18, 4pcs; C:4X8,17pcs)

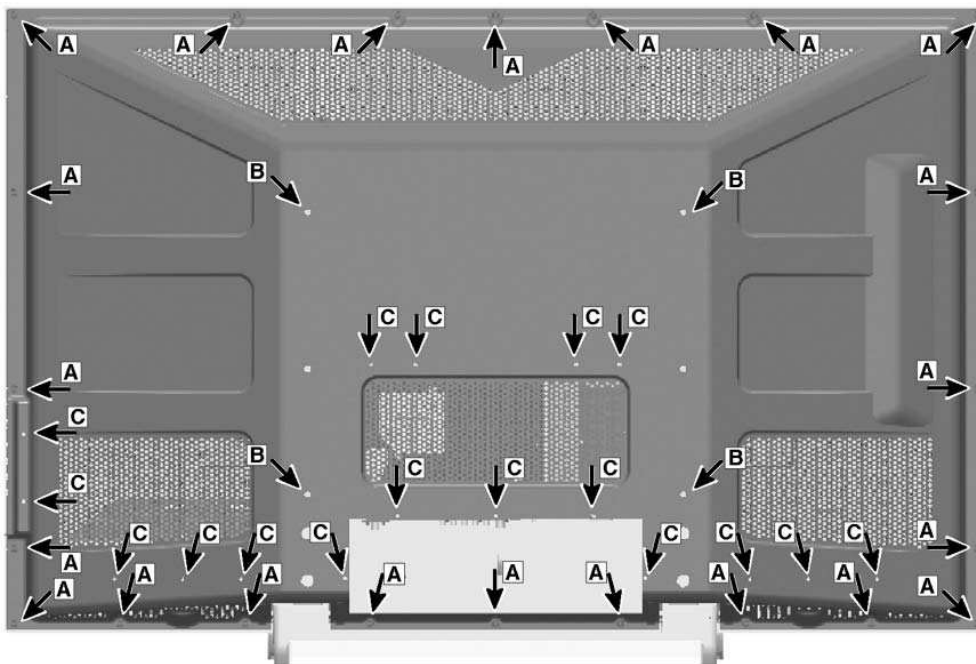

BOARD AND SPEAKER LOCATIONS

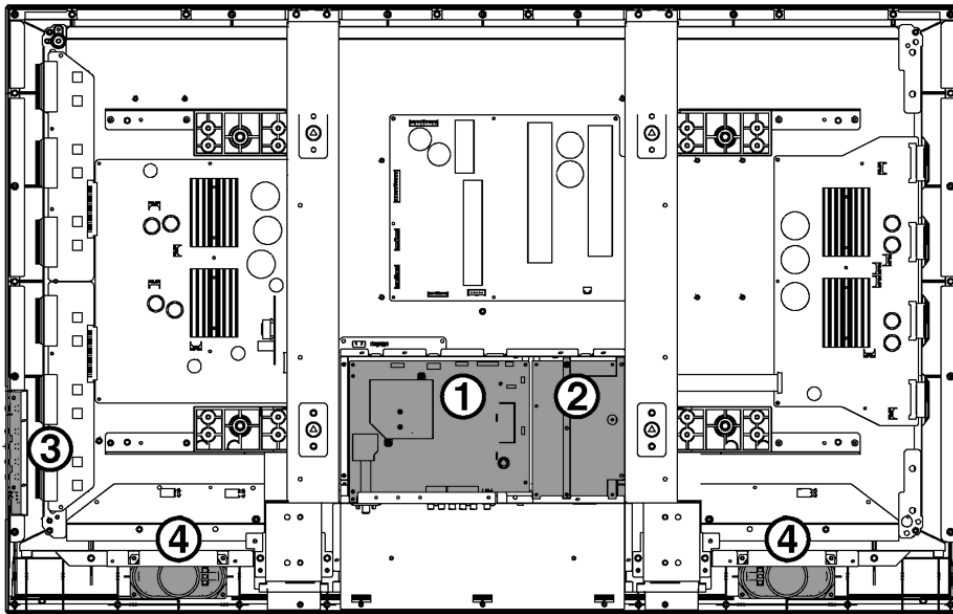

1: Main Board


3: Control Board

2: Sub-Power and Filter Board

4: Speakers


TERMINAL BASE REMOVAL

Remove 5 screws (F:4X14, 2pcs, G:3X8, 3pcs) to take the terminal base off.

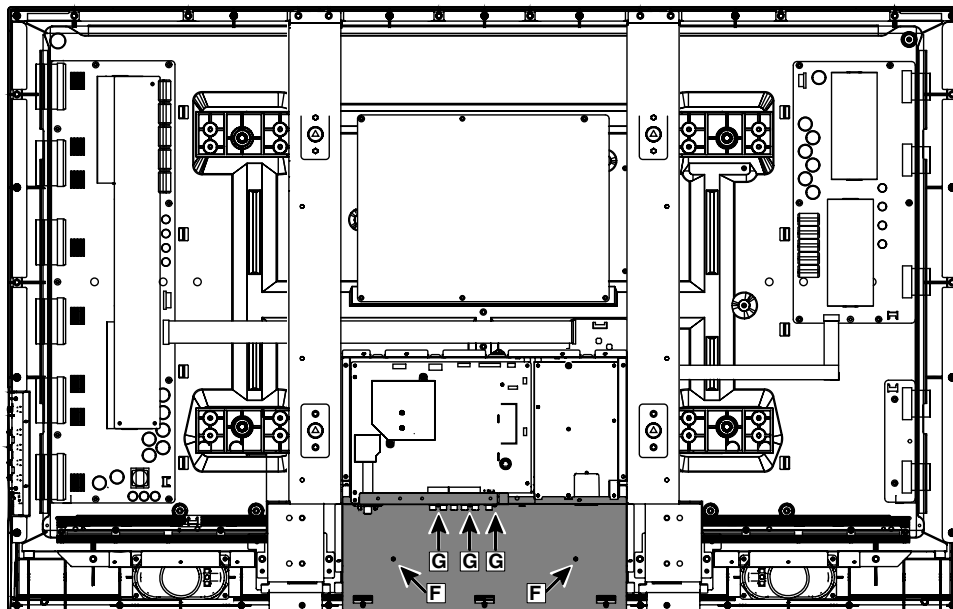

MECHANICAL DISASSEMBLY (CONT.)

BOARD REMOVAL

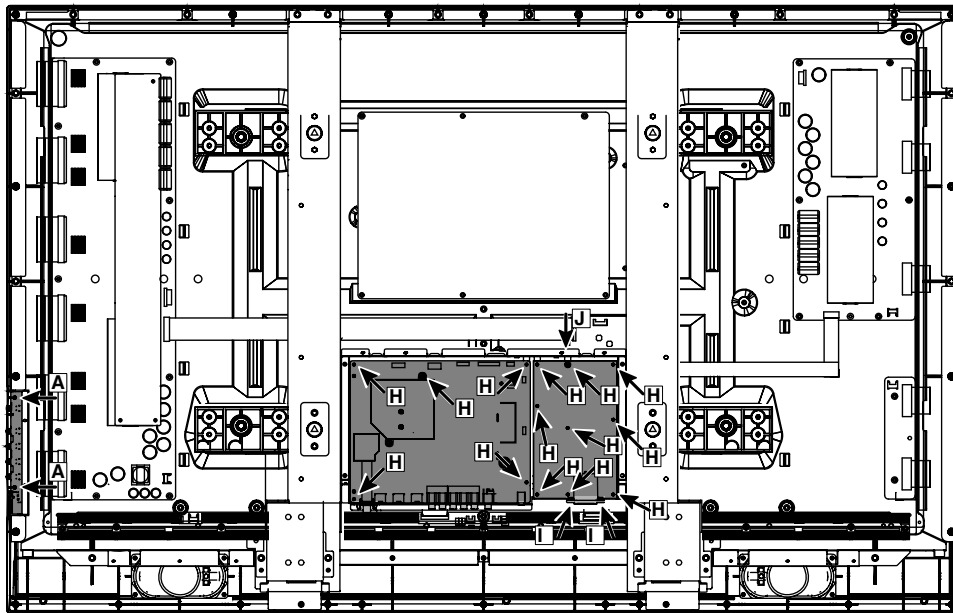

1: Main Board Removal

Remove 5 screws (H:3X6) to take the main board off.

3: Control Board Removal


Remove 2 screws (A:4X14) to take the control board off.

2: Sub-Power and Filter Board Removal

Remove 12 screws (H:3X6, 9pcs, I:3X8, 2pcs, J:4X10, 1pc) to take the sub-power and filter board off.


FILTER GLASS AND SPEAKER REMOVAL

1. Disconnect the following socket connections.
Control Board ~ Main Board: **K8FRA**
Speakers ~Main Board: **KSP**
2. Remove 10 screws (4X14) to take the panel module with the panel holders (Mounting Brackets) and boards off.

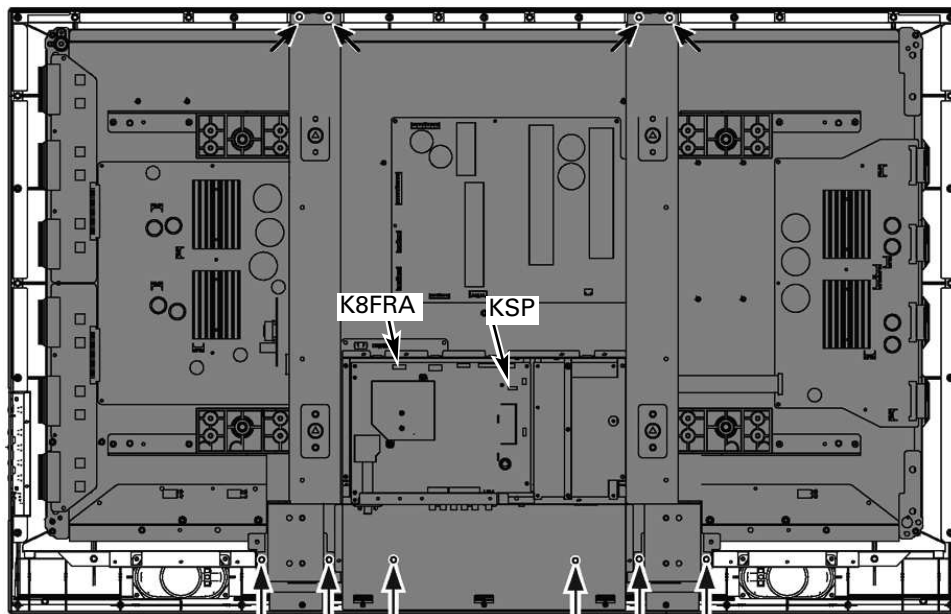


FILTER GLASS AND SPEAKER REMOVAL (Cont.)

3. Remove 13 screws (4X14) to take the shield plates (top, bottom, R/L sides) with the filter glass off.

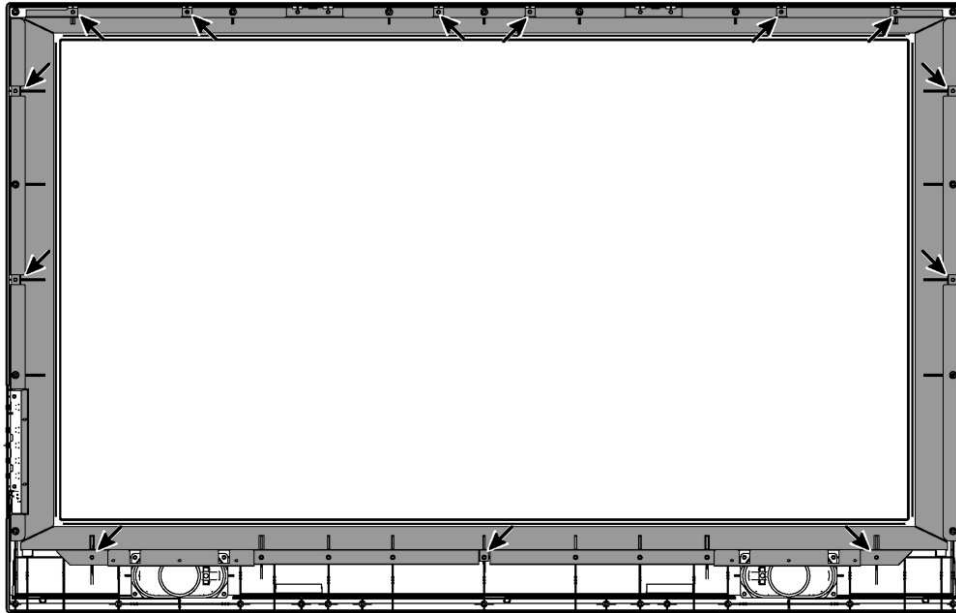


4. Remove 4 screws (4X4) to take off each speaker

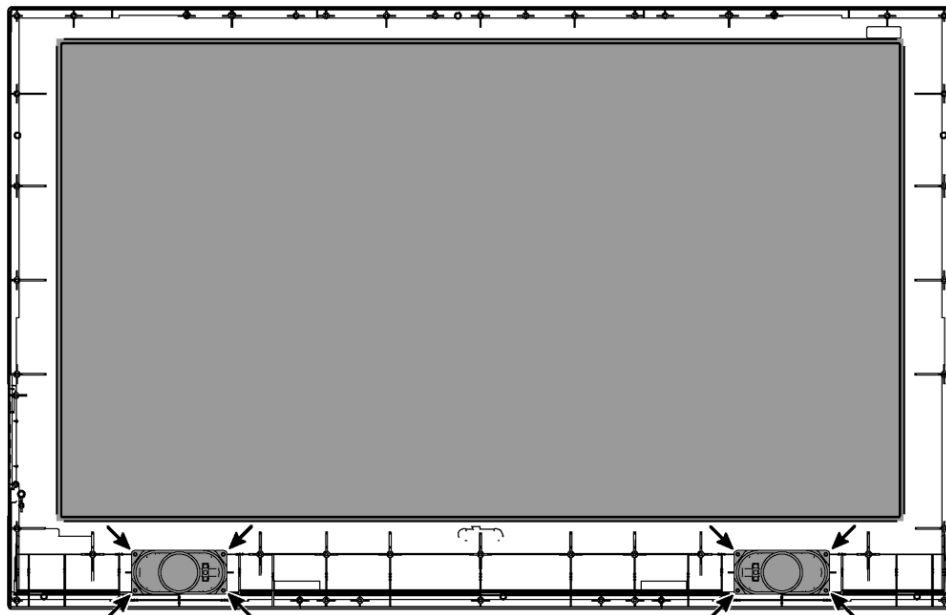


MECHANICAL DISASSEMBLY (CONT.)

PANEL MODULE REMOVAL

1. Disconnect the following socket connections;
PDP Module Power Unit ~ Main Board: **CN8003, CN8004**
PDP Module Power Unit ~ Sub-power and Filter Board: **CN8001**
PDP Module Logic Unit ~ Main Board: **K5LV**
2. Remove 8 screws (4X14) from the Mounting Brackets and take the panel module off.

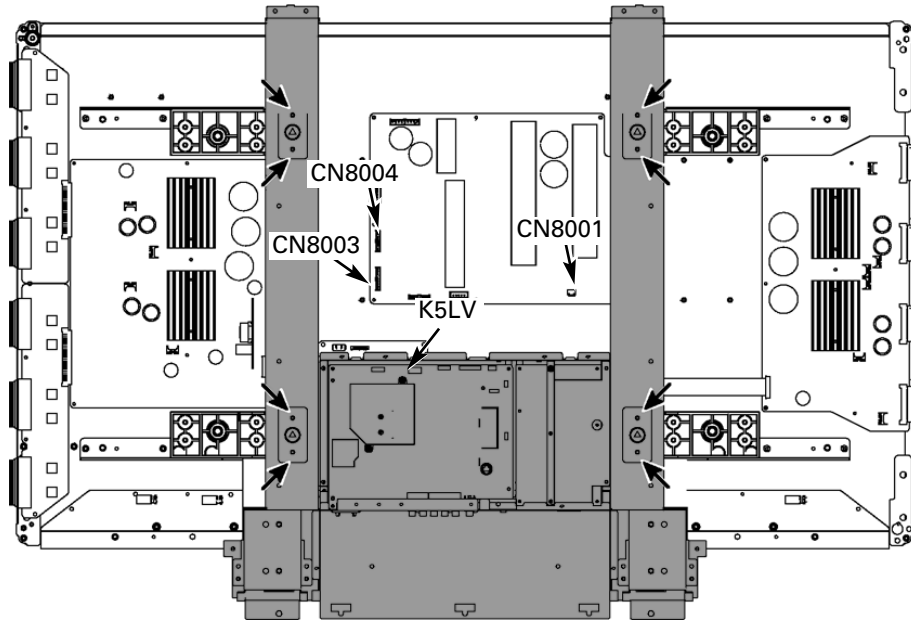

2. Remove 4 screws (4X8) to take each mounting block off.

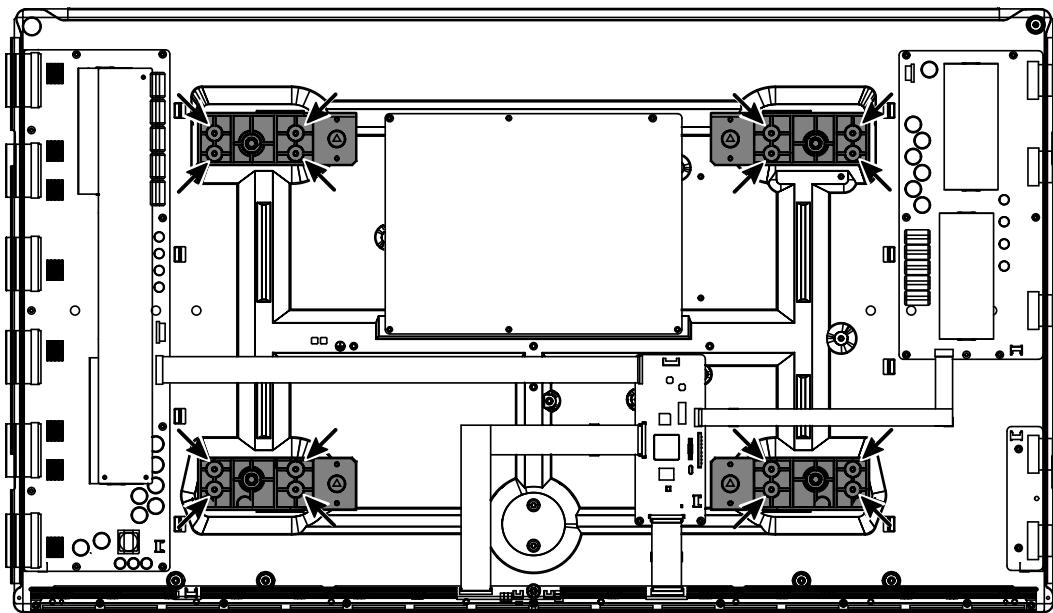

CHASSIS ELECTRICAL PARTS LIST

CAUTION: To Protect against electrical shock and for continued product safety, refer to SAFETY PRECAUTIONS, and PRODUCT SAFETY NOTICE on Page 2.

PRODUCT SAFETY NOTICE

PRODUCT SAFETY SHOULD BE CONSIDERED WHEN A REPLACEMENT IS MADE IN ANY AREA OF A RECEIVER. COMPONENTS INDICATED BY A Δ IN THIS PARTS LIST AND THE SCHEMATIC DIAGRAM DESIGNATE COMPONENTS IN WHICH SAFETY CAN BE OF SPECIAL SIGNIFICANCE. IT IS PARTICULARLY RECOMMENDED THAT ONLY PARTS DESIGNATED ON THE FOLLOWING PARTS LIST BE USED FOR COMPONENT REPLACEMENT DESIGNATED BY A Δ . NO DEVIATIONS FROM RESISTANCE, WATTAGE, AND VOLTAGE RATINGS MAY BE MADE FOR REPLACEMENT ITEMS DESIGNATED BY A Δ .

Note: Schematic part location numbers may not always match with the part descriptions.
The part descriptions are correct and should be used.

CAPACITORS

NOTES:

Read description of the Capacitor as follows:

(Example)

CERAMIC 100P K 50V
└─ Rated Voltage
└─ Tolerance Symbols:
 Less than 10pF
 A : Not specified B : $\pm 0.1\text{pF}$ C : $\pm 0.25\text{pF}$
 D : $\pm 0.5\text{pF}$ E : $+0 -1\text{pF}$ F : $\pm 1\text{PF}$
 G : $\pm 2\text{pF}$ H : $+0.1 -0\text{pF}$ L : $+0 -0.1\text{pF}$
 R : $\pm 0.25 -0\text{pF}$ S : $+0 -0.25\text{pF}$
 More than 10pF
 A : Not specified B : $\pm 0.1\%$ C : $\pm 0.25\%$
 D : $\pm 0.5\%$ F : $\pm 1\%$ G : $\pm 2\%$
 H : $\pm 3\%$ J : $\pm 5\%$ K : $\pm 10\%$
 L : $\pm 15\%$ M : $\pm 20\%$ N : $\pm 30\%$
 P : $\pm 100 -0\%$ Q : $\pm 30 -10\%$ T : $\pm 50 -10\%$
 U : $\pm 75 -10\%$ V : $\pm 20 -10\%$ W : $\pm 100 -10\%$
 X : $\pm 40 -20\%$ Y : $\pm 150 -10\%$ Z : $\pm 80 -20\%$
└─ Rated value: P=pico farad, U=micro farad

Material:

CERAMIC..... Ceramic
MT-PAPER..... Metallized Paper
POLYESTER..... Polyester
MT-POLYEST.....Metallized Polyester
POLYPRO..... Polypropylene
MT-POLYPRO.... Metallized Polypropylene
COMPO FILM..... Composite Film
MT-COMPO..... Metallized Composite
STYRENE..... Styrene
TA-SOLID..... Tantalum Solid
AL-SOLID..... Aluminium Solid
ELECT..... Electrolytic
NP-ELECT..... Non-polarised Electrolytic
OS-SOLID..... Aluminium Solid with Organic
 Semiconductive Electrolytic

RESISTORS

NOTES:

Read description of the Resistor as follows:

(Example)

CARBON 4.7K J A 1/4W
└─ Rated Wattage
└─ Performance Symbols:
 A...General B...Non-flammable
 Z...Low noise
 Other... Temperature coefficient
└─ Tolerance Symbols:
 A...0.05% B...0.1% C...25%
 D...0.5% F...1% G...2%
 J...5% K...10% M...20%
 P...+5 -15%
└─ Rated Value, ohms:
 K...1,000 M...1,000,000
└─ Material:
 CARBON Carbon
 MT-FILMMetal Film
 OXIDE-MTOxide Metal Film
 SOLIDComposition
 MT-GLAZEMetal Glaze
 WIRE WOUNDWire Wound
 CERAMIC RES Ceramic
 FUSIBLE RES Fusible

Schematic Location	Part No.	Description
--------------------	----------	-------------

CAPACITORS

C001	CPXLB1C100YAJ	NP-ELECT	10U M	16V
	CPXLB1C100ZAJ	NP-ELECT	10U M	16V
C002	CK1H104ZLZFN	CERAMIC	0.1U Z	50V
C006	CEXLB1H100VDJ	ELECT	10U M	50V
C006	CEXLB1H100WAJ	ELECT	10U M	50V
C007	CEXLB1V470VDJ	ELECT	47U M	35V
	CEXLB1V470WAJ	ELECT	47U M	35V
C008	CK1H102KLZBNG	CERAMIC	1000P K	50V
C009	CK1H102KLZBNG	CERAMIC	1000P K	50V
C010	CK1H104ZLZFN	CERAMIC	0.1U Z	50V
C011	CK1H104ZLZFN	CERAMIC	0.1U Z	50V
C013	CPXLB1C100YAJ	NP-ELECT	10U M	16V
C013	CPXLB1C100ZAJ	NP-ELECT	10U M	16V
C015	CEXLB1C222VDJ	ELECT	2200U M	16V
C016	CEXLB1H100VDJ	ELECT	10U M	50V
C016	CEXLB1H100WAJ	ELECT	10U M	50V
C017	CEXLB1H100VDJ	ELECT	10U M	50V
	CEXLB1H100WAJ	ELECT	10U M	50V
C018	CK1H104ZLZFN	CERAMIC	0.1U Z	50V
C019	CK1H104ZLZFN	CERAMIC	0.1U Z	50V
⚠ C601	CGXAV27474DDN	MT-POLYEST	0.47U M	275V
⚠ C602	CGXAV27474DDN	MT-POLYEST	0.47U M	275V
C681	CK1H104ZLZFN	CERAMIC	0.1U Z	50V
C684	CK1H104ZLZFN	CERAMIC	0.1U Z	50V
C697	CK1H104ZLZFN	CERAMIC	0.1U Z	50V
C705	CK1H104ZLZFN	CERAMIC	0.1U Z	50V
C706	CK1H104ZLZFN	CERAMIC	0.1U Z	50V
C710	CK1H104ZLZFN	CERAMIC	0.1U Z	50V
C723	CK1H104ZLZFN	CERAMIC	0.1U Z	50V
C800	CK1H104ZLZFN	CERAMIC	0.1U Z	50V
C804	RGF1003JTCANL	MT-GLAZE	100K JA	1/10W
C805	CC1H220JLZCNG	CERAMIC	22P J	50V
C806	CC1H220JLZCNG	CERAMIC	22P J	50V
C807	CK1H103ZLZFN	CERAMIC	0.01U Z	50V
C811	CK1H104ZLZFN	CERAMIC	0.1U Z	50V
C813	CEXLB1V470VDJ	ELECT	47U M	35V
	CEXLB1V470WAJ	ELECT	47U M	35V
C814	CK1H222KLZBNG	CERAMIC	2200P K	50V
C815	CC1H220JLZCNG	CERAMIC	22P J	50V
C816	CC1H220JLZCNG	CERAMIC	22P J	50V
C820	CK1H103ZLZFN	CERAMIC	0.01U Z	50V
C825	CC1H470JLZCNG	CERAMIC	47P J	50V
C826	CK1H104ZLZFN	CERAMIC	0.1U Z	50V
C827	CK1H104ZLZFN	CERAMIC	0.1U Z	50V
C829	CK1H104ZLZFN	CERAMIC	0.1U Z	50V
C834	CEXLB0J221VDJ	ELECT	220U M	6.3V
	CEXLB0J221WAJ	ELECT	220U M	6.3V
C835	CK1H104ZLZFN	CERAMIC	0.1U Z	50V
C836	CC1H120JLZCNG	CERAMIC	12P J	50V
C837	CC1H120JLZCNG	CERAMIC	12P J	50V
C839	CK1H103ZLZFN	CERAMIC	0.01U Z	50V
C840	CK1H333KLZBNG	CERAMIC	0.033U K	50V
C841	CEXLB1H2R2VDJ	ELECT	2.2 U M	50V

Schematic Location	Part No.	Description
--------------------	----------	-------------

	CEXLB1H2R2WAJ	ELECT	2.2U M	50V
C842	CK1H104ZLZFN	CERAMIC	0.1U Z	50V
C1000	CK1H104ZLZFN	CERAMIC	0.1U Z	50V
C1001	CEXLB1H100VDJ	ELECT	10U M	50V
	CEXLB1H100WAJ	ELECT	10U M	50V
C1002	CEXLB1H100VDJ	ELECT	10U M	50V
	CEXLB1H100WAJ	ELECT	10U M	50V
C1003	CEXLB1H4R7VDJ	ELECT	4.7 U M	50V
	CEXLB1H4R7WAJ	ELECT	4.7U M	50V
C1004	CEXLB1H4R7VDJ	ELECT	4.7 U M	50V
	CEXLB1H4R7WAJ	ELECT	4.7U M	50V
C1011	CEXLB1H4R7VDJ	ELECT	4.7 U M	50V
	CEXLB1H4R7WAJ	ELECT	4.7U M	50V
C1012	CEXLB1H4R7VDJ	ELECT	4.7 U M	50V
	CEXLB1H4R7WAJ	ELECT	4.7U M	50V
C1013	CEXLB1H4R7VDJ	ELECT	4.7 U M	50V
	CEXLB1H4R7WAJ	ELECT	4.7U M	50V
C1014	CEXLB1H4R7VDJ	ELECT	4.7 U M	50V
	CEXLB1H4R7WAJ	ELECT	4.7U M	50V
C1015	CEXLB1H4R7VDJ	ELECT	4.7 U M	50V
	CEXLB1H4R7WAJ	ELECT	4.7U M	50V
C1016	CEXLB1H4R7VDJ	ELECT	4.7 U M	50V
	CEXLB1H4R7WAJ	ELECT	4.7U M	50V
C1017	CEXLB1H4R7VDJ	ELECT	4.7 U M	50V
	CEXLB1H4R7WAJ	ELECT	4.7U M	50V
C1201	CEXLB1V470VDJ	ELECT	47U M	35V
	CEXLB1V470WAJ	ELECT	47U M	35V
C1202	CK1H104ZLZFN	CERAMIC	0.1U Z	50V
C1205	CEXLB1V470VDJ	ELECT	47U M	35V
	CEXLB1V470WAJ	ELECT	47U M	35V
C1251	CK1H104ZLZFN	CERAMIC	0.1U Z	50V
C1600	CEXLB1E102VDJ	ELECT	1K U M	25V
C1601	CK1H104ZLZFN	CERAMIC	0.1U Z	50V
C1603	CK1A105ZLZFN	CERAMIC	1P Z	10V
C1604	CK0J475KLZBNG	CERAMIC	4.7U K	6.3V
C1606	CEXLB0J102VDJ	ELECT	1000U M	6.3V
	CEXLB0J102WAJ	ELECT	1000U M	6.3
C1610	CK1H104ZLZFN	CERAMIC	0.1U Z	50V
C1611	CK1A105ZLZFN	CERAMIC	1P Z	10V
C1613	CK1H104ZLZFN	CERAMIC	0.1U Z	50V
C1614	CEXLB0J221VDJ	ELECT	220U M	6.3V
	CEXLB0J221WAJ	ELECT	220U M	6.3V
C1615	CEXLB0J221VDJ	ELECT	220U M	6.3V
	CEXLB0J221WAJ	ELECT	220U M	6.3V
C1618	CK1A105ZLZFN	CERAMIC	1P Z	10V
C1619	CK1H104ZLZFN	CERAMIC	0.1U Z	50V
C1620	CK1H104ZLZFN	CERAMIC	0.1U Z	50V
C1623	CEXLB1H100VDJ	ELECT	10U M	50V
	CEXLB1H100WAJ	ELECT	10U M	50V
C1630	CEXLB1C101VDJ	ELECT	100U M	16V
	CEXLB1C101WAJ	ELECT	100U M	16V
C1631	CK1H104ZLZFN	CERAMIC	0.1U Z	50V
C1632	CK1H104ZLZFN	CERAMIC	0.1U Z	50V
C1633	CEXLB0J102VDJ	ELECT	1000U M	6.3V

Schematic Location	Part No.	Description
	CXLB0J102WAJ	ELECT 1000U M 6.3
C1634	CK1A105ZLZFN	CERAMIC 1P Z 10V
C1640	CXLB1C101VDJ	ELECT 100U M 16V
	CXLB1C101WAJ	ELECT 100U M 16V
C1641	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C1642	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C1643	CXLB1C101VDJ	ELECT 100U M 16V
	CXLB1C101WAJ	ELECT 100U M 16V
C1652	CXLB1E102VDJ	ELECT 1K U M 25V
C1653	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C1661	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C1662	CK1H103ZLZFN	CERAMIC 0.01U Z 50V
C1663	CC1H470JLZCNG	CERAMIC 47P J 50V
C1664	CK1H103ZLZFN	CERAMIC 0.01U Z 50V
C1676	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C1677	CXLB1C101VDJ	ELECT 100U M 16V
	CXLB1C101WAJ	ELECT 100U M 16V
C1800	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C1801	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C1903	CXLB1V470VDJ	ELECT 47U M 35V
	CXLB1V470WAJ	ELECT 47U M 35V
C1904	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C1905	CC1H470JLZCNG	CERAMIC 47P J 50V
C3200	CK1A105ZLZFN	CERAMIC 1P Z 10V
C3201	CK1A105ZLZFN	CERAMIC 1P Z 10V
C3202	CK1A105ZLZFN	CERAMIC 1P Z 10V
C3203	CK1A105ZLZFN	CERAMIC 1P Z 10V
C3204	CK1H223KLZBNG	CERAMIC 0.022U K 50V
C3205	CK1H222KLZBNG	CERAMIC 2200P K 50V
C3206	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C3208	CK1A105ZLZFN	CERAMIC 1P Z 10V
C3209	CK1A105ZLZFN	CERAMIC 1P Z 10V
C3210	CK1A105ZLZFN	CERAMIC 1P Z 10V
C3211	CK1A105ZLZFN	CERAMIC 1P Z 10V
C3212	CK1A105ZLZFN	CERAMIC 1P Z 10V
C3213	CK1A105ZLZFN	CERAMIC 1P Z 10V
C3214	CK1A105ZLZFN	CERAMIC 1P Z 10V
C3215	CK1H222KLZBNG	CERAMIC 2200P K 50V
C3216	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C3218	CK1C224KLZBNG	CERAMIC 0.22U K 16V
C3219	CK1A105ZLZFN	CERAMIC 1P Z 10V
C3220	CK1A105ZLZFN	CERAMIC 1P Z 10V
C3221	CK1A105ZLZFN	CERAMIC 1P Z 10V
C3222	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C3223	CXLB1C222VDJ	ELECT 2200U M 16V
C5503	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C5507	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C5508	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C5509	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C5510	CK1A105ZLZFN	CERAMIC 1P Z 10V
C5511	CXLB1H100VDJ	ELECT 10U M 50V
	CXLB1H100WAJ	ELECT 10U M 50V
C5512	CXLB1H100VDJ	ELECT 10U M 50V
	CXLB1H100WAJ	ELECT 10U M 50V

Schematic Location	Part No.	Description
C5513	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C5515	CC1H470JLZCNG	CERAMIC 47P J 50V
C5516	CC1H470JLZCNG	CERAMIC 47P J 50V
C5517	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C5518	CXLB1H100VDJ	ELECT 10U M 50V
	CXLB1H100WAJ	ELECT 10U M 50V
C5519	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C5520	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C5521	CXLB1H100VDJ	ELECT 10U M 50V
	CXLB1H100WAJ	ELECT 10U M 50V
C5522	CK1A105ZLZFN	CERAMIC 1P Z 10V
C5523	CK1A105ZLZFN	CERAMIC 1P Z 10V
C5529	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C5531	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C5532	CK1A105ZLZFN	CERAMIC 1P Z 10V
C5534	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C5535	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C5536	CXLB0J221VDJ	ELECT 220U M 6.3V
	CXLB0J221WAJ	ELECT 220U M 6.3V
C5539	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C5540	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C5541	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C5542	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C5543	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C5544	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C5545	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C5546	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C5547	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C5548	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C5549	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C5550	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C5551	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C5552	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C5553	CXLB1V470VDJ	ELECT 47U M 35V
	CXLB1V470WAJ	ELECT 47U M 35V
C5554	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C5555	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C5557	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C5558	CK1H102KLZBNG	CERAMIC 1000P K 50V
C5559	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C5560	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C5561	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C5562	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C5563	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C5564	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C5565	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C5566	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C5567	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C5568	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C5570	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C5572	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C5573	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C5574	CK1H104ZLZFN	CERAMIC 0.1U Z 50V
C5575	CK1A105ZLZFN	CERAMIC 1P Z 10V

Schematic Location	Part No.	Description
C5576	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C5580	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C5581	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C5582	CK0J106KGMNBNG	CERAMIC 10U Z 6.3V
C5583	CK0J106KGMNBNG	CERAMIC 10U Z 6.3V
C5701	CEXLB1V470VDJ	ELECT 47U M 35V
	CEXLB1V470WAJ	ELECT 47U M 35V
C5702	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C5703	CK0J475KLZBNG	CERAMIC 4.7U K 6.3V
C5704	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C5705	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C5706	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C5707	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C5708	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C5709	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C5721	CK0J475KLZBNG	CERAMIC 4.7U K 6.3V
C5751	CEXLB1V470VDJ	ELECT 47U M 35V
C5751	CEXLB1V470WAJ	ELECT 47U M 35V
C5752	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C5753	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C5754	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C5755	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C5801	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C5803	CC1H120JLZCNG	CERAMIC 12P J 50V
C5804	CC1H150JLZCNG	CERAMIC 15P J 50V
C5805	CC1H270JLZCNG	CERAMIC 27P J 50V
C5806	CC1H680JLZCNG	CERAMIC 68P J 50V
C5807	CK1C224KLZBNG	CERAMIC 0.22U K 16V
C5808	CK1C224KLZBNG	CERAMIC 0.22U K 16V
C5809	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C5812	CC1H120JLZCNG	CERAMIC 12P J 50V
C5813	CC1H150JLZCNG	CERAMIC 15P J 50V
C5814	CC1H270JLZCNG	CERAMIC 27P J 50V
C5815	CC1H680JLZCNG	CERAMIC 68P J 50V
C5816	CK1C224KLZBNG	CERAMIC 0.22U K 16V
C5901	CK1A474KLZBNG	CERAMIC 0.47U K 10V
C5902	CK1A474KLZBNG	CERAMIC 0.47U K 10V
C5904	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C5905	CEXLB1H100VDJ	ELECT 10U M 50V
	CEXLB1H100WAJ	ELECT 10U M 50V
C5959	CC1H120JLZCNG	CERAMIC 12P J 50V
C6051	CK1A105ZLZFNG	CERAMIC 1P Z 10V
C6052	CK1A105ZLZFNG	CERAMIC 1P Z 10V
C6053	CEXLB0J221VDJ	ELECT 220U M 6.3V
	CEXLB0J221WAJ	ELECT 220U M 6.3V
C6054	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6086	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6087	CEXLB1V470VDJ	ELECT 47U M 35V
	CEXLB1V470WAJ	ELECT 47U M 35V
C6090	CEXLB0J221VDJ	ELECT 220U M 6.3V
	CEXLB0J221WAJ	ELECT 220U M 6.3V
C6091	CK1A105ZLZFNG	CERAMIC 1P Z 10V
C6094	CK1A105ZLZFNG	CERAMIC 1P Z 10V
C6099	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V

Schematic Location	Part No.	Description
C6100	CC1H180JLZCNG	CERAMIC 18P J 50V
C6101	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6102	CC1H180JLZCNG	CERAMIC 18P J 50V
C6103	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6104	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6106	CC1H560JLZCNG	CERAMIC 56P J 50V
C6108	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6110	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6114	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6116	CK1H103ZLZFNG	CERAMIC 0.01U Z 50V
C6118	CK1A105ZLZFNG	CERAMIC 1P Z 10V
C6120	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6122	CK1A105ZLZFNG	CERAMIC 1P Z 10V
C6124	CK1H103ZLZFNG	CERAMIC 0.01U Z 50V
C6126	CEXLB0J102VDJ	ELECT 1000U M 6.3V
C6126	CEXLB0J102WAJ	ELECT 1000U M 6.3
C6128	CEXLB0J221VDJ	ELECT 220U M 6.3V
	CEXLB0J221WAJ	ELECT 220U M 6.3V
C6130	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6132	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6134	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6138	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6140	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6142	CK1A105ZLZFNG	CERAMIC 1P Z 10V
C6144	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6151	CC1H220JLZCNG	CERAMIC 22P J 50V
C6153	CC1H220JLZCNG	CERAMIC 22P J 50V
C6155	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6156	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6158	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6160	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6162	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6170	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6171	CEXLB0J221VDJ	ELECT 220U M 6.3V
	CEXLB0J221WAJ	ELECT 220U M 6.3V
C6172	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6174	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6176	CEXLB0J102VDJ	ELECT 1000U M 6.3V
C6176	CEXLB0J102WAJ	ELECT 1000U M 6.3
C6177	CEXLB1H100VDJ	ELECT 10U M 50V
	CEXLB1H100WAJ	ELECT 10U M 50V
C6178	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6180	CK1H102KLZBNG	CERAMIC 1000P K 50V
C6181	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6201	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6202	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6203	CK1H473KLZBNG	CERAMIC 0.047U K 50V
C6204	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6205	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6206	CK1H473KLZBNG	CERAMIC 0.047U K 50V
C6207	CK1H103ZLZFNG	CERAMIC 0.01U Z 50V
C6208	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6209	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6211	CK1H473KLZBNG	CERAMIC 0.047U K 50V

Schematic Location	Part No.	Description
C6212	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6213	CK1H473KLZBNG	CERAMIC 0.047U K 50V
C6214	CK1H473KLZBNG	CERAMIC 0.047U K 50V
C6215	CK1H103ZLZFNG	CERAMIC 0.01U Z 50V
C6216	CK1H473KLZBNG	CERAMIC 0.047U K 50V
C6217	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6218	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6219	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6221	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6230	CEXLB0J221VDJ	ELECT 220U M 6.3V
	CEXLB0J221WAJ	ELECT 220U M 6.3V
C6231	CC1H220JLZCNG	CERAMIC 22P J 50V
C6232	CC1H220JLZCNG	CERAMIC 22P J 50V
C6233	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6234	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6235	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6236	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6237	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6238	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6239	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6241	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6242	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6243	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6244	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6245	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6246	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6250	CEXLB1H4R7VDJ	ELECT 4.7 U M 50V
C6250	CEXLB1H4R7WAJ	ELECT 4.7U M 50V
C6251	CEXLB1H100VDJ	ELECT 10U M 50V
	CEXLB1H100WAJ	ELECT 10U M 50V
C6252	CEXLB1C101VDJ	ELECT 100U M 16V
	CEXLB1C101WAJ	ELECT 100U M 16V
C6253	CEXLB1H4R7VDJ	ELECT 4.7 U M 50V
	CEXLB1H4R7WAJ	ELECT 4.7U M 50V
C6254	CK1A474KLZBNG	CERAMIC 0.47U K 10V
C6255	CK0J475KLZBNG	CERAMIC 4.7U K 6.3V
C6256	CK1H123KLZBNG	CERAMIC 0.012U K 50V
C6257	CK1H562KLZBNG	CERAMIC 5600P K 50V
C6258	CK0J475KLZBNG	CERAMIC 4.7U K 6.3V
C6259	CK0J475KLZBNG	CERAMIC 4.7U K 6.3V
C6260	CK0J475KLZBNG	CERAMIC 4.7U K 6.3V
C6261	CK1H272KLZBNG	CERAMIC 2700P K 50V
C6262	CK1H473KLZBNG	CERAMIC 0.047U K 50V
C6263	CT1A3R3KDRANG	TA-SOLID 3.3U K 10V
C6264	CK1H472KLZBNG	CERAMIC 4700P K 50V
C6266	CK0J475KLZBNG	CERAMIC 4.7U K 6.3V
C6267	CK1A105ZLZFNG	CERAMIC 1P Z 10V
C6268	CT1A100KDRANG	TA-SOLID 10U K 10V
C6271	CEXLB1H100VDJ	ELECT 10U M 50V
	CEXLB1H100WAJ	ELECT 10U M 50V
C6272	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6273	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6274	CEXLB1H100VDJ	ELECT 10U M 50V
	CEXLB1H100WAJ	ELECT 10U M 50V

Schematic Location	Part No.	Description
C6276	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6277	CEXLB1H100VDJ	ELECT 10U M 50V
	CEXLB1H100WAJ	ELECT 10U M 50V
C6278	CK1A105ZLZFNG	CERAMIC 1P Z 10V
C6279	CK1H472KLZBNG	CERAMIC 4700P K 50V
C6281	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6282	CEXLB1H100VDJ	ELECT 10U M 50V
	CEXLB1H100WAJ	ELECT 10U M 50V
C6283	CK1A105ZLZFNG	CERAMIC 1P Z 10V
C6284	CK1H472KLZBNG	CERAMIC 4700P K 50V
C6291	CEXLB1H4R7VDJ	ELECT 4.7 U M 50V
	CEXLB1H4R7WAJ	ELECT 4.7U M 50V
C6292	CEXLB1H4R7VDJ	ELECT 4.7 U M 50V
	CEXLB1H4R7WAJ	ELECT 4.7U M 50V
C6301	CC1H471JLZCNG	CERAMIC 470P J 50V
C6302	CC1H151JLZCNG	CERAMIC 150P J 50V
C6305	CC1H151JLZCNG	CERAMIC 150P J 50V
C6306	CC1H151JLZCNG	CERAMIC 150P J 50V
C6321	CC1H471JLZCNG	CERAMIC 470P J 50V
C6322	CC1H151JLZCNG	CERAMIC 150P J 50V
C6325	CC1H151JLZCNG	CERAMIC 150P J 50V
C6326	CC1H151JLZCNG	CERAMIC 150P J 50V
C6341	CEXLB1C101VDJ	ELECT 100U M 16V
	CEXLB1C101WAJ	ELECT 100U M 16V
C6342	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6343	CC1H471JLZCNG	CERAMIC 470P J 50V
C6344	CEXLB0J221VDJ	ELECT 220U M 6.3V
	CEXLB0J221WAJ	ELECT 220U M 6.3V
C6500	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6501	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6506	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6507	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6508	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6509	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6510	CEXLB0J221VDJ	ELECT 220U M 6.3V
	CEXLB0J221WAJ	ELECT 220U M 6.3V
C6511	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6512	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6513	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6514	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6515	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6516	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6517	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6518	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6551	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6560	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6561	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6562	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6563	CK1H104ZLZFNG	CERAMIC 0.1U Z 50V
C6565	CK0J475KLZBNG	CERAMIC 4.7U K 6.3V

Schematic Location	Part No.	Description
--------------------	----------	-------------

DIODES

D801	DD1SS352----G	DIODE 1SS352-(TPH3)
	DD1SS355----G	DIODE 1SS355-TE-17
D802	DZUDZS6.2B--G	ZD UDZS-TE-176.2B
D1600	DDD1FM3-----G	DIODE D1FM3
D1602	DD1SS352----G	DIODE 1SS352-(TPH3)
	DD1SS355----G	DIODE 1SS355-TE-17
D1604	DZUDZS3.0B--G	ZD UDZS3.0B-TE-17
D1610	DZUDZS3.9B--G	ZD UDZS-TE-173.9B
D1621	DD1SS352----G	DIODE 1SS352-(TPH3)
	DD1SS355----G	DIODE 1SS355-TE-17
D1630	DDD1FH3-----G	DIODE D1FH3
D1631	DD1SS352----G	DIODE 1SS352-(TPH3)
	DD1SS355----G	DIODE 1SS355-TE-17
D1640	DD1SS352----G	DIODE 1SS352-(TPH3)
	DD1SS355----G	DIODE 1SS355-TE-17
D1651	DD1SS352----G	DIODE 1SS352-(TPH3)
	DD1SS355----G	DIODE 1SS355-TE-17
D1902	DLSLR343MC3FN	LED SLR-343MC3F
D3216	DRRB551V-30-G	DIODE RB551V-30 TE-17

INTEGRATED CIRCUITS

IC001	QLA42102-E--N	IC LA42102-E
IC801	QXXAVC883---M	IC LC874164A-XXXX
IC802	QXXAVC844---P	IC CAT24C04WI-GT3
	QXXAVC820---P	IC AT24C04N-10SU-1.8
	QXXGA0500017P	IC LE24C0411M-TLM-E-C
IC805	QTC7SH08FU--P	IC TC7SH08FU(TE85L)
IC806	QTC7SET08FU-P	IC TC7SET08FUIC1201
IC1201	QTC4052BF---P	IC TC4052BF-EL
IC1251	QCD4052BNSR-P	IC CD4052BNSR
	QTC4052BF---P	IC TC4052BF-EL
IC1600	QLA5774MPE--P	IC LA5774MP-DL-E
IC1610	QPQ070XNA1ZPP	IC PQ070XNA1ZPH
IC1630	QPQ1CZ41H2FPK	IC PQ1CZ41H2FPH
IC1640	QXXAVC692---P	IC PQ1LAX95MSPQ
IC3200	QNJW1142AV--P	IC NJW1142AV
IC5500	QXXAVC847---M	IC ZR39660BGCG-B3
IC5700	QXXAVC926---M	IC EDD2516AETA-5B-E
IC5750	QXXAAJQ0788--	IC S29GL016A90-US1D
IC5750A	QXXAVC850---M	IC S29GL016A90TFIR20
IC5900	QM51957BFP--P	IC M51957BFP
IC6050	QPQ070XNA1ZPP	IC PQ070XNA1ZPH
IC6090	QPQ070XNA1ZPP	IC PQ070XNA1ZPH
IC6100	QCAS-220----M	IC CAS-220
	QCAS-220/C--M	IC CAS-220/C
IC6130	QTC7SZ08FU--P	IC TC7SZ08FU-(TE85L)
	QTC7S08FU---P	IC TC7S08FU(TE85L)
IC6200	QXXAVC650---M	IC ISL98001CQZ-140
IC6250	QCXA2207N---P	IC CXA2207N-T6
IC6270	QXXAVC859---P	IC WM8738GED/RV
IC6300	QNJM4558M---P	IC NJM4558M-TE2
IC6301	QCD4052BNSR-P	IC CD4052BNSR
	QTC4052BF---P	IC TC4052BF-EL

Schematic Location	Part No.	Description
--------------------	----------	-------------

IC6502	QXXAVC848---J	IC TMDS341APFCR
IC6551	QXXAVC854---P	IC TC74VHC153FT(EL)
IC6590	QTC7SET08FU-P	IC TC7SET08FU
IC6591	QTC7SET08FU-P	IC TC7SET08FU
IC6592	QTC7SET08FU-P	IC TC7SET08FU

COILS

△LF601	1AV4F35B1290N	LINE FILTER
	1LB4F35B0170N	LINE FILTER
△LF602	1AV4F35B1290N	LINE FILTER
	1LB4F35B0170N	LINE FILTER
L001	1LB4L26B0740G	INDUCTOR , 220 OHM
L002	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L003	1LB4L26B0740G	INDUCTOR , 220 OHM
L1000	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L1201	1AV4L2FB3R3MG	INDUCTOR,3.3U M
L1202	1AV4L2FB3R3MG	INDUCTOR,3.3U M
L1600	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L1601	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L1603	1AV4L2WK150MN	INDUCTOR,15U M
	1LB4L26B1000N	INDUCTOR,15UH
L1604	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L1605	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L1610	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L1611	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L1612	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L1614	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L1615	1LB4L26B0740G	INDUCTOR , 220 OHM
L1616	1LB4L26B0740G	INDUCTOR , 220 OHM
L1622	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L1630	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L1631	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L1632	1LB4L26B1030N	INDUCTOR,56UH
	1AV4L2WK560MN	INDUCTOR,56U M
L1640	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L1654	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L1655	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L1670	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L1673	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L1680	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L1681	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L1682	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L1683	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L1684	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L1685	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L1692	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L1693	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L1694	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L1695	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L1696	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L1697	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L1698	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L1699	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L1700	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W

Schematic Location	Part No.	Description
L1701	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L1702	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L1703	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L1704	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L1705	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L1706	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L1707	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L1709	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L1718	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L1800	1AV4L2FB3R3MG	INDUCTOR,3.3U M
L1801	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L1802	1AV4L2FB3R3MG	INDUCTOR,3.3U M
L1803	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L1901	1AV4L2B95R6KB	INDUCTOR,5.6U K
	1AV4L2GU5R6KB	INDUCTOR,5.6U K
L2001	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L2002	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L2003	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L2004	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L2006	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L2007	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L2008	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L2009	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L2011	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L2012	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L2014	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L2015	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L2016	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L2017	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L5500	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L5501	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L5503	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L5504	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L5505	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L5506	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L5508	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L5511	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L5512	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L5515	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L5516	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L5521	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L5522	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L5523	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L5524	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L5525	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L5526	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L5545	1AV4L2WK150MN	INDUCTOR,15U M
	1LB4L26B1000N	INDUCTOR,15UH
L5553	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L5565	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L5566	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L5751	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L5800	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L5801	1AV4L2GA150JG	INDUCTOR,15U J

Schematic Location	Part No.	Description
L5802	1AV4L2GA150JG	INDUCTOR,15U J
L6050	1LB4L26B0740G	INDUCTOR , 220 OHM
L6051	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6052	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6091	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6100	1AV4L2GAR22JG	INDUCTOR,0.22U J
L6104	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6106	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6108	1LB4L26B0740G	INDUCTOR , 220 OHM
L6110	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6112	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6116	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6118	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6120	1LB4L26B0700G	INDUCTOR , 120 OHM
	1AV4L26B1940G	INDUCTOR,120 OHM
L6122	1LB4L26B0700G	INDUCTOR , 120 OHM
	1AV4L26B1940G	INDUCTOR,120 OHM
L6150	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6151	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6153	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6154	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6155	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6156	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6157	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6158	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6159	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6160	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6161	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6162	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6165	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6166	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6167	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6168	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6169	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6170	1AV4L2FB3R3MG	INDUCTOR,3.3U M
L6171	1AV4L2FB3R3MG	INDUCTOR,3.3U M
L6172	1AV4L2FB3R3MG	INDUCTOR,3.3U M
L6174	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6176	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6184	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6185	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6186	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6187	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6188	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6189	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6201	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6202	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6203	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6204	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6206	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6210	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6211	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6212	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6213	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W

Schematic Location	Part No.	Description
L6214	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6215	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6216	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6217	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6220	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6221	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6222	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6223	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6224	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6225	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6226	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6227	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6250	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6270	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6271	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6301	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6356	1LB4L26B0740G	INDUCTOR , 220 OHM
L6357	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6358	1AV4R1D30R04G	R-NETWORK 0X4 1/32W
L6359	1AV4R1D30R04G	R-NETWORK 0X4 1/32W
L6360	1AV4R1D30R04G	R-NETWORK 0X4 1/32W
L6393	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6394	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6395	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6396	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6501	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6502	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6504	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6506	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6510	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6550	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6551	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6552	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6554	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6555	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6556	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6557	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6558	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6559	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6561	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6566	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6567	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6568	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6569	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W
L6707	RGFR000ZTAANL	MT-GLAZE 0.000 ZA1/10W

TRANSISTORS

Q101	TXXLBB006---P	TR MMBTSC3928R
	T2SC2412K-R-P	TR 2SC2412K T146 R
	T2SC2412K-S-P	TR 2SC2412K T146 S
	T2SC2812-L6-P	TR 2SC2812-L6-TB
	T2SC2812-L7-P	TR 2SC2812-L7-TB
	T2SC2812N-L6P	TR 2SC2812N-L6-TB0
	T2SC3928A1R-P	TR 2SC3928A1R

Schematic Location	Part No.	Description
	T2SC3928A1S-P	TR 2SC3928A1S
Q803	TXXLBB006---P	TR MMBTSC3928R
	T2SC2412K-R-P	TR 2SC2412K T146 R
	T2SC2412K-S-P	TR 2SC2412K T146 S
	T2SC2812-L6-P	TR 2SC2812-L6-TB
	T2SC2812-L7-P	TR 2SC2812-L7-TB
	T2SC2812N-L6P	TR 2SC2812N-L6-TB0
	T2SC3928A1R-P	TR 2SC3928A1R
	T2SC3928A1S-P	TR 2SC3928A1S
Q804	TXXLBB005---P	TR MMBTSA1235F
	T2SA1037AK-RP	TR 2SA1037AK-T146-R
	T2SA1037AK-SP	TR 2SA1037AK-S-T146
	T2SA1235A1E-P	TR 2SA1235A1E
	T2SA1235A1F-P	TR 2SA1235A1F
	TISA1235AC1EP	TR ISA1235AC1E
	TISA1235AC1FP	TR ISA1235AC1F
Q805	TXXLBB006---P	TR MMBTSC3928R
	T2SC2412K-R-P	TR 2SC2412K T146 R
	T2SC2412K-S-P	TR 2SC2412K T146 S
	T2SC2812-L6-P	TR 2SC2812-L6-TB
	T2SC2812-L7-P	TR 2SC2812-L7-TB
	T2SC2812N-L6P	TR 2SC2812N-L6-TB0
	T2SC3928A1R-P	TR 2SC3928A1R
	T2SC3928A1S-P	TR 2SC3928A1S
Q1006	TXXLBB006---P	TR MMBTSC3928R
	T2SC2412K-R-P	TR 2SC2412K T146 R
	T2SC2412K-S-P	TR 2SC2412K T146 S
	T2SC2812-L6-P	TR 2SC2812-L6-TB
	T2SC2812-L7-P	TR 2SC2812-L7-TB
	T2SC2812N-L6P	TR 2SC2812N-L6-TB0
	T2SC3928A1R-P	TR 2SC3928A1R
	T2SC3928A1S-P	TR 2SC3928A1S
Q1007	TXXLBB006---P	TR MMBTSC3928R
	T2SC2412K-R-P	TR 2SC2412K T146 R
	T2SC2412K-S-P	TR 2SC2412K T146 S
	T2SC2812-L6-P	TR 2SC2812-L6-TB
	T2SC2812-L7-P	TR 2SC2812-L7-TB
	T2SC2812N-L6P	TR 2SC2812N-L6-TB0
	T2SC3928A1R-P	TR 2SC3928A1R
	T2SC3928A1S-P	TR 2SC3928A1S
Q1200	TXXLBB006---P	TR MMBTSC3928R
	T2SC2412K-R-P	TR 2SC2412K T146 R
	T2SC2412K-S-P	TR 2SC2412K T146 S
	T2SC2812-L6-P	TR 2SC2812-L6-TB
	T2SC2812-L7-P	TR 2SC2812-L7-TB
	T2SC2812N-L6P	TR 2SC2812N-L6-TB0
	T2SC3928A1R-P	TR 2SC3928A1R
	T2SC3928A1S-P	TR 2SC3928A1S
Q1201	TXXLBB006---P	TR MMBTSC3928R
	T2SC2412K-R-P	TR 2SC2412K T146 R
	T2SC2412K-S-P	TR 2SC2412K T146 S
	T2SC2812-L6-P	TR 2SC2812-L6-TB
	T2SC2812-L7-P	TR 2SC2812-L7-TB
	T2SC2812N-L6P	TR 2SC2812N-L6-TB0

Schematic Location	Part No.	Description
Q1202	T2SC3928A1R-P	TR 2SC3928A1R
	T2SC3928A1S-P	TR 2SC3928A1S
	TXXLBB006---P	TR MMBTSC3928R
	T2SC2412K-R-P	TR 2SC2412K T146 R
	T2SC2412K-S-P	TR 2SC2412K T146 S
	T2SC2812-L6-P	TR 2SC2812-L6-TB
	T2SC2812-L7-P	TR 2SC2812-L7-TB
Q1203	T2SC2812N-L6P	TR 2SC2812N-L6-TB0
	T2SC3928A1R-P	TR 2SC3928A1R
	T2SC3928A1S-P	TR 2SC3928A1S
	TXXLBB006---P	TR MMBTSC3928R
	T2SC2412K-R-P	TR 2SC2412K T146 R
	T2SC2412K-S-P	TR 2SC2412K T146 S
	T2SC2812-L6-P	TR 2SC2812-L6-TB
Q1251	T2SC2812-L7-P	TR 2SC2812-L7-TB
	T2SC2812N-L6P	TR 2SC2812N-L6-TB0
	T2SC3928A1R-P	TR 2SC3928A1R
	T2SC3928A1S-P	TR 2SC3928A1S
	TXXLBB006---P	TR MMBTSC3928R
	T2SC2412K-R-P	TR 2SC2412K T146 R
	T2SC2412K-S-P	TR 2SC2412K T146 S
Q1252	T2SC2812-L6-P	TR 2SC2812-L6-TB
	T2SC2812-L7-P	TR 2SC2812-L7-TB
	T2SC2812N-L6P	TR 2SC2812N-L6-TB0
	T2SC3928A1R-P	TR 2SC3928A1R
	T2SC3928A1S-P	TR 2SC3928A1S
	TXXLBB006---P	TR MMBTSC3928R
	T2SC2412K-R-P	TR 2SC2412K T146 R
Q1261	T2SC2412K-S-P	TR 2SC2412K T146 S
	T2SC2812-L6-P	TR 2SC2812-L6-TB
	T2SC2812-L7-P	TR 2SC2812-L7-TB
	T2SC2812N-L6P	TR 2SC2812N-L6-TB0
	T2SC3928A1R-P	TR 2SC3928A1R
	T2SC3928A1S-P	TR 2SC3928A1S
	TXXLBB006---P	TR MMBTSC3928R
Q1262	T2SC2412K-R-P	TR 2SC2412K T146 R
	T2SC2412K-S-P	TR 2SC2412K T146 S
	T2SC2812-L6-P	TR 2SC2812-L6-TB
	T2SC2812-L7-P	TR 2SC2812-L7-TB
	T2SC2812N-L6P	TR 2SC2812N-L6-TB0
	T2SC3928A1R-P	TR 2SC3928A1R
	T2SC3928A1S-P	TR 2SC3928A1S
Q1600	TXXLBB005---P	TR MMBTSA1235F
	T2SA1037AK-RP	TR 2SA1037AK-T146-R
	T2SA1037AK-SP	TR 2SA1037AK-S-T146

Schematic Location	Part No.	Description
Q1605	T2SA1235A1E-P	TR 2SA1235A1E
	T2SA1235A1F-P	TR 2SA1235A1F
	TISA1235AC1EP	TR ISA1235AC1E
	TISA1235AC1FP	TR ISA1235AC1F
	TXXLBB006---P	TR MMBTSC3928R
	T2SC2412K-R-P	TR 2SC2412K T146 R
	T2SC2412K-S-P	TR 2SC2412K T146 S
Q1606	T2SC2812-L6-P	TR 2SC2812-L6-TB
	T2SC2812-L7-P	TR 2SC2812-L7-TB
	T2SC2812N-L6P	TR 2SC2812N-L6-TB0
	T2SC3928A1R-P	TR 2SC3928A1R
	T2SC3928A1S-P	TR 2SC3928A1S
	TXXLBB006---P	TR MMBTSC3928R
	T2SC2412K-R-P	TR 2SC2412K T146 R
Q1661	T2SC2412K-S-P	TR 2SC2412K T146 S
	T2SC2812-L6-P	TR 2SC2812-L6-TB
	T2SC2812-L7-P	TR 2SC2812-L7-TB
	T2SC2812N-L6P	TR 2SC2812N-L6-TB0
	T2SC3928A1R-P	TR 2SC3928A1R
	T2SC3928A1S-P	TR 2SC3928A1S
	TXXLBB005---P	TR MMBTSA1235F
Q1800	T2SA1037AK-RP	TR 2SA1037AK-T146-R
	T2SA1037AK-SP	TR 2SA1037AK-S-T146
	T2SA1235A1E-P	TR 2SA1235A1E
	T2SA1235A1F-P	TR 2SA1235A1F
	TISA1235AC1EP	TR ISA1235AC1E
	TISA1235AC1FP	TR ISA1235AC1F
	TXXLBB006---P	TR MMBTSC3928R
Q1801	T2SC2412K-R-P	TR 2SC2412K T146 R
	T2SC2412K-S-P	TR 2SC2412K T146 S
	T2SC2812-L6-P	TR 2SC2812-L6-TB
	T2SC2812-L7-P	TR 2SC2812-L7-TB
	T2SC2812N-L6P	TR 2SC2812N-L6-TB0
	T2SC3928A1R-P	TR 2SC3928A1R
	T2SC3928A1S-P	TR 2SC3928A1S
Q1802	TXXLBB006---P	TR MMBTSC3928R
	T2SC2412K-R-P	TR 2SC2412K T146 R
	T2SC2412K-S-P	TR 2SC2412K T146 S
	T2SC2812-L6-P	TR 2SC2812-L6-TB
	T2SC2812-L7-P	TR 2SC2812-L7-TB
	T2SC2812N-L6P	TR 2SC2812N-L6-TB0
	T2SC3928A1R-P	TR 2SC3928A1R
Q1871	T2SC3928A1S-P	TR 2SC3928A1S
	TXXLBB006---P	TR MMBTSC3928R
	T2SC2412K-R-P	TR 2SC2412K T146 R

Schematic Location	Part No.	Description
Q5545	T2SC2412K-S-P	TR 2SC2412K T146 S
	T2SC2812-L6-P	TR 2SC2812-L6-TB
	T2SC2812-L7-P	TR 2SC2812-L7-TB
	T2SC2812N-L6P	TR 2SC2812N-L6-TB0
	T2SC3928A1R-P	TR 2SC3928A1R
	T2SC3928A1S-P	TR 2SC3928A1S
	TXXLBB006---P	TR MMBTSC3928R
	T2SC2412K-R-P	TR 2SC2412K T146 R
	T2SC2412K-S-P	TR 2SC2412K T146 S
	T2SC2812-L6-P	TR 2SC2812-L6-TB
Q5801	T2SC2812-L7-P	TR 2SC2812-L7-TB
	T2SC2812N-L6P	TR 2SC2812N-L6-TB0
	T2SC3928A1R-P	TR 2SC3928A1R
	T2SC3928A1S-P	TR 2SC3928A1S
	TXXLBB006---P	TR MMBTSC3928R
	T2SC2412K-R-P	TR 2SC2412K T146 R
	T2SC2412K-S-P	TR 2SC2412K T146 S
	T2SC2812-L6-P	TR 2SC2812-L6-TB
	T2SC2812-L7-P	TR 2SC2812-L7-TB
	T2SC2812N-L6P	TR 2SC2812N-L6-TB0
Q5802	T2SC3928A1R-P	TR 2SC3928A1R
	T2SC3928A1S-P	TR 2SC3928A1S
	TXXLBB005---P	TR MMBTSA1235F
	T2SA1037AK-RP	TR 2SA1037AK-T146-R
	T2SA1037AK-SP	TR 2SA1037AK-S-T146
	T2SA1235A1E-P	TR 2SA1235A1E
	T2SA1235A1F-P	TR 2SA1235A1F
	TISA1235AC1EP	TR ISA1235AC1E
	TISA1235AC1FP	TR ISA1235AC1F
	TXXLBB006---P	TR MMBTSC3928R
Q5803	T2SC2412K-R-P	TR 2SC2412K T146 R
	T2SC2412K-S-P	TR 2SC2412K T146 S
	T2SC2812-L6-P	TR 2SC2812-L6-TB
	T2SC2812-L7-P	TR 2SC2812-L7-TB
	T2SC2812N-L6P	TR 2SC2812N-L6-TB0
	T2SC3928A1R-P	TR 2SC3928A1R
	T2SC3928A1S-P	TR 2SC3928A1S
	TXXLBB005---P	TR MMBTSA1235F
	T2SA1037AK-RP	TR 2SA1037AK-T146-R
	T2SA1037AK-SP	TR 2SA1037AK-S-T146
Q5804	T2SA1235A1E-P	TR 2SA1235A1E
	T2SA1235A1F-P	TR 2SA1235A1F
	TISA1235AC1EP	TR ISA1235AC1E
	TISA1235AC1FP	TR ISA1235AC1F
	TXXLBB006---P	TR MMBTSC3928R
	T2SC2412K-R-P	TR 2SC2412K T146 R
	T2SC2412K-S-P	TR 2SC2412K T146 S
	T2SC2812-L6-P	TR 2SC2812-L6-TB
	T2SC2812-L7-P	TR 2SC2812-L7-TB
	T2SC2812N-L6P	TR 2SC2812N-L6-TB0
Q5901	T2SC3928A1R-P	TR 2SC3928A1R
	T2SC3928A1S-P	TR 2SC3928A1S
	TXXLBB006---P	TR MMBTSC3928R
	T2SC2412K-R-P	TR 2SC2412K T146 R
	T2SC2412K-S-P	TR 2SC2412K T146 S
	T2SC2812-L6-P	TR 2SC2812-L6-TB
	T2SC2812-L7-P	TR 2SC2812-L7-TB
	T2SC2812N-L6P	TR 2SC2812N-L6-TB0
	T2SC3928A1R-P	TR 2SC3928A1R
	T2SC3928A1S-P	TR 2SC3928A1S
Q5902	TXXLBB006---P	TR MMBTSC3928R
	T2SC2412K-R-P	TR 2SC2412K T146 R

Schematic Location	Part No.	Description
Q6100	T2SC2412K-S-P	TR 2SC2412K T146 S
	T2SC2812-L6-P	TR 2SC2812-L6-TB
	T2SC2812-L7-P	TR 2SC2812-L7-TB
	T2SC2812N-L6P	TR 2SC2812N-L6-TB0
	T2SC3928A1R-P	TR 2SC3928A1R
	T2SC3928A1S-P	TR 2SC3928A1S
	TXXLBB006---P	TR MMBTSC3928R
	T2SC2412K-R-P	TR 2SC2412K T146 R
	T2SC2412K-S-P	TR 2SC2412K T146 S
	T2SC2812-L6-P	TR 2SC2812-L6-TB
Q6101	T2SC2812-L7-P	TR 2SC2812-L7-TB
	T2SC2812N-L6P	TR 2SC2812N-L6-TB0
	T2SC3928A1R-P	TR 2SC3928A1R
	T2SC3928A1S-P	TR 2SC3928A1S
	TXXLBB006---P	TR MMBTSC3928R
	T2SC2412K-R-P	TR 2SC2412K T146 R
	T2SC2412K-S-P	TR 2SC2412K T146 S
	T2SC2812-L6-P	TR 2SC2812-L6-TB
	T2SC2812-L7-P	TR 2SC2812-L7-TB
	T2SC2812N-L6P	TR 2SC2812N-L6-TB0
Q6250	T2SC3928A1R-P	TR 2SC3928A1R
	T2SC3928A1S-P	TR 2SC3928A1S
	TXXLBB005---P	TR MMBTSA1235F
	T2SA1037AK-RP	TR 2SA1037AK-T146-R
	T2SA1037AK-SP	TR 2SA1037AK-S-T146
	T2SA1235A1E-P	TR 2SA1235A1E
	T2SA1235A1F-P	TR 2SA1235A1F
	TISA1235AC1EP	TR ISA1235AC1E
	TISA1235AC1FP	TR ISA1235AC1F
	TXXLBB005---P	TR MMBTSA1235F
Q6251	T2SA1037AK-RP	TR 2SA1037AK-T146-R
	T2SA1037AK-SP	TR 2SA1037AK-S-T146
	T2SA1235A1E-P	TR 2SA1235A1E
	T2SA1235A1F-P	TR 2SA1235A1F
	TISA1235AC1EP	TR ISA1235AC1E
	TISA1235AC1FP	TR ISA1235AC1F
	TXXLBB005---P	TR MMBTSA1235F
	T2SA1037AK-RP	TR 2SA1037AK-T146-R
	T2SA1037AK-SP	TR 2SA1037AK-S-T146
	T2SA1235A1E-P	TR 2SA1235A1E
Q6251	T2SA1235A1F-P	TR 2SA1235A1F
	TISA1235AC1EP	TR ISA1235AC1E
	TISA1235AC1FP	TR ISA1235AC1F
	TXXLBB005---P	TR MMBTSA1235F
	T2SA1037AK-RP	TR 2SA1037AK-T146-R
	T2SA1037AK-SP	TR 2SA1037AK-S-T146
	T2SA1235A1E-P	TR 2SA1235A1E
	T2SA1235A1F-P	TR 2SA1235A1F
	TISA1235AC1EP	TR ISA1235AC1E
	TISA1235AC1FP	TR ISA1235AC1F
RESISTORS		
R001	RGF1801JTCANL	MT-GLAZE 1.8K JA 1/10W
R002	RGF1801JTCANL	MT-GLAZE 1.8K JA 1/10W
R003	RGF1801JTCANL	MT-GLAZE 1.8K JA 1/10W
R004	RGF1801JTCANL	MT-GLAZE 1.8K JA 1/10W
R005	RGAR000ZTDANL	MT-GLAZE 0.000 ZA 1/2W
R006	RGAR000ZTDANL	MT-GLAZE 0.000 ZA 1/2W
R008	RGF1002JTCANL	MT-GLAZE 10K JA 1/10W
R014	RGB2R20JTBANL	MT-GLAZE 2.2 JA 1/4W
R015	RGB2R20JTBANL	MT-GLAZE 2.2 JA 1/4W
R016	RGB2R20JTBANL	MT-GLAZE 2.2 JA 1/4W
R017	RGB2R20JTBANL	MT-GLAZE 2.2 JA 1/4W
R802	RGF4701JTCANL	MT-GLAZE 4.7K JA 1/10W
R803	RGF4701JTCANL	MT-GLAZE 4.7K JA 1/10W
R807	RGF6801JTCANL	MT-GLAZE 6.8K JA 1/10W
R809	RGF4701JTCANL	MT-GLAZE 4.7K JA 1/10W
R811	RGF1002JTCANL	MT-GLAZE 10K JA 1/10W

Schematic Location	Part No.	Description
R812	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R814	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R815	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R816	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R817	RGF1004JTCANL	MT-GLAZE 1M JA 1/10W
R822	RGF4701JTCANL	MT-GLAZE 4.7K JA 1/10W
R823	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R828	RGF4701JTCANL	MT-GLAZE 4.7K JA 1/10W
R829	RGF4701JTCANL	MT-GLAZE 4.7K JA 1/10W
R830	RGF1002JTCANL	MT-GLAZE 10K JA 1/10W
R831	RGF4702JTCANL	MT-GLAZE 47K JA 1/10W
R832	RGF4702JTCANL	MT-GLAZE 47K JA 1/10W
R833	RGF2701JTCANL	MT-GLAZE 2.7K JA 1/10W
R834	RGF2701JTCANL	MT-GLAZE 2.7K JA 1/10W
R838	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R839	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R840	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R841	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R842	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R843	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R844	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R845	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R846	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R847	RGF4701JTCANL	MT-GLAZE 4.7K JA 1/10W
R848	RGF4701JTCANL	MT-GLAZE 4.7K JA 1/10W
R849	RGF1003JTCANL	MT-GLAZE 100K JA 1/10W
R850	RGF1003JTCANL	MT-GLAZE 100K JA 1/10W
R851	RGF1003JTCANL	MT-GLAZE 100K JA 1/10W
R854	RGF4701JTCANL	MT-GLAZE 4.7K JA 1/10W
R855	RGF4701JTCANL	MT-GLAZE 4.7K JA 1/10W
R856	RGF4701JTCANL	MT-GLAZE 4.7K JA 1/10W
R857	RGF1003JTCANL	MT-GLAZE 100K JA 1/10W
R858	RGF4701JTCANL	MT-GLAZE 4.7K JA 1/10W
R859	RGF1002JTCANL	MT-GLAZE 10K JA 1/10W
R860	RGF1002JTCANL	MT-GLAZE 10K JA 1/10W
R861	RGF1002JTCANL	MT-GLAZE 10K JA 1/10W
R862	RGF1002JTCANL	MT-GLAZE 10K JA 1/10W
R863	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R864	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R865	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R866	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R867	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R868	RGF4701JTCANL	MT-GLAZE 4.7K JA 1/10W
R873	RGF4701JTCANL	MT-GLAZE 4.7K JA 1/10W
R874	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R875	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R883	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R884	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R885	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R888	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R889	RGF1004JTCANL	MT-GLAZE 1M JA 1/10W
R890	RGF4701JTCANL	MT-GLAZE 4.7K JA 1/10W
R891	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R893	RGF4701JTCANL	MT-GLAZE 4.7K JA 1/10W

Schematic Location	Part No.	Description
R895	RGF4703JTCANL	MT-GLAZE 470K JA 1/10W
R1000	RGF47R0JTCANL	MT-GLAZE 47 JA 1/10W
R1001	RGF75R0JTCANL	MT-GLAZE 75 JA 1/10W
R1002	RGF47R0JTCANL	MT-GLAZE 47 JA 1/10W
R1003	RGF75R0JTCANL	MT-GLAZE 75 JA 1/10W
R1004	RGF2200JTCANL	MT-GLAZE 220 JA 1/10W
R1005	RGF47R0JTCANL	MT-GLAZE 47 JA 1/10W
R1006	RGF75R0JTCANL	MT-GLAZE 75 JA 1/10W
R1007	RGF2203JTCANL	MT-GLAZE 220K JA 1/10W
R1008	RGF2203JTCANL	MT-GLAZE 220K JA 1/10W
R1009	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R1010	RGF3303JTCANL	MT-GLAZE 330K JA 1/10W
R1011	RGF2203JTCANL	MT-GLAZE 220K JA 1/10W
R1012	RGF2203JTCANL	MT-GLAZE 220K JA 1/10W
R1013	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R1014	RGF3303JTCANL	MT-GLAZE 330K JA 1/10W
R1016	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R1019	RGF47R0JTCANL	MT-GLAZE 47 JA 1/10W
R1020	RGF75R0JTCANL	MT-GLAZE 75 JA 1/10W
R1025	RGF47R0JTCANL	MT-GLAZE 47 JA 1/10W
R1026	RGF75R0JTCANL	MT-GLAZE 75 JA 1/10W
R1031	RGF47R0JTCANL	MT-GLAZE 47 JA 1/10W
R1032	RGF75R0JTCANL	MT-GLAZE 75 JA 1/10W
R1037	RGF47R0JTCANL	MT-GLAZE 47 JA 1/10W
R1038	RGF75R0JTCANL	MT-GLAZE 75 JA 1/10W
R1043	RGF47R0JTCANL	MT-GLAZE 47 JA 1/10W
R1044	RGF75R0JTCANL	MT-GLAZE 75 JA 1/10W
R1049	RGF47R0JTCANL	MT-GLAZE 47 JA 1/10W
R1050	RGF75R0JTCANL	MT-GLAZE 75 JA 1/10W
R1051	RGF4700JTCANL	MT-GLAZE 470 JA 1/10W
R1052	RGF1001JTCANL	MT-GLAZE 1K JA 1/10W
R1053	RGF1003JTCANL	MT-GLAZE 100K JA 1/10W
R1054	RGF4700JTCANL	MT-GLAZE 470 JA 1/10W
R1055	RGF1001JTCANL	MT-GLAZE 1K JA 1/10W
R1056	RGF1003JTCANL	MT-GLAZE 100K JA 1/10W
R1057	RGF2203JTCANL	MT-GLAZE 220K JA 1/10W
R1058	RGF2203JTCANL	MT-GLAZE 220K JA 1/10W
R1059	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R1060	RGF3303JTCANL	MT-GLAZE 330K JA 1/10W
R1061	RGF2203JTCANL	MT-GLAZE 220K JA 1/10W
R1062	RGF2203JTCANL	MT-GLAZE 220K JA 1/10W
R1063	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R1064	RGF3303JTCANL	MT-GLAZE 330K JA 1/10W
R1065	RGF2203JTCANL	MT-GLAZE 220K JA 1/10W
R1066	RGF2203JTCANL	MT-GLAZE 220K JA 1/10W
R1067	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R1068	RGF3303JTCANL	MT-GLAZE 330K JA 1/10W
R1069	RGF2203JTCANL	MT-GLAZE 220K JA 1/10W
R1070	RGF2203JTCANL	MT-GLAZE 220K JA 1/10W
R1071	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R1072	RGF3303JTCANL	MT-GLAZE 330K JA 1/10W
R1073	RGF75R0JTCANL	MT-GLAZE 75 JA 1/10W
R1074	RGF82R0JTCANL	MT-GLAZE 82 JA 1/10W
R1075	RGF82R0JTCANL	MT-GLAZE 82 JA 1/10W

Schematic Location	Part No.	Description
R1200	RGF1001JTCANL	MT-GLAZE 1K JA 1/10W
R1201	RGF47R0JTCANL	MT-GLAZE 47 JA 1/10W
R1202	RGF1002JTCANL	MT-GLAZE 10K JA 1/10W
R1203	RGF1002JTCANL	MT-GLAZE 10K JA 1/10W
R1204	RGF1001JTCANL	MT-GLAZE 1K JA 1/10W
R1205	RGF1002JTCANL	MT-GLAZE 10K JA 1/10W
R1206	RGF1002JTCANL	MT-GLAZE 10K JA 1/10W
R1207	RGF1002JTCANL	MT-GLAZE 10K JA 1/10W
R1208	RGF1002JTCANL	MT-GLAZE 10K JA 1/10W
R1209	RGF47R0JTCANL	MT-GLAZE 47 JA 1/10W
R1210	RGF1002JTCANL	MT-GLAZE 10K JA 1/10W
R1211	RGF1002JTCANL	MT-GLAZE 10K JA 1/10W
R1212	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R1253	RGF1001JTCANL	MT-GLAZE 1K JA 1/10W
R1254	RGF1002JTCANL	MT-GLAZE 10K JA 1/10W
R1255	RGF1002JTCANL	MT-GLAZE 10K JA 1/10W
R1256	RGF1002JTCANL	MT-GLAZE 10K JA 1/10W
R1257	RGF1002JTCANL	MT-GLAZE 10K JA 1/10W
R1261	RGF1001JTCANL	MT-GLAZE 1K JA 1/10W
R1262	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R1263	RGF1001JTCANL	MT-GLAZE 1K JA 1/10W
R1264	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R1265	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R1266	RGF1001JTCANL	MT-GLAZE 1K JA 1/10W
R1267	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R1269	RGF1001JTCANL	MT-GLAZE 1K JA 1/10W
R1271	RGF1001JTCANL	MT-GLAZE 1K JA 1/10W
R1515	RGF1001JTCANL	MT-GLAZE 1K JA 1/10W
R1516	RGF1001JTCANL	MT-GLAZE 1K JA 1/10W
R1600	RGF3300FTCANL	MT-GLAZE 330 FA 1/10W
R1601	RGF1200FTCANL	MT-GLAZE 120 FA 1/10W
R1602	RGF1001FTCANL	MT-GLAZE 1K FA 1/10W
R1606	RGF1002JTCANL	MT-GLAZE 10K JA 1/10W
R1607	RGF1002JTCANL	MT-GLAZE 10K JA 1/10W
R1608	RGF1002JTCANL	MT-GLAZE 10K JA 1/10W
R1609	RGF47R0JTCANL	MT-GLAZE 47 JA 1/10W
R1610	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R1612	RGF5600FTCANL	MT-GLAZE 560 FA 1/10W
R1614	RGF4700JTCANL	MT-GLAZE 470 JA 1/10W
R1615	RGF2202JTCANL	MT-GLAZE 22K JA 1/10W
R1616	RGF1002JTCANL	MT-GLAZE 10K JA 1/10W
R1617	RGF1501FTCANL	MT-GLAZE 1.5K FA 1/10W
R1618	RGF1201FTCANL	MT-GLAZE 1.2K FA 10-Jan
R1625	RGF4702JTCANL	MT-GLAZE 47K JA 1/10W
R1626	RGF1202JTCANL	MT-GLAZE 12K JA 1/10W
R1630	RGF1501FTCANL	MT-GLAZE 1.5K FA 1/10W
R1631	RGF1501FTCANL	MT-GLAZE 1.5K FA 1/10W
R1632	RGF1001FTCANL	MT-GLAZE 1K FA 1/10W
R1640	RGF6801FTCANL	MT-GLAZE 6.8K FA 1/10W
R1641	RGF5602FTCANL	MT-GLAZE 56K FA 1/10W
R1642	RGF1002FTCANL	MT-GLAZE 10K FA 1/10W
R1649	RGF1002JTCANL	MT-GLAZE 10K JA 1/10W
R1674	RGF4701JTCANL	MT-GLAZE 4.7K JA 1/10W
R1675	RGF1001JTCANL	MT-GLAZE 1K JA 1/10W

Schematic Location	Part No.	Description
R1800	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R1802	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R1803	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R1804	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R1805	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R1806	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R1807	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R1808	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R1809	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R1817	RGF1202JTCANL	MT-GLAZE 12K JA 1/10W
R1819	RGF1002JTCANL	MT-GLAZE 10K JA 1/10W
R1820	RGF1002JTCANL	MT-GLAZE 10K JA 1/10W
R1821	RGF4701JTCANL	MT-GLAZE 4.7K JA 1/10W
R1822	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R1823	RGF4701JTCANL	MT-GLAZE 4.7K JA 1/10W
R1825	RGF4702JTCANL	MT-GLAZE 47K JA 1/10W
R1827	RGF4701JTCANL	MT-GLAZE 4.7K JA 1/10W
R1828	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R1830	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R1835	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R1838	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R1853	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R1855	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R1856	RGF4702JTCANL	MT-GLAZE 47K JA 1/10W
R1859	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R1871	RGF3300JTCANL	MT-GLAZE 330 JA 1/10W
R1872	RGF2202JTCANL	MT-GLAZE 22K JA 1/10W
R1874	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R1901	RGF1001JTCANL	MT-GLAZE 1K JA 1/10W
R1902	RGF1001JTCANL	MT-GLAZE 1K JA 1/10W
R1903	RGF1002JTCANL	MT-GLAZE 10K JA 1/10W
R1904	RGF1801JTCANL	MT-GLAZE 1.8K JA 1/10W
R1905	RGF2201JTCANL	MT-GLAZE 2.2K JA 1/10W
R1906	RGF3901JTCANL	MT-GLAZE 3.9K JA 1/10W
R1907	RGF5601JTCANL	MT-GLAZE 5.6K JA 1/10W
R1909	RGF2200JTCANL	MT-GLAZE 220 JA 1/10W
R1910	RGF2200JTCANL	MT-GLAZE 220 JA 1/10W
R1911	RGF1001JTCANL	MT-GLAZE 1K JA 1/10W
R1912	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R3200	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R3201	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R5505	RGF47R0JTCANL	MT-GLAZE 47 JA 1/10W
R5506	RGF47R0JTCANL	MT-GLAZE 47 JA 1/10W
R5507	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R5508	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R5509	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R5510	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R5513	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R5514	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R5515	RGF4701JTCANL	MT-GLAZE 4.7K JA 1/10W
R5516	RGF4701JTCANL	MT-GLAZE 4.7K JA 1/10W
R5517	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R5518	RGF1501JTCANL	MT-GLAZE 1.5K JA 1/10W
R5519	RGF1501JTCANL	MT-GLAZE 1.5K JA 1/10W

Schematic Location	Part No.	Description
R5520	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R5521	RGF47R0JTCANL	MT-GLAZE 47 JA 1/10W
R5523	RGF4701JTCANL	MT-GLAZE 4.7K JA 1/10W
R5524	RGF1002JTCANL	MT-GLAZE 10K JA 1/10W
R5525	RGF3900FTCANL	MT-GLAZE 390 FA 1/10W
R5527	RGF3302JTCANL	MT-GLAZE 33K JA 1/10W
R5528	RGF8200FTCANL	MT-GLAZE 820 FA 1/10W
R5529	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R5530	RGF3300JTCANL	MT-GLAZE 330 JA 1/10W
R5531	RGF3300JTCANL	MT-GLAZE 330 JA 1/10W
R5532	RGF1501JTCANL	MT-GLAZE 1.5K JA 1/10W
R5536	RGF3301JTCANL	MT-GLAZE 3.3K JA 1/10W
R5540	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R5542	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R5544	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R5545	RGF2201JTCANL	MT-GLAZE 2.2K JA 1/10W
R5546	RGF1002JTCANL	MT-GLAZE 10K JA 1/10W
R5547	RGF3301JTCANL	MT-GLAZE 3.3K JA 1/10W
R5548	RGF4701JTCANL	MT-GLAZE 4.7K JA 1/10W
R5549	RGF1802JTCANL	MT-GLAZE 18K JA 1/10W
R5550	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R5551	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R5552	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R5553	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R5555	RGF4701JTCANL	MT-GLAZE 4.7K JA 1/10W
R5556	RGF4701JTCANL	MT-GLAZE 4.7K JA 1/10W
R5557	RGF4701JTCANL	MT-GLAZE 4.7K JA 1/10W
R5563	RGF4701JTCANL	MT-GLAZE 4.7K JA 1/10W
R5564	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R5570	RGF4702JTCANL	MT-GLAZE 47K JA 1/10W
R5572	RGF15R0JTCANL	MT-GLAZE 15 JA 1/10W
R5573	RGF15R0JTCANL	MT-GLAZE 15 JA 1/10W
R5574	RGF15R0JTCANL	MT-GLAZE 15 JA 1/10W
R5575	RGF15R0JTCANL	MT-GLAZE 15 JA 1/10W
R5576	RGF15R0JTCANL	MT-GLAZE 15 JA 1/10W
R5577	RGF15R0JTCANL	MT-GLAZE 15 JA 1/10W
R5582	RGF15R0JTCANL	MT-GLAZE 15 JA 1/10W
R5583	RGF15R0JTCANL	MT-GLAZE 15 JA 1/10W
R5584	RGF15R0JTCANL	MT-GLAZE 15 JA 1/10W
R5585	RGF15R0JTCANL	MT-GLAZE 15 JA 1/10W
R5586	RGF1501JTCANL	MT-GLAZE 1.5K JA 1/10W
R5587	RGF1501JTCANL	MT-GLAZE 1.5K JA 1/10W
R5700	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R5701	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R5751	RGF4701JTCANL	MT-GLAZE 4.7K JA 1/10W
R5752	RGF4701JTCANL	MT-GLAZE 4.7K JA 1/10W
R5753	RGF4701JTCANL	MT-GLAZE 4.7K JA 1/10W
R5755	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R5756	RGF4701JTCANL	MT-GLAZE 4.7K JA 1/10W
R5757	RGF4701JTCANL	MT-GLAZE 4.7K JA 1/10W
R5758	RGF4701JTCANL	MT-GLAZE 4.7K JA 1/10W
R5803	RGF1001JTCANL	MT-GLAZE 1K JA 1/10W
R5804	RGF6800JTCANL	MT-GLAZE 680 JA 1/10W
R5805	RGF6800JTCANL	MT-GLAZE 680 JA 1/10W

Schematic Location	Part No.	Description
R5807	RGF6800JTCANL	MT-GLAZE 680 JA 1/10W
R5808	RGF47R0JTCANL	MT-GLAZE 47 JA 1/10W
R5809	RGF47R0JTCANL	MT-GLAZE 47 JA 1/10W
R5813	RGF1001JTCANL	MT-GLAZE 1K JA 1/10W
R5814	RGF6800JTCANL	MT-GLAZE 680 JA 1/10W
R5815	RGF6800JTCANL	MT-GLAZE 680 JA 1/10W
R5817	RGF6800JTCANL	MT-GLAZE 680 JA 1/10W
R5818	RGF47R0JTCANL	MT-GLAZE 47 JA 1/10W
R5901	RGF1202JTCANL	MT-GLAZE 12K JA 1/10W
R5902	RGF1002JTCANL	MT-GLAZE 10K JA 1/10W
R5903	RGF4702JTCANL	MT-GLAZE 47K JA 1/10W
R5904	RGF4702JTCANL	MT-GLAZE 47K JA 1/10W
R5905	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R5906	RGF1002JTCANL	MT-GLAZE 10K JA 1/10W
R5907	RGF1002JTCANL	MT-GLAZE 10K JA 1/10W
R5908	RGF2202JTCANL	MT-GLAZE 22K JA 1/10W
R5951	RGF1001JTCANL	MT-GLAZE 1K JA 1/10W
R5953	RGF1001JTCANL	MT-GLAZE 1K JA 1/10W
R5954	RGF4701JTCANL	MT-GLAZE 4.7K JA 1/10W
R5955	RGF1001JTCANL	MT-GLAZE 1K JA 1/10W
R5956	RGF1001JTCANL	MT-GLAZE 1K JA 1/10W
R5957	RGF1001JTCANL	MT-GLAZE 1K JA 1/10W
R5958	RGF1001JTCANL	MT-GLAZE 1K JA 1/10W
R5959	RGF1003JTCANL	MT-GLAZE 100K JA 1/10W
R5974	RGF1001JTCANL	MT-GLAZE 1K JA 1/10W
R5975	RGF1001JTCANL	MT-GLAZE 1K JA 1/10W
R5976	RGF1002JTCANL	MT-GLAZE 10K JA 1/10W
R6050	RGF5600FTCANL	MT-GLAZE 560 FA 1/10W
R6051	RGF1501FTCANL	MT-GLAZE 1.5K FA 1/10W
R6052	RGF1201FTCANL	MT-GLAZE 1.2K FA 10-Jan
R6053	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R6085	RGF4701FTCANL	MT-GLAZE 4.7K FA 1/10W
R6086	RGF4701FTCANL	MT-GLAZE 4.7K FA 1/10W
R6087	RGF1001FTCANL	MT-GLAZE 1K FA 1/10W
R6088	RGF1200FTCANL	MT-GLAZE 120 FA 1/10W
R6089	RGF1001FTCANL	MT-GLAZE 1K FA 1/10W
R6093	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R6100	RGF2200JTCANL	MT-GLAZE 220 JA 1/10W
R6101	RGF2201JTCANL	MT-GLAZE 2.2K JA 1/10W
R6104	RGF2202JTCANL	MT-GLAZE 22K JA 1/10W
R6106	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R6107	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R6108	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R6110	RGF1001JTCANL	MT-GLAZE 1K JA 1/10W
R6111	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R6112	RGF1004JTCANL	MT-GLAZE 1M JA 1/10W
R6113	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R6114	RGF4702JTCANL	MT-GLAZE 47K JA 1/10W
R6115	RGF4702JTCANL	MT-GLAZE 47K JA 1/10W
R6117	RGF3302JTCANL	MT-GLAZE 33K JA 1/10W
R6118	RGF1001JTCANL	MT-GLAZE 1K JA 1/10W
R6125	RGF47R0JTCANL	MT-GLAZE 47 JA 1/10W
R6126	RGF47R0JTCANL	MT-GLAZE 47 JA 1/10W
R6132	RGF4701JTCANL	MT-GLAZE 4.7K JA 1/10W


Schematic Location	Part No.	Description
R6174	RGF4702JTCANL	MT-GLAZE 47K JA 1/10W
R6176	RGF1002JTCANL	MT-GLAZE 10K JA 1/10W
R6200	RGF3302JTCANL	MT-GLAZE 33K JA 1/10W
R6201	RGF33R0JTCANL	MT-GLAZE 33 JA 1/10W
R6204	RGF33R0JTCANL	MT-GLAZE 33 JA 1/10W
R6208	RGF4700JTCANL	MT-GLAZE 470 JA 1/10W
R6209	RGF33R0JTCANL	MT-GLAZE 33 JA 1/10W
R6213	RGF33R0JTCANL	MT-GLAZE 33 JA 1/10W
R6216	RGF33R0JTCANL	MT-GLAZE 33 JA 1/10W
R6221	RGF4700JTCANL	MT-GLAZE 470 JA 1/10W
R6222	RGF33R0JTCANL	MT-GLAZE 33 JA 1/10W
R6225	RGF10R0JTCANL	MT-GLAZE 10 JA 1/10W
R6229	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R6231	RGF10R0JTCANL	MT-GLAZE 10 JA 1/10W
R6233	RGF33R0JTCANL	MT-GLAZE 33 JA 1/10W
R6235	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R6236	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R6237	RGF33R0JTCANL	MT-GLAZE 33 JA 1/10W
R6238	RGF33R0JTCANL	MT-GLAZE 33 JA 1/10W
R6240	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R6241	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R6244	RGF33R0JTCANL	MT-GLAZE 33 JA 1/10W
R6250	RGF6802FTCANL	MT-GLAZE 68K FA 1/10W
R6251	RGF1003JTCANL	MT-GLAZE 100K JA 1/10W
R6252	RGF2200JTCANL	MT-GLAZE 220 JA 1/10W
R6253	RGF2200JTCANL	MT-GLAZE 220 JA 1/10W
R6254	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R6255	RGF1004JTCANL	MT-GLAZE 1M JA 1/10W
R6257	RGF3301JTCANL	MT-GLAZE 3.3K JA 1/10W
R6258	RGF3001FTCANL	MT-GLAZE 3K FA 1/10W
R6260	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R6261	RGF3901JTCANL	MT-GLAZE 3.9K JA 1/10W
R6262	RGF3300JTCANL	MT-GLAZE 330 JA 1/10W
R6263	RGF3300JTCANL	MT-GLAZE 330 JA 1/10W
R6266	RGF2200JTCANL	MT-GLAZE 220 JA 1/10W
R6267	RGF2200JTCANL	MT-GLAZE 220 JA 1/10W
R6271	RGF47R0JTCANL	MT-GLAZE 47 JA 1/10W
R6272	RGF47R0JTCANL	MT-GLAZE 47 JA 1/10W
R6273	RGF1002JTCANL	MT-GLAZE 10K JA 1/10W
R6276	RGF6800JTCANL	MT-GLAZE 680 JA 1/10W
R6277	RGF47R0JTCANL	MT-GLAZE 47 JA 1/10W
R6278	RGF47R0JTCANL	MT-GLAZE 47 JA 1/10W
R6281	RGF1002JTCANL	MT-GLAZE 10K JA 1/10W
R6282	RGF6800JTCANL	MT-GLAZE 680 JA 1/10W
R6283	RGF2203JTCANL	MT-GLAZE 220K JA 1/10W
R6284	RGF2203JTCANL	MT-GLAZE 220K JA 1/10W
R6285	RGF2203JTCANL	MT-GLAZE 220K JA 1/10W
R6286	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R6287	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R6300	RGF2203JTCANL	MT-GLAZE 220K JA 1/10W
R6301	RGF4701FTCANL	MT-GLAZE 4.7K FA 1/10W
R6302	RGF4701FTCANL	MT-GLAZE 4.7K FA 1/10W
R6303	RGF4701FTCANL	MT-GLAZE 4.7K FA 1/10W
R6304	RGF4701FTCANL	MT-GLAZE 4.7K FA 1/10W

Schematic Location	Part No.	Description
R6305	RGF4701FTCANL	MT-GLAZE 4.7K FA 1/10W
R6306	RGF4701FTCANL	MT-GLAZE 4.7K FA 1/10W
R6309	RGF1502FTCANL	MT-GLAZE 15K FA 1/10W
R6310	RGF1502FTCANL	MT-GLAZE 15K FA 1/10W
R6311	RGF47R0JTCANL	MT-GLAZE 47 JA 1/10W
R6321	RGF4701FTCANL	MT-GLAZE 4.7K FA 1/10W
R6322	RGF4701FTCANL	MT-GLAZE 4.7K FA 1/10W
R6323	RGF4701FTCANL	MT-GLAZE 4.7K FA 1/10W
R6324	RGF4701FTCANL	MT-GLAZE 4.7K FA 1/10W
R6325	RGF4701FTCANL	MT-GLAZE 4.7K FA 1/10W
R6326	RGF4701FTCANL	MT-GLAZE 4.7K FA 1/10W
R6329	RGF1502FTCANL	MT-GLAZE 15K FA 1/10W
R6330	RGF1502FTCANL	MT-GLAZE 15K FA 1/10W
R6331	RGF47R0JTCANL	MT-GLAZE 47 JA 1/10W
R6341	RGF6800JTCANL	MT-GLAZE 680 JA 1/10W
R6342	RGF6800JTCANL	MT-GLAZE 680 JA 1/10W
R6357	RGF2701JTCANL	MT-GLAZE 2.7K JA 1/10W
R6373	RGF2701JTCANL	MT-GLAZE 2.7K JA 1/10W
R6375	RGF2701JTCANL	MT-GLAZE 2.7K JA 1/10W
R6377	RGF2701JTCANL	MT-GLAZE 2.7K JA 1/10W
R6500	RGF47R0JTCANL	MT-GLAZE 47 JA 1/10W
R6501	RGF47R0JTCANL	MT-GLAZE 47 JA 1/10W
R6502	RGF5R60JTCANL	MT-GLAZE 5.6 JA 1/10W
R6503	RGF5R60JTCANL	MT-GLAZE 5.6 JA 1/10W
R6504	RGF5R60JTCANL	MT-GLAZE 5.6 JA 1/10W
R6505	RGF5R60JTCANL	MT-GLAZE 5.6 JA 1/10W
R6506	RGF5R60JTCANL	MT-GLAZE 5.6 JA 1/10W
R6507	RGF5R60JTCANL	MT-GLAZE 5.6 JA 1/10W
R6508	RGF5R60JTCANL	MT-GLAZE 5.6 JA 1/10W
R6509	RGF5R60JTCANL	MT-GLAZE 5.6 JA 1/10W
R6510	RGF47R0JTCANL	MT-GLAZE 47 JA 1/10W
R6511	RGF47R0JTCANL	MT-GLAZE 47 JA 1/10W
R6512	RGF5R60JTCANL	MT-GLAZE 5.6 JA 1/10W
R6513	RGF5R60JTCANL	MT-GLAZE 5.6 JA 1/10W
R6514	RGF5R60JTCANL	MT-GLAZE 5.6 JA 1/10W
R6515	RGF5R60JTCANL	MT-GLAZE 5.6 JA 1/10W
R6516	RGF5R60JTCANL	MT-GLAZE 5.6 JA 1/10W
R6517	RGF5R60JTCANL	MT-GLAZE 5.6 JA 1/10W
R6518	RGF5R60JTCANL	MT-GLAZE 5.6 JA 1/10W
R6519	RGF5R60JTCANL	MT-GLAZE 5.6 JA 1/10W
R6520	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R6523	RGF4701JTCANL	MT-GLAZE 4.7K JA 1/10W
R6525	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R6526	RGF4701FTCANL	MT-GLAZE 4.7K FA 1/10W
R6527	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R6531	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R6532	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R6533	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R6534	RGF4701JTCANL	MT-GLAZE 4.7K JA 1/10W
R6535	RGF4701JTCANL	MT-GLAZE 4.7K JA 1/10W
R6536	RGF4701JTCANL	MT-GLAZE 4.7K JA 1/10W
R6547	RGF4702JTCANL	MT-GLAZE 47K JA 1/10W
R6548	RGF4702JTCANL	MT-GLAZE 47K JA 1/10W
R6550	RGF4702JTCANL	MT-GLAZE 47K JA 1/10W

Schematic Location	Part No.	Description
R6551	RGF4702JTCANL	MT-GLAZE 47K JA 1/10W
R6552	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R6553	RGF1001JTCANL	MT-GLAZE 1K JA 1/10W
R6554	RGF1001JTCANL	MT-GLAZE 1K JA 1/10W
R6556	RGF1001JTCANL	MT-GLAZE 1K JA 1/10W
R6557	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R6558	RGF1000JTCANL	MT-GLAZE 100 JA 1/10W
R6559	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R6560	RGF4702JTCANL	MT-GLAZE 47K JA 1/10W
R6561	RGF47R0JTCANL	MT-GLAZE 47 JA 1/10W
R6562	RGF47R0JTCANL	MT-GLAZE 47 JA 1/10W
R6563	RGF5R60JTCANL	MT-GLAZE 5.6 JA 1/10W
R6564	RGF5R60JTCANL	MT-GLAZE 5.6 JA 1/10W
R6565	RGF5R60JTCANL	MT-GLAZE 5.6 JA 1/10W
R6566	RGF5R60JTCANL	MT-GLAZE 5.6 JA 1/10W
R6567	RGF5R60JTCANL	MT-GLAZE 5.6 JA 1/10W
R6568	RGF5R60JTCANL	MT-GLAZE 5.6 JA 1/10W
R6569	RGF5R60JTCANL	MT-GLAZE 5.6 JA 1/10W
R6570	RGF5R60JTCANL	MT-GLAZE 5.6 JA 1/10W
R6571	RGF4702JTCANL	MT-GLAZE 47K JA 1/10W
R6573	RGF1001JTCANL	MT-GLAZE 1K JA 1/10W
R6574	RGF1002JTCANL	MT-GLAZE 10K JA 1/10W
R6575	RGF1002JTCANL	MT-GLAZE 10K JA 1/10W
R6577	RGF1001JTCANL	MT-GLAZE 1K JA 1/10W
R6578	RGF1001JTCANL	MT-GLAZE 1K JA 1/10W
R6579	RGF1001JTCANL	MT-GLAZE 1K JA 1/10W
R6580	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R6581	RGF1001JTCANL	MT-GLAZE 1K JA 1/10W
R6582	RGF1002JTCANL	MT-GLAZE 10K JA 1/10W
R6583	RGF1002JTCANL	MT-GLAZE 10K JA 1/10W
R6584	RGF1001JTCANL	MT-GLAZE 1K JA 1/10W
R6585	RGF1002JTCANL	MT-GLAZE 10K JA 1/10W
R6586	RGF1002JTCANL	MT-GLAZE 10K JA 1/10W
R6591	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R6593	RGF47R0JTCANL	MT-GLAZE 47 JA 1/10W
R6594	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R6596	RGF47R0JTCANL	MT-GLAZE 47 JA 1/10W
R6597	RGFR000ZTCANL	MT-GLAZE 0.000 ZA 1/10W
R6599	RGF47R0JTCANL	MT-GLAZE 47 JA 1/10W

Schematic Location	Part No.	Description
SWITCHES		
SW1901	1AV4S10B5650J	SWITCH, PUSH
	1AV4S10B0900J	SWITCH, PUSH
SW1902	1AV4S10B5650J	SWITCH, PUSH
	1AV4S10B0900J	SWITCH, PUSH
SW1903	1AV4S10B5650J	SWITCH, PUSH
	1AV4S10B0900J	SWITCH, PUSH
SW1904	1AV4S10B5650J	SWITCH, PUSH
	1AV4S10B0900J	SWITCH, PUSH
SW1905	1AV4S10B5650J	SWITCH, PUSH
	1AV4S10B0900J	SWITCH, PUSH
CRYSTAL / FILTERS		
X801	1AV4V10B0560N	OSC, CRYSTAL 32.768KHZ
X6101	1AV4V10B8280G	OSC, CRYSTAL 25.000MHZ
X6200	1AV4F31B0540J	CERAMIC FILTER 4.5MHZ
X6201	1AV4V10B7390G	OSC, CRYSTAL 24.576MHZ
MISCELLANEOUS		
A1902	1AV4U20B99401	UNIT, REMOCON RECEIVER
⚠A6100	1AV4F1ZAZ0010	TUNER, USA/IF/DIGI-ANALOG
⚠EL901	1AV4T44B02400	PDP MODULE 50
⚠F601A	1AV4J20B0040N	HOLDER, FUSE
⚠F601B	1AV4J20B0040N	HOLDER, FUSE
⚠K601	1AV4U20B61300	UNIT, NOISE FILTER
K1000	1LB4J12B11900	JACK, PHONE D3.6
K1003	1LB4J31B01101	TERMINAL, BOARD
K1004	1LB4J12B11700	JACK, RCA-9
K1005	1LB4J12B11600	JACK, RCA-6
K6500	1AV4J11B8590G	SOCKET, IF(HDMI) 19P
K6501	1AV4J11B8590G	SOCKET, IF(HDMI) 19P
K6502	1AV4J11B8590G	SOCKET, IF(HDMI) 19P
PB001	1AA4B10N20000	PWB, MAIN, N4PE
PB002	1AA4B10N20200	PWB, CONTROL, N4SE X26
PB003	1AA4B10N20100	PWB, SUB_P&FLT J4CE X2
SPL	SPEAKER L	1LB4A10B08700SPEAKER, 8
SPR	SPEAKER R	1LB4A10B08700SPEAKER, 8
⚠VA601	DVXAVB007---N	VARISTOR ENE471D-14A-S6

CABINET PARTS LIST

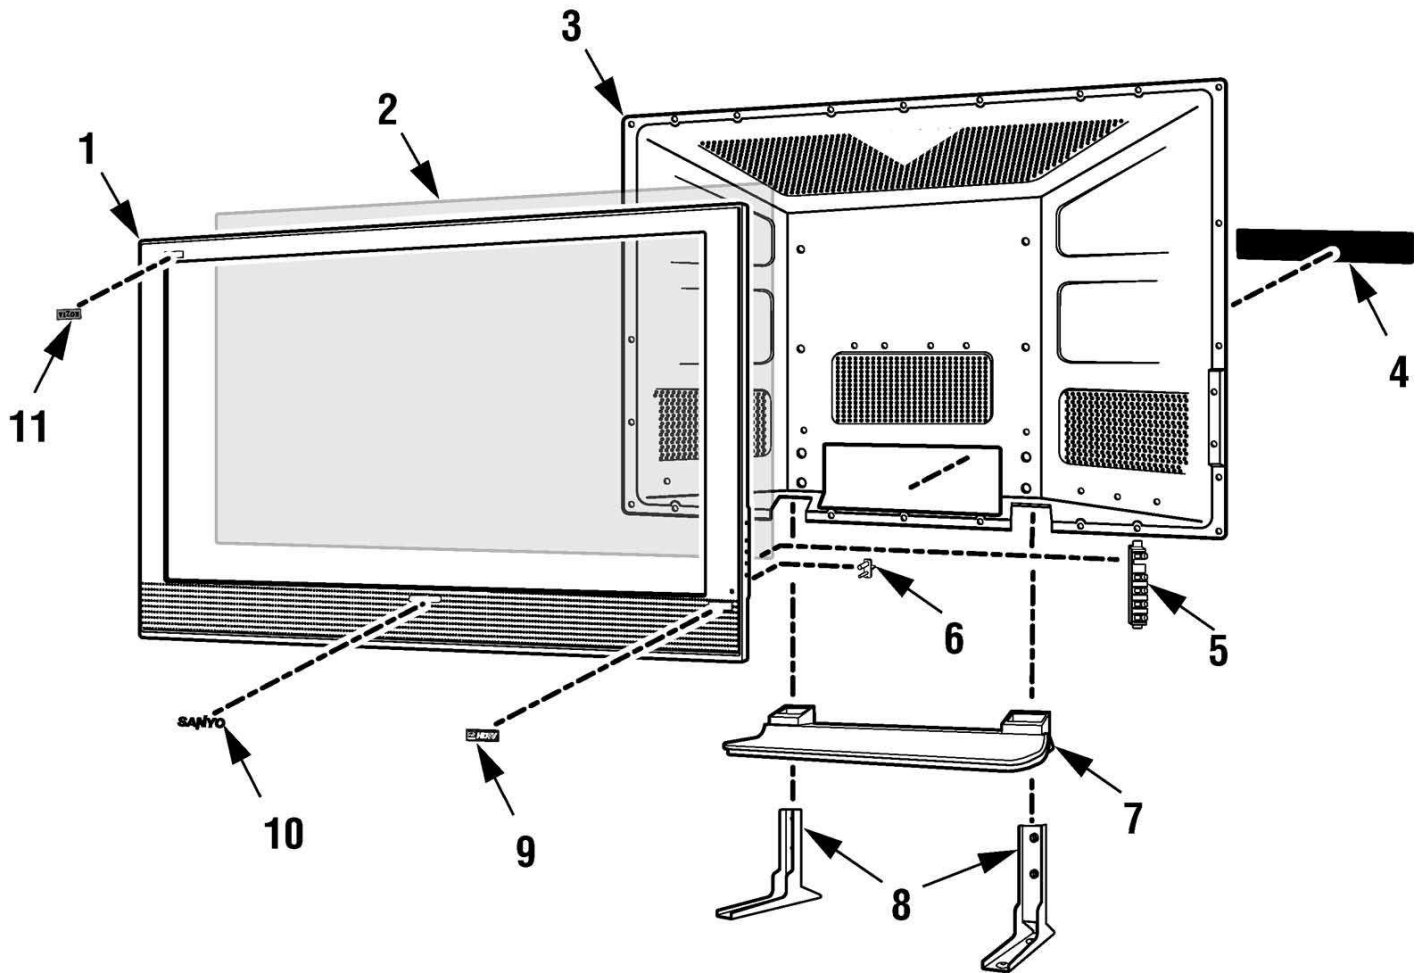


CABINET PARTS LIST


KEY NO.	PARTS NO.	DESCRIPTION
1	1AA2CAM0589A-	50 CABINET FRONT
2	A1AV4Z12B51800	OPTICAL FILTER PDP
3	1AA2CBF0025--	50W CABINET BACK
4	1AA2DES0916-F	DEC SHEET AV
5	1AA2BUM0529--	UNITED BUTTON
6	1AA2DEM0444--	DEC IND
7	1AA2SDM0173--	50 STAND COVER
8	1AA2SDF0047--	STAND BASE
9	1AA2DES0917-G	DEC SHEET HDTV
10	1AV2BAAS015AA	BADGE,SANYO*53.5X12L53.5
11	1AA2DES0712-F	DEC SHEET VIZON

ACCESSORY PARTS LIST


KEY NO.	PARTS NO.	DESCRIPTION
	1JC6P1P0257B-	OWNERS MANUAL DP50747
	1AV0U10B43105	ASSY, REMOCON GXBJ
	1JC4D2BT0001-	BATTERY ENELOOP AAA
△W901	1AV4W11B29300	POWER CORD 3.0 OMK

MAIN BOARD PARTS SIDE

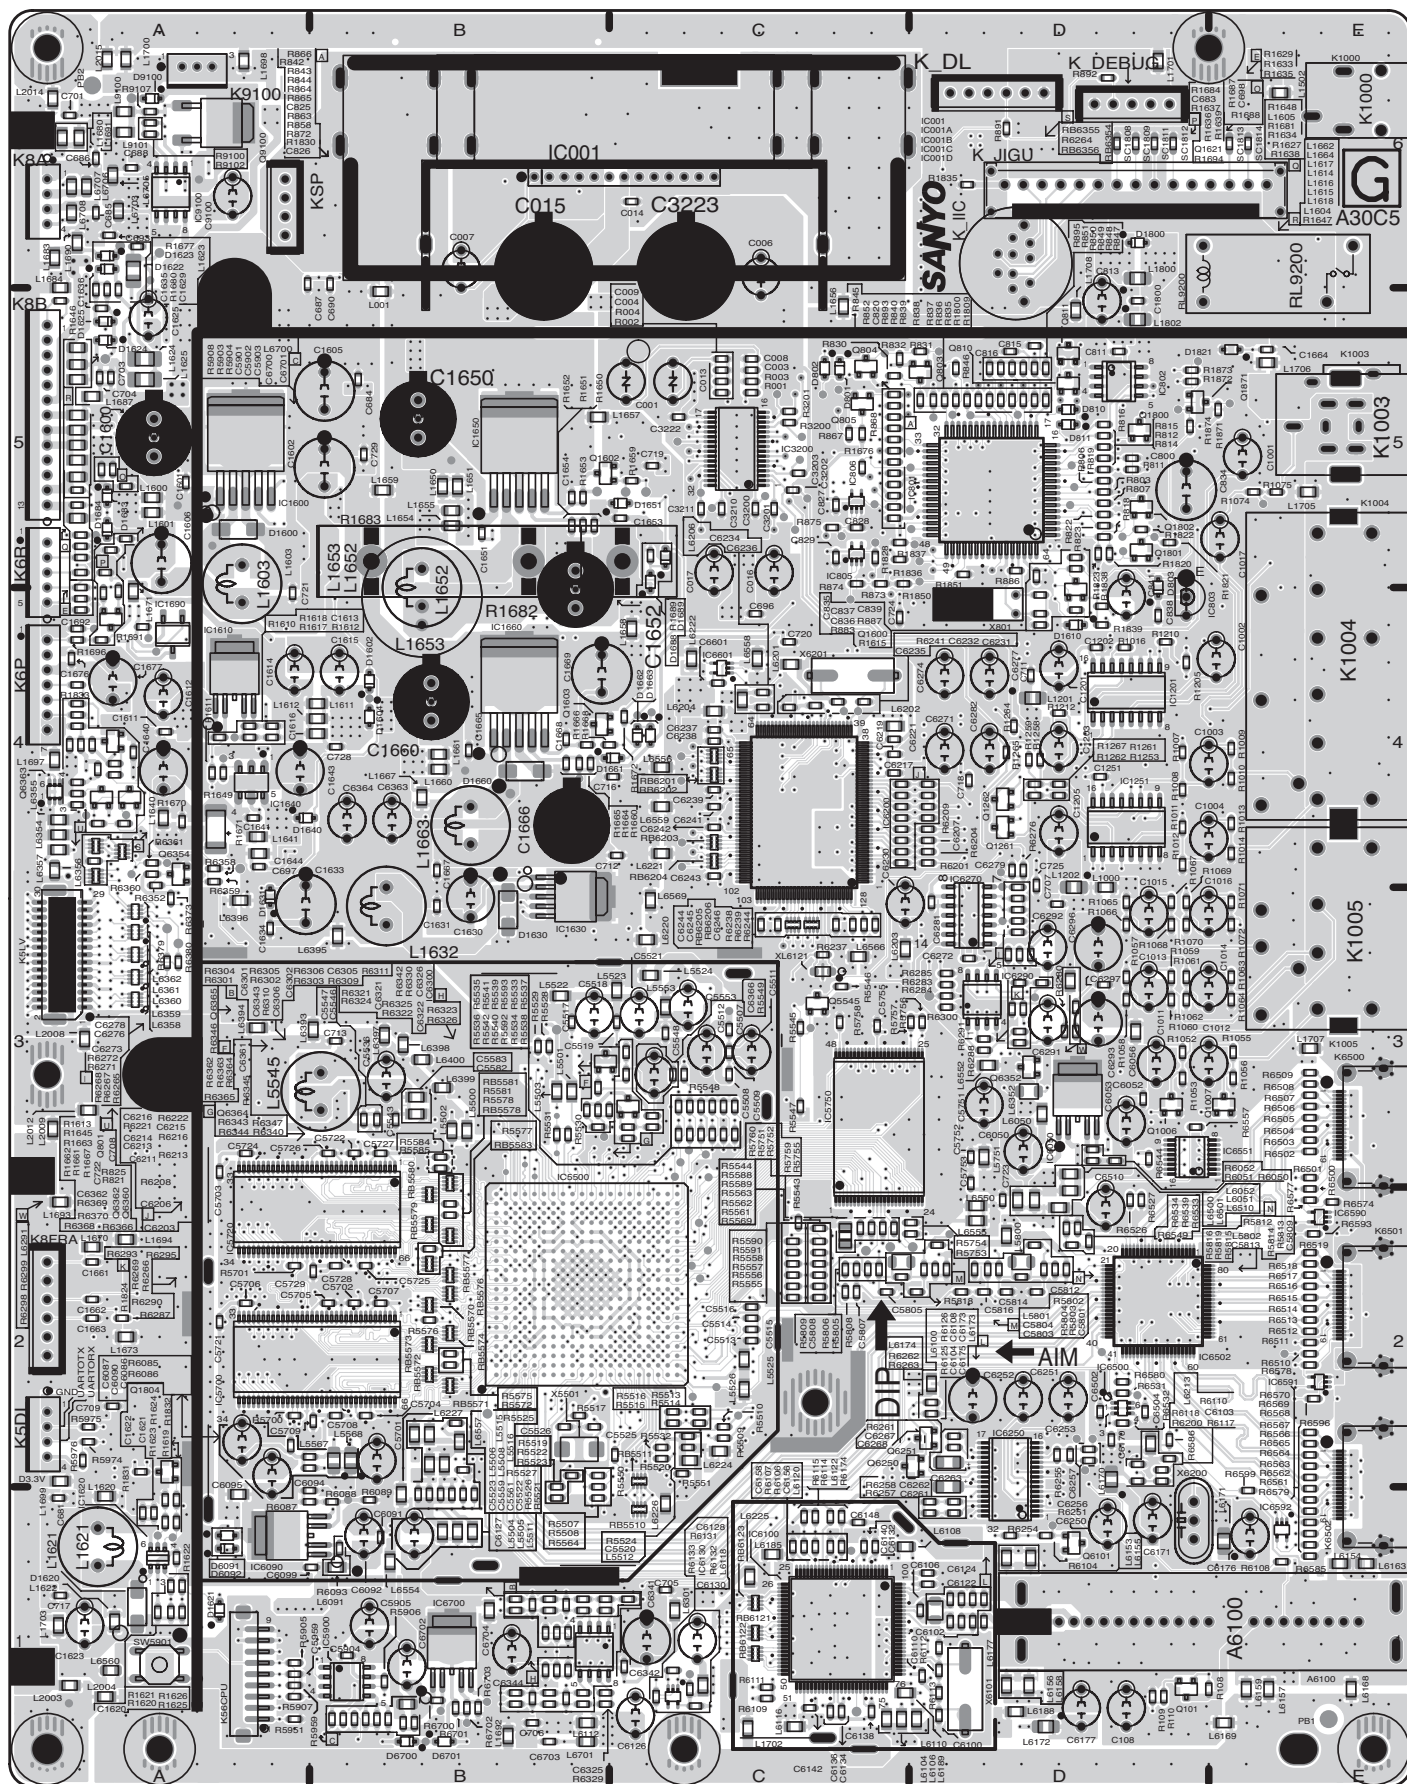

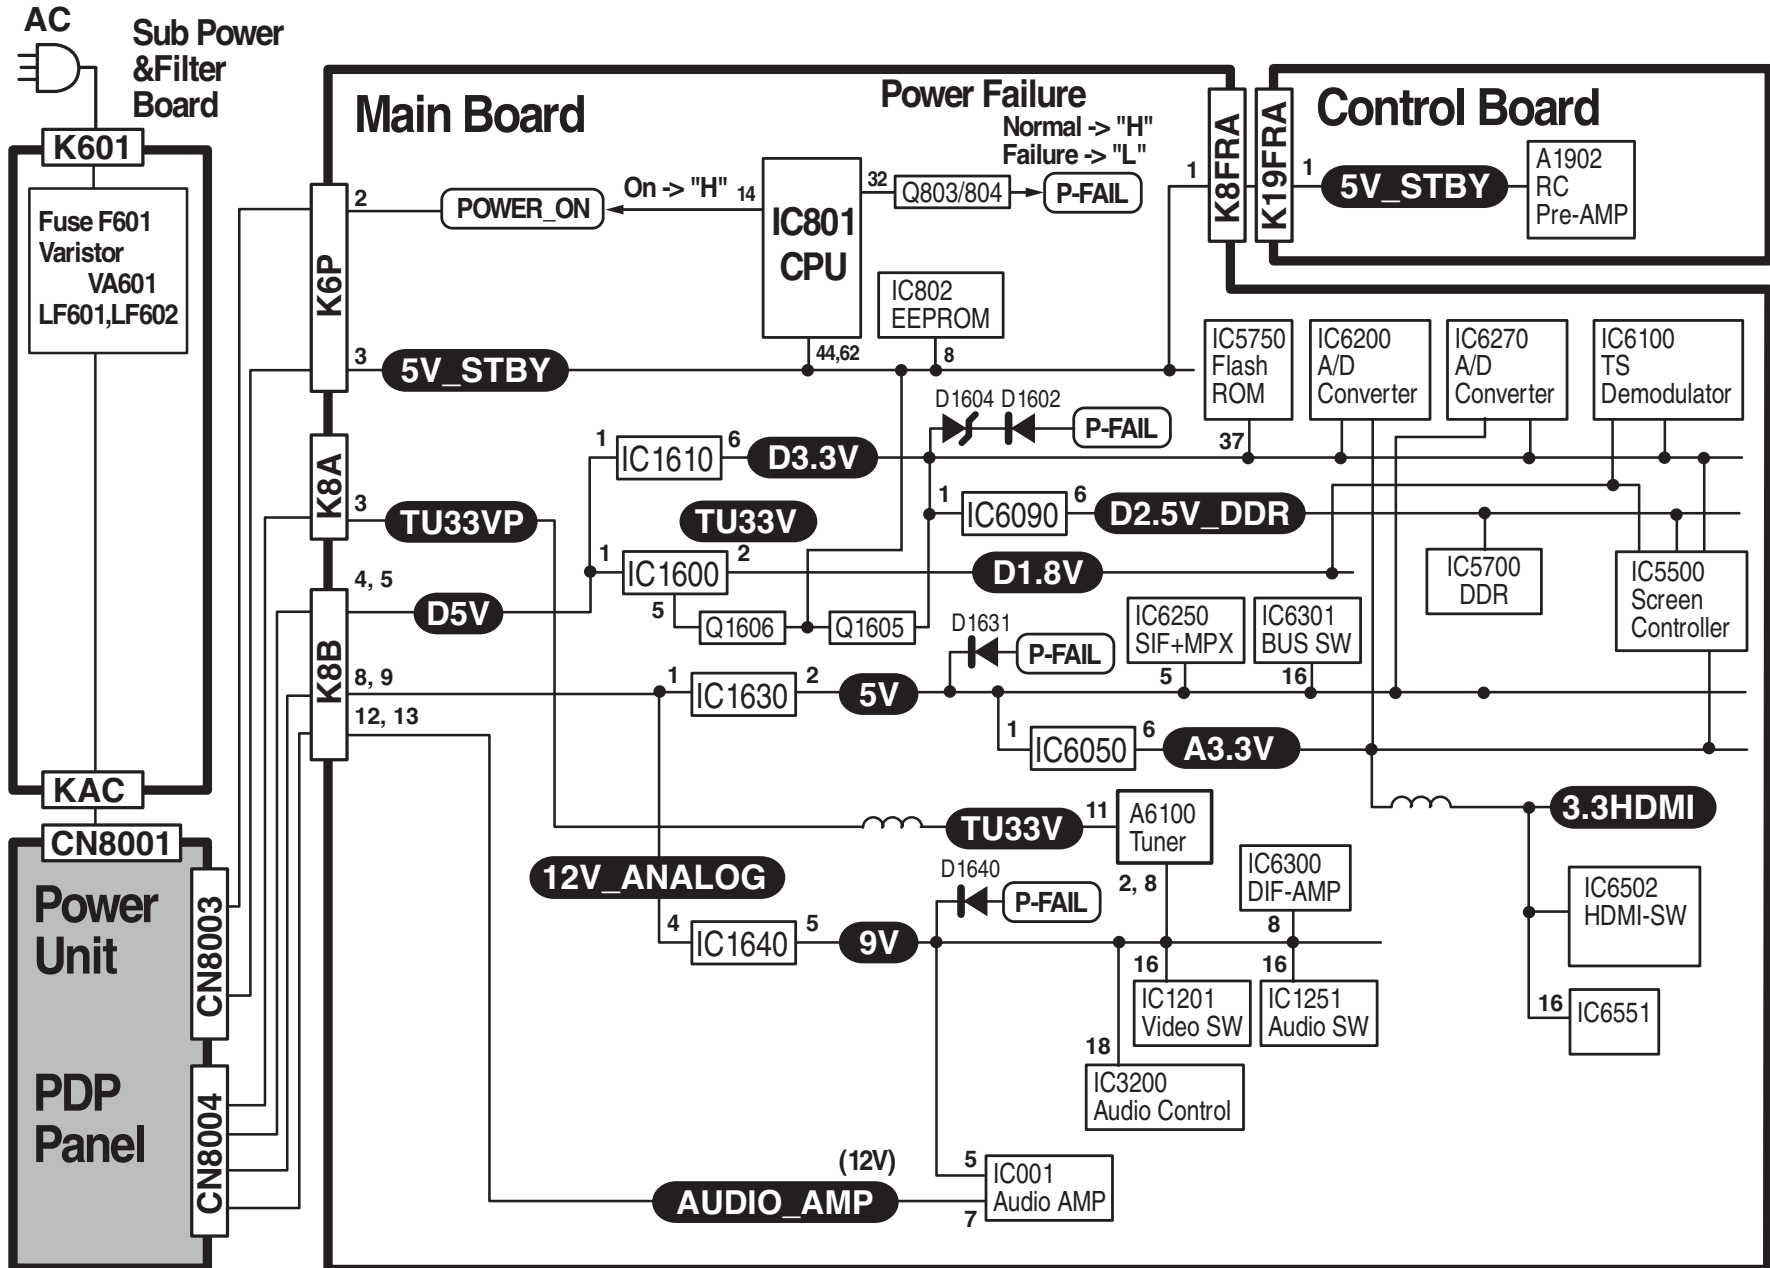


BLOCK DIAGRAM POWER LINES

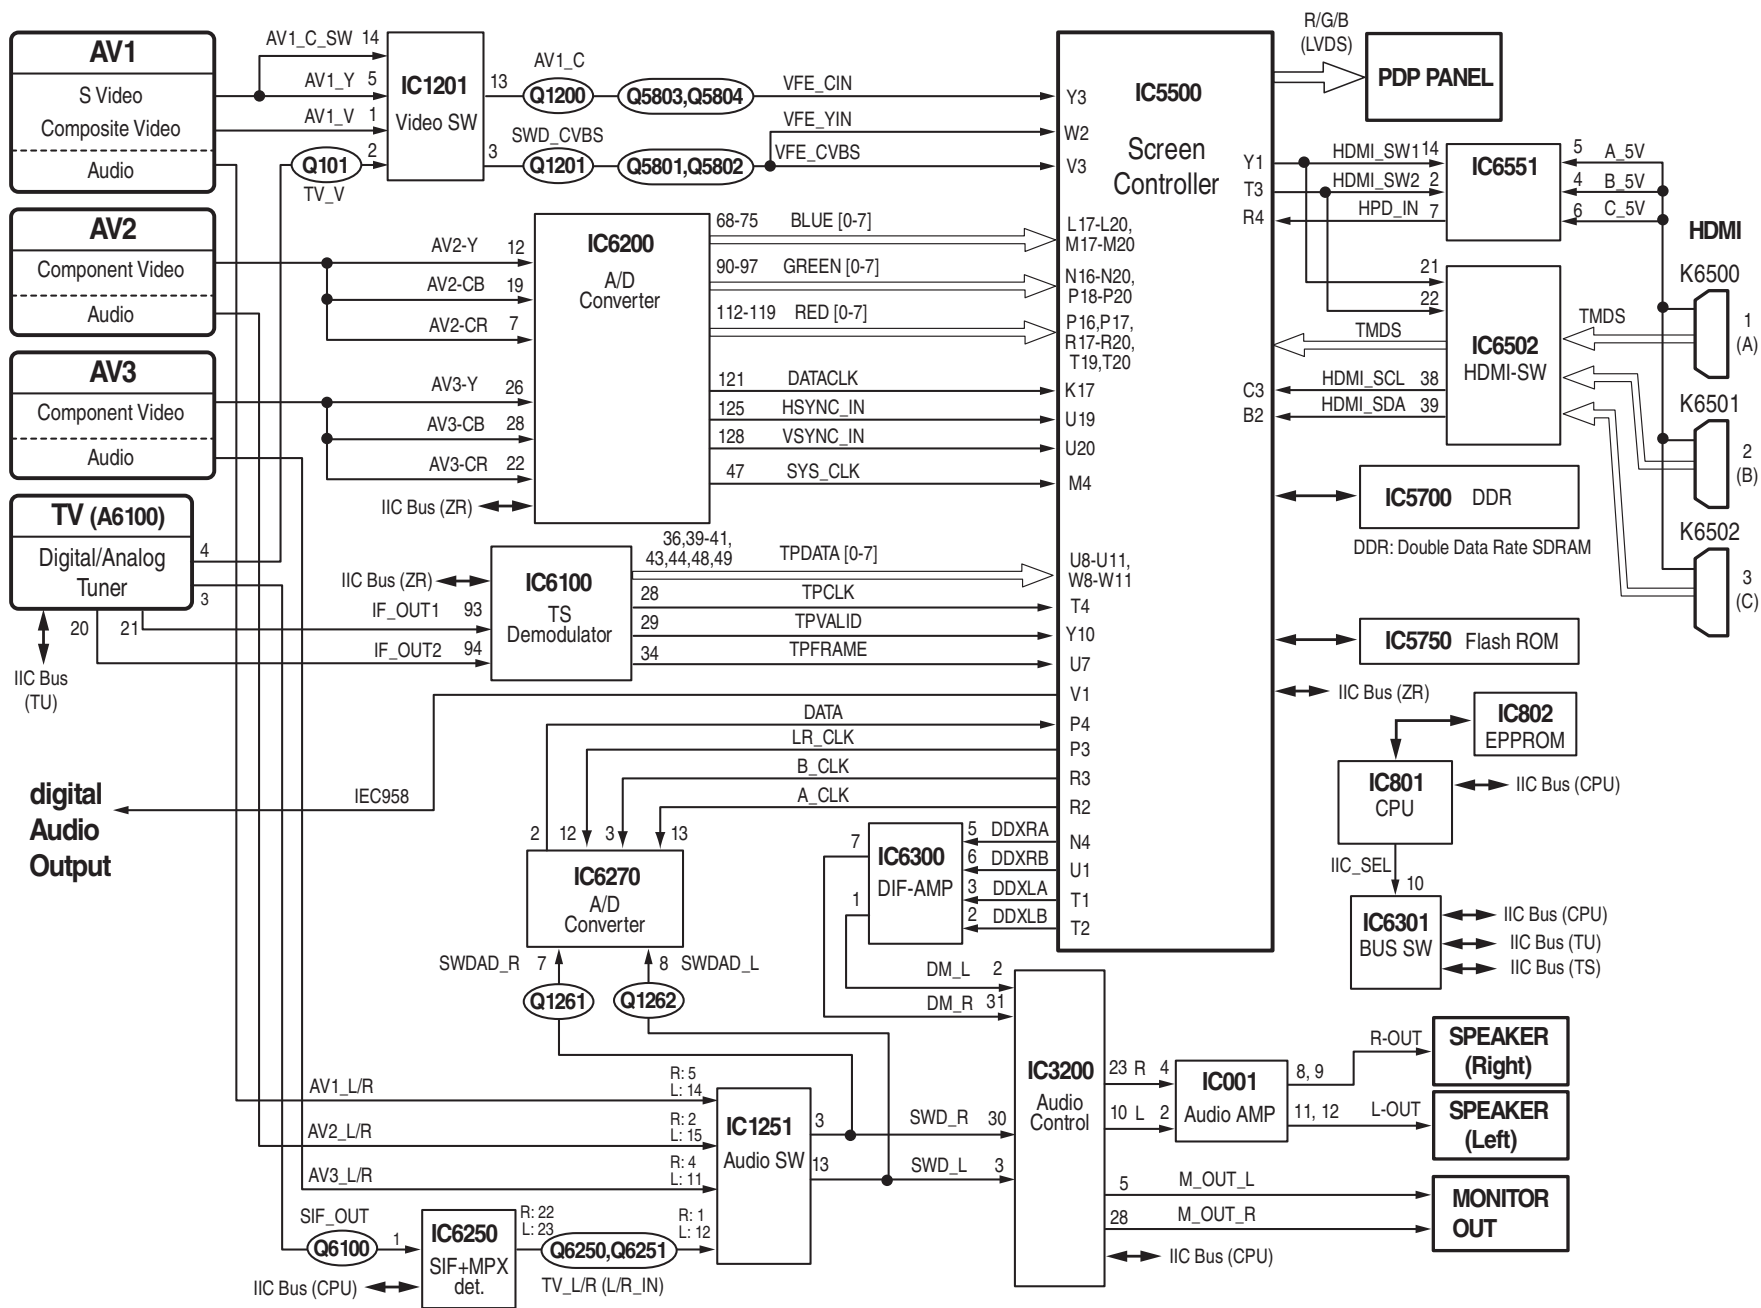


BLOCK DIAGRAM SIGNAL LINES

IC BLOCK DIAGRAMS

IC001, Audio AMP

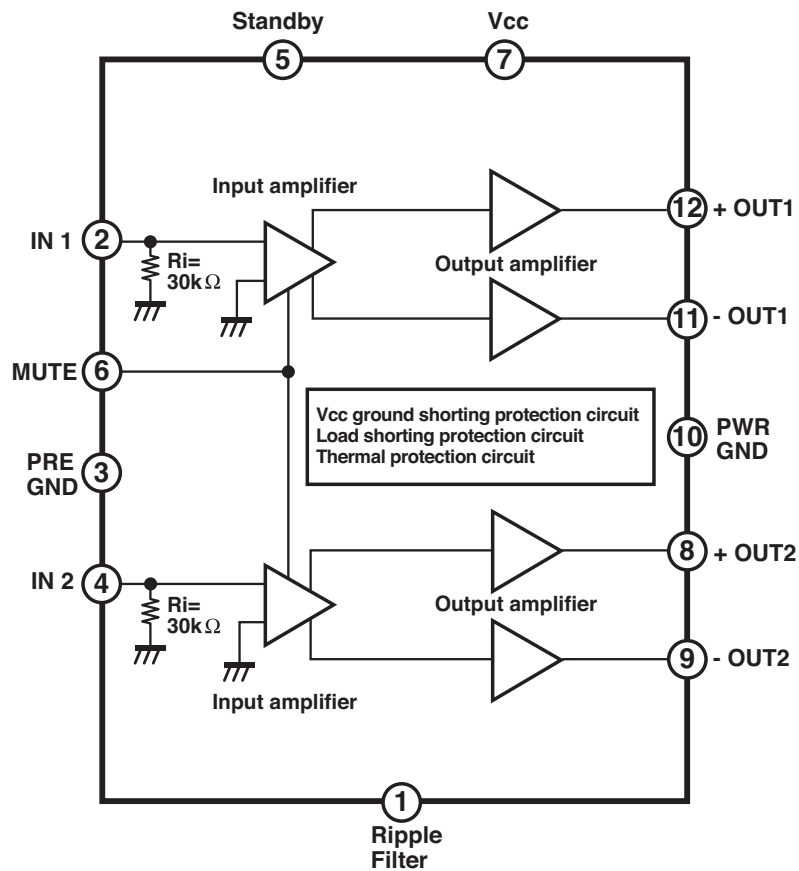


IC1201, IC1251 Video and Audio Select

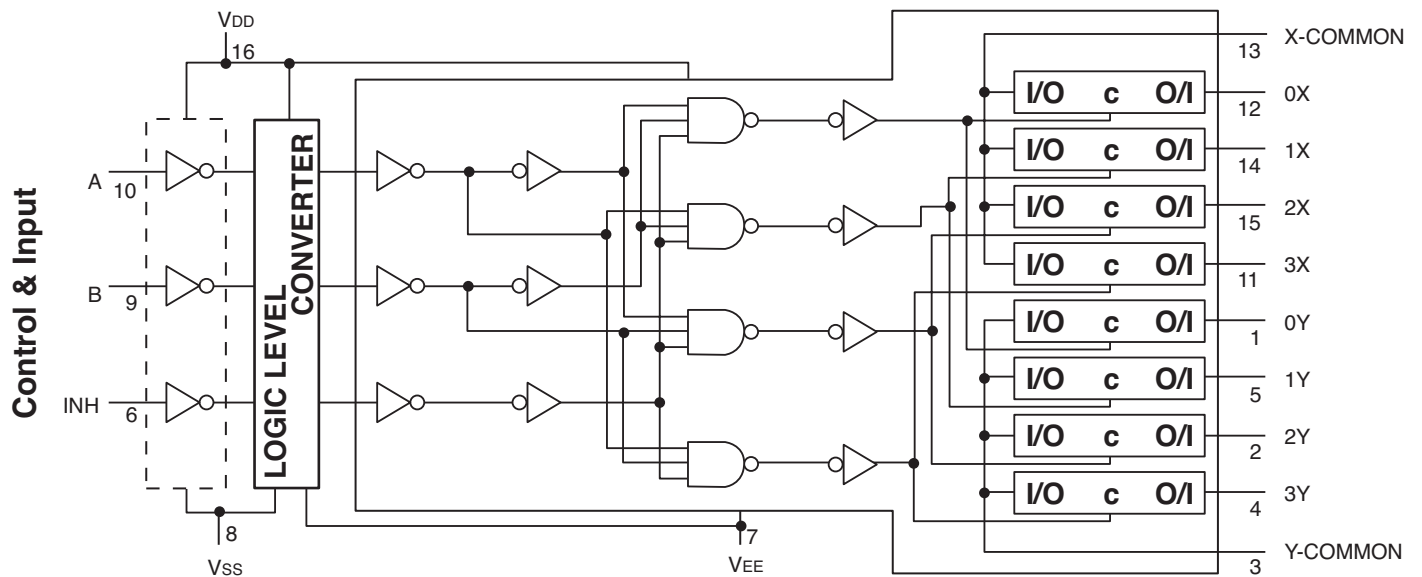


IC BLOCK DIAGRAMS (CONT.)


IC1600, DC to DC Converter

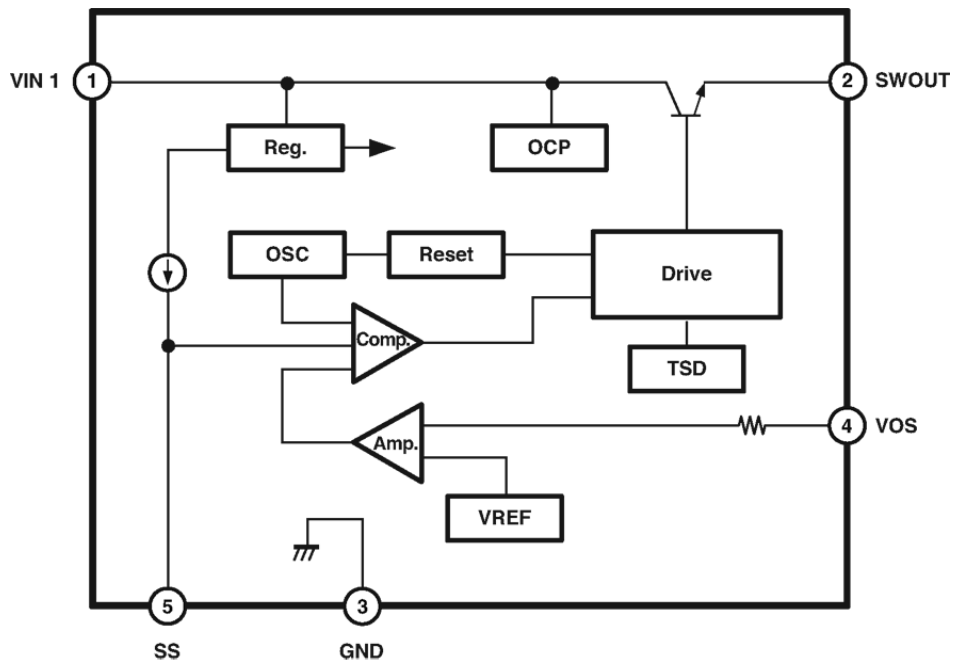


IC1620, DC to DC Converter

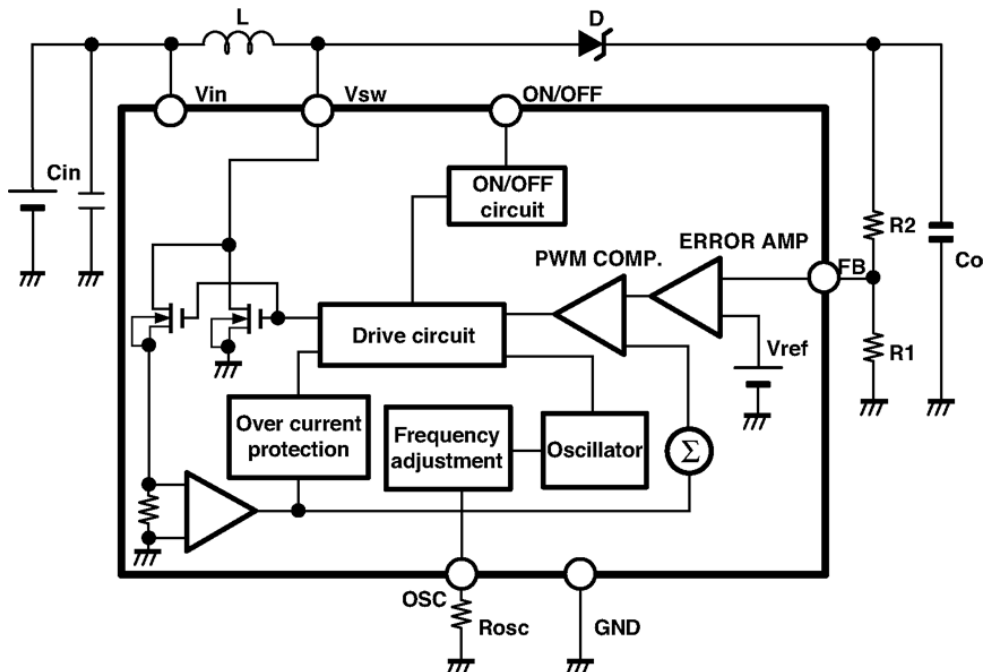

IC1630, DC to DC Converter

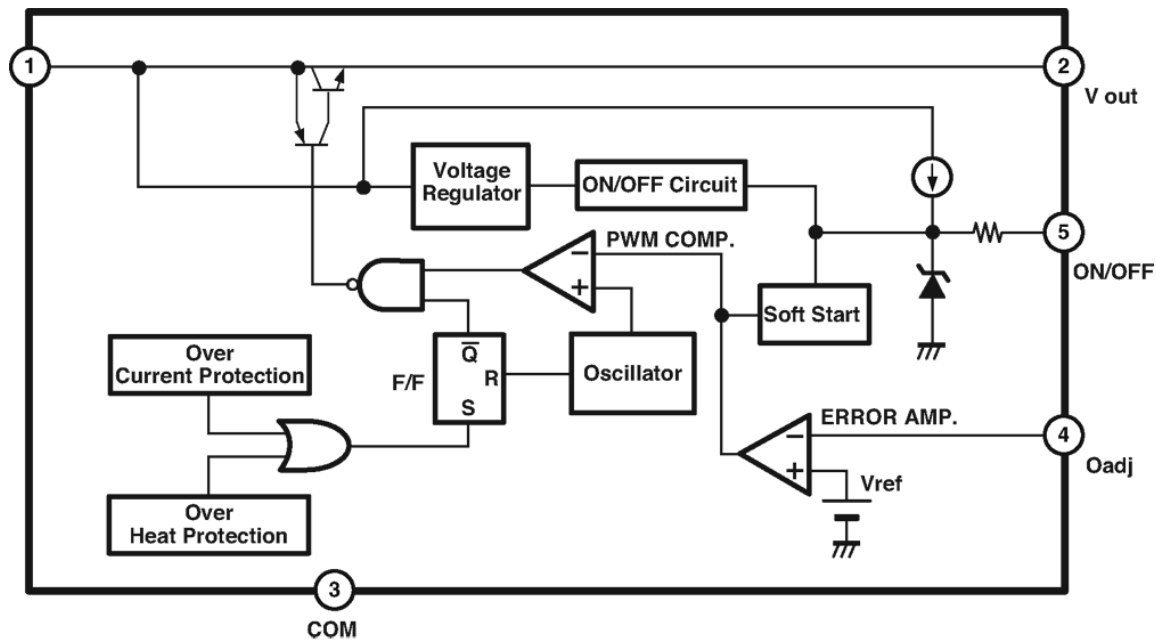


IC1640, DC to DC Converter

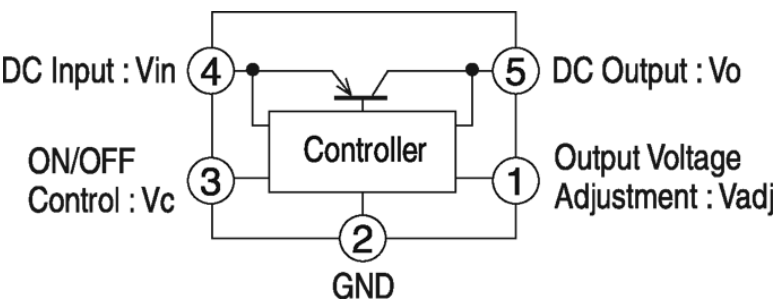


IC BLOCK DIAGRAMS (CONT.)

IC5500 Screen Controller

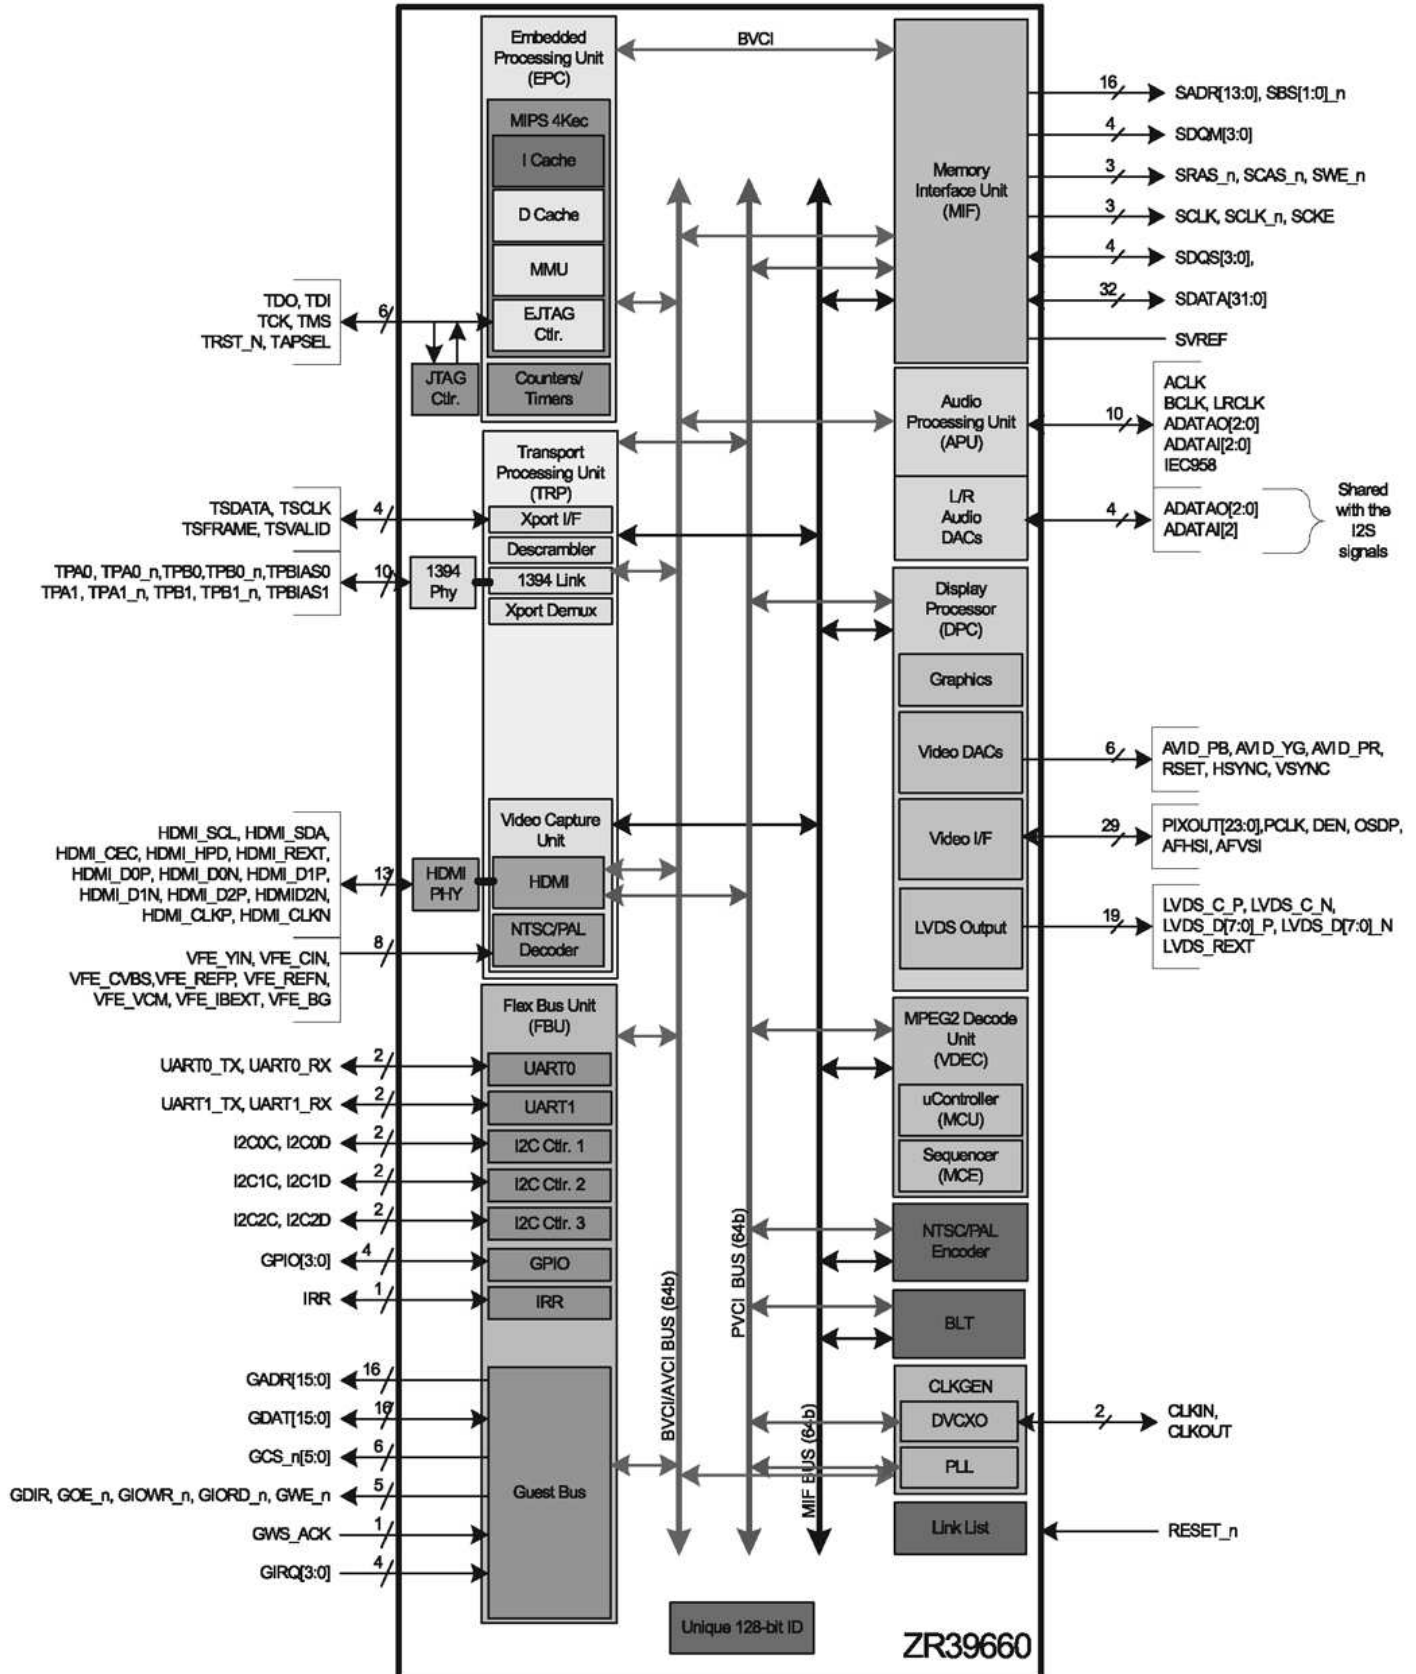


IC5700, IC5720 DDR: Double Data Rate SDRAM

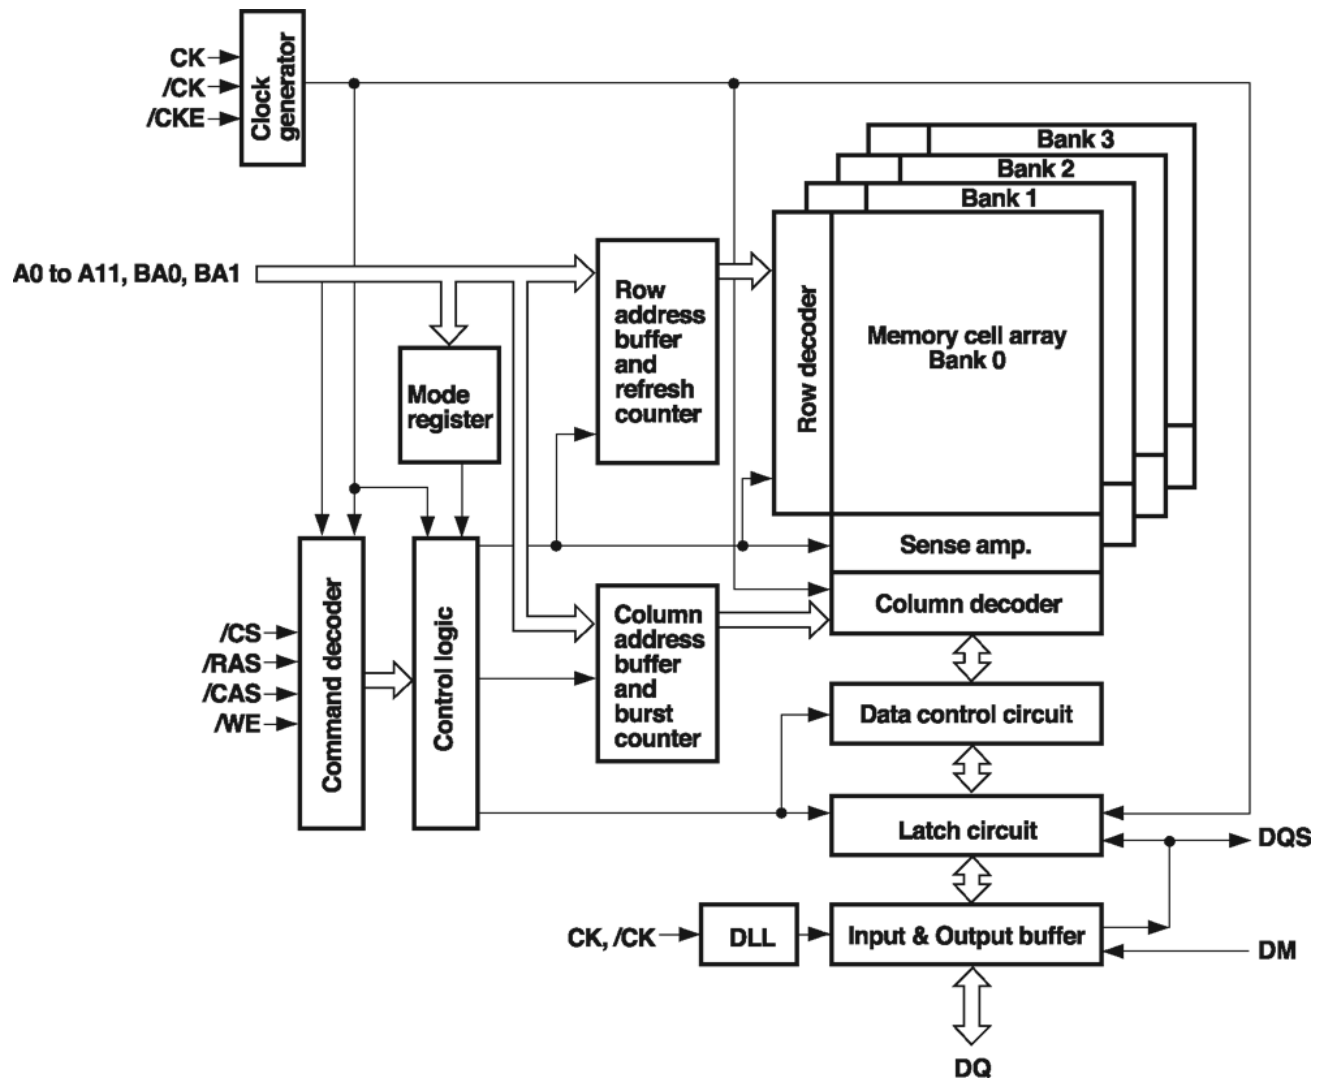


IC BLOCK DIAGRAMS (CONT.)

IC6100, TS Demodulator

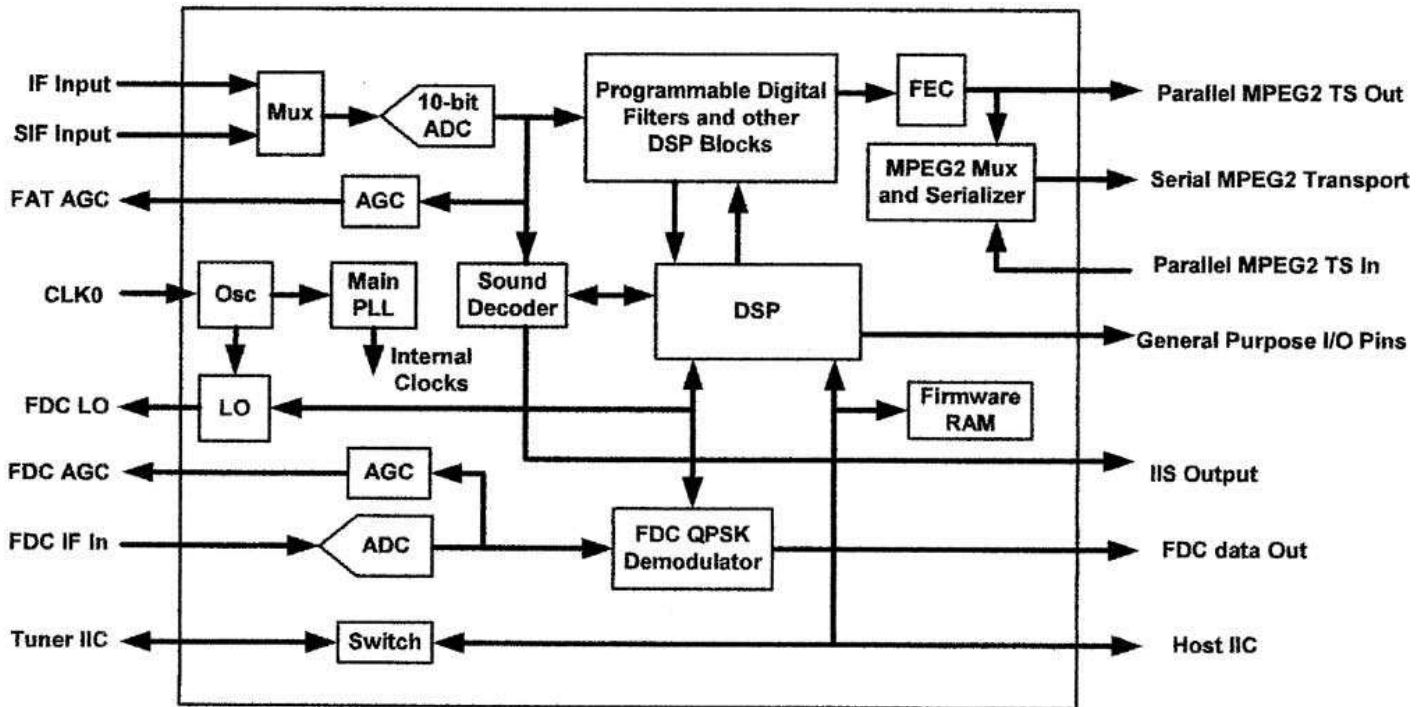


IC6200, A/D Converter


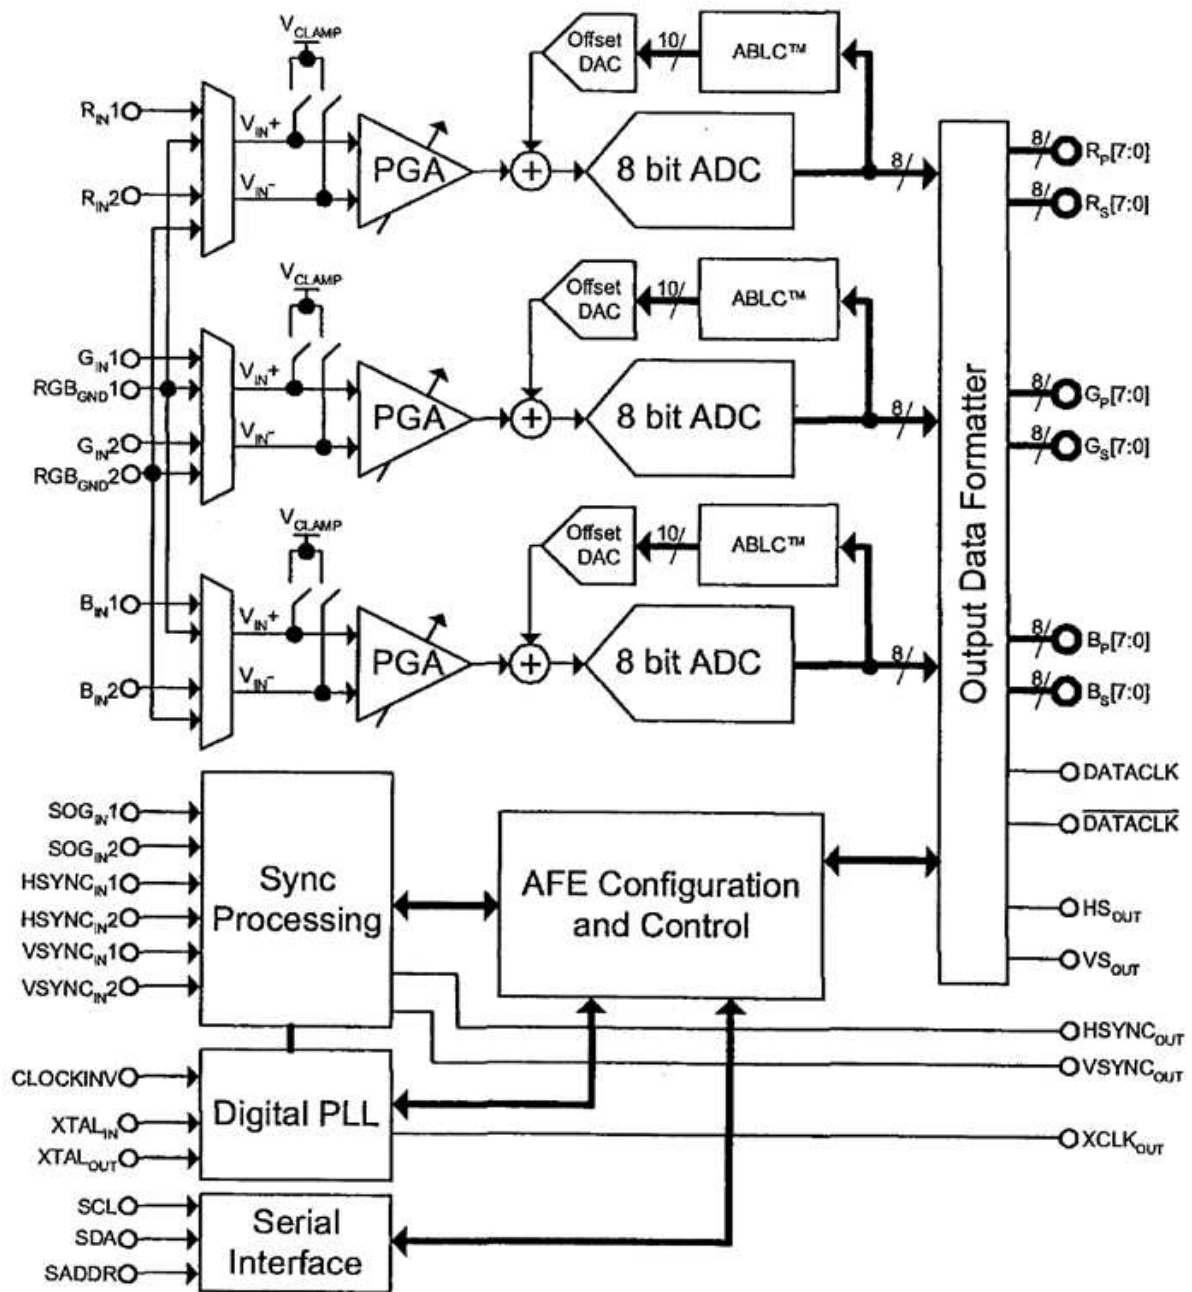


IC BLOCK DIAGRAMS (Cont.)

IC6502, DVI / HDMI SWITCH

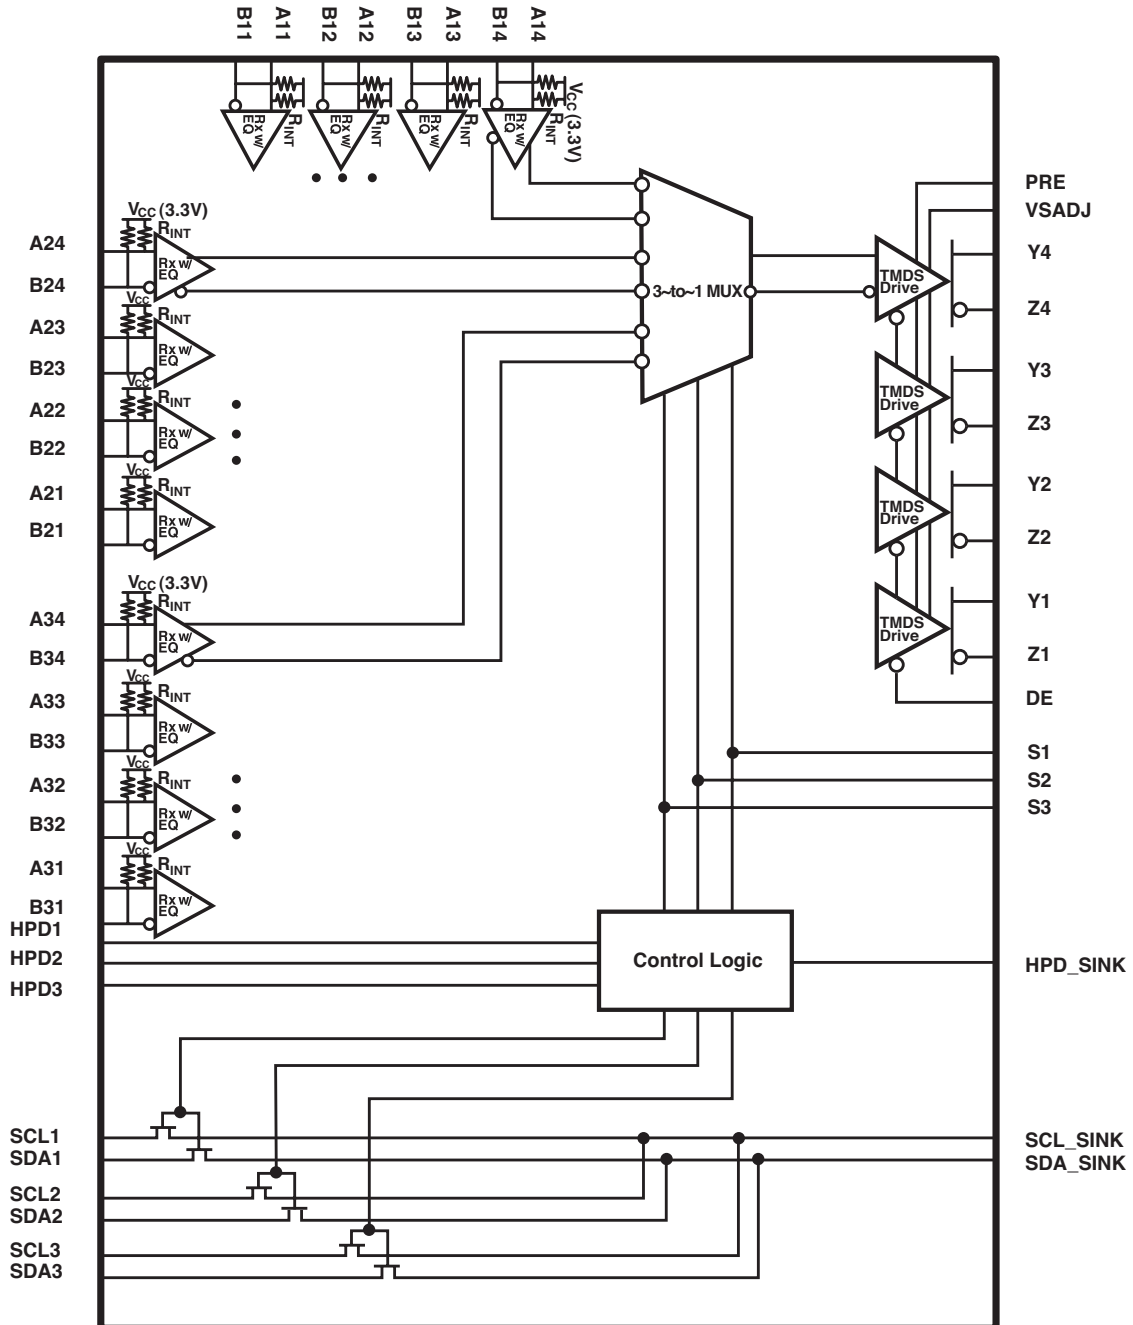


IC6551, HDMI MULTIPLEXER

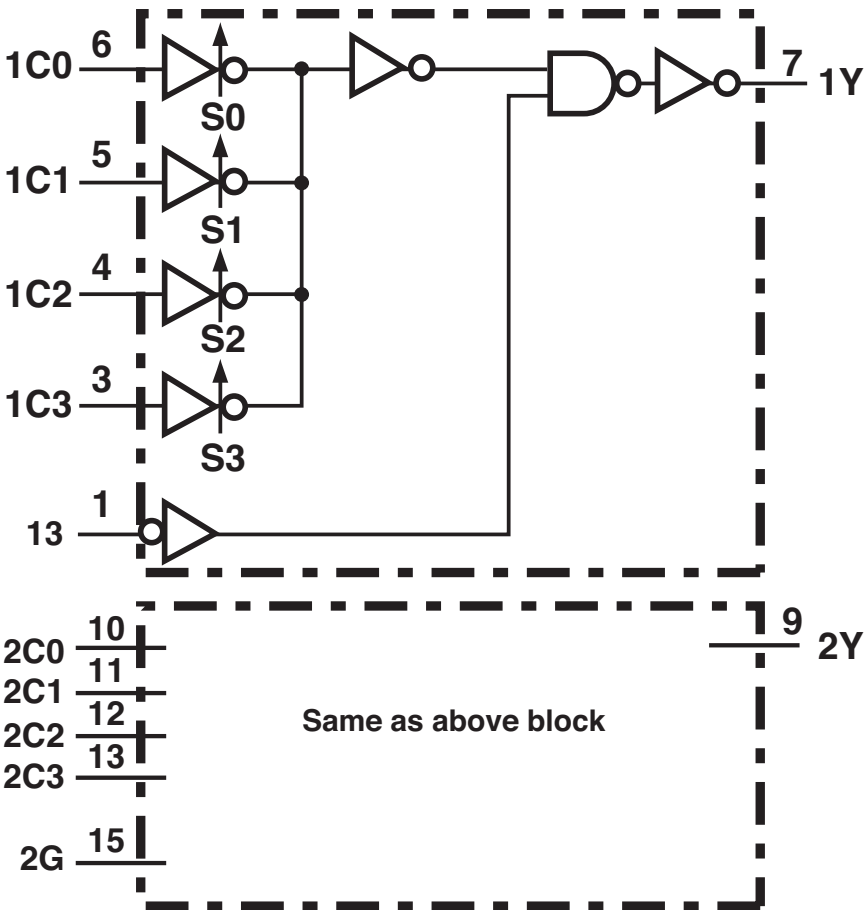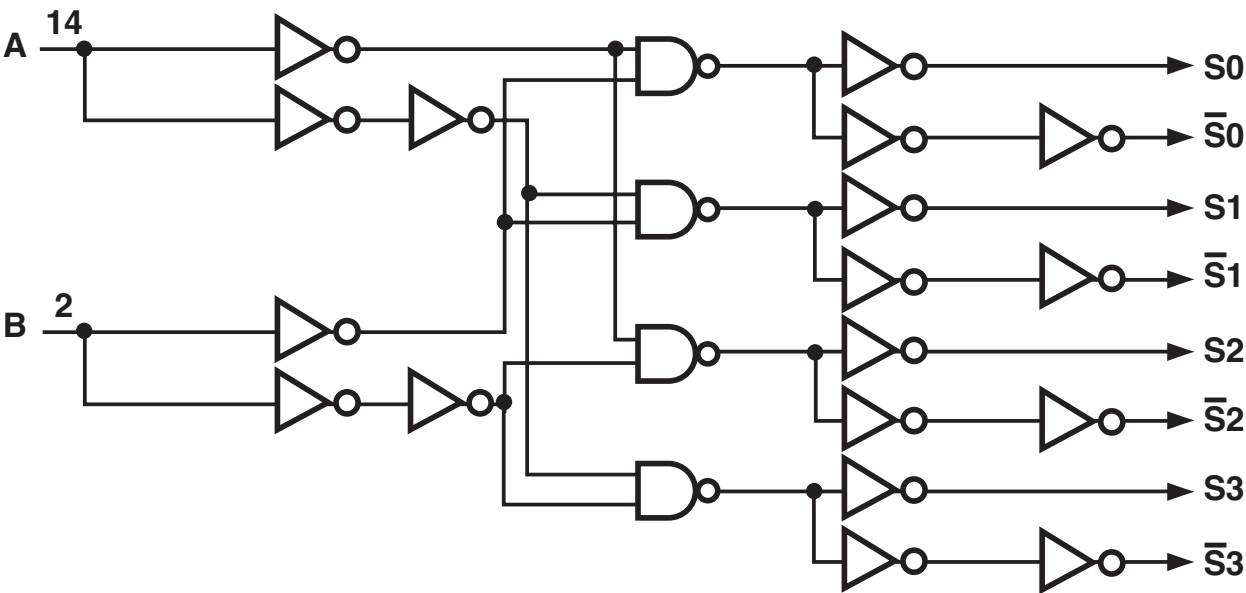


IC BLOCK DIAGRAMS (CONT.)

IC6270, STEREO A/D CONVERTER

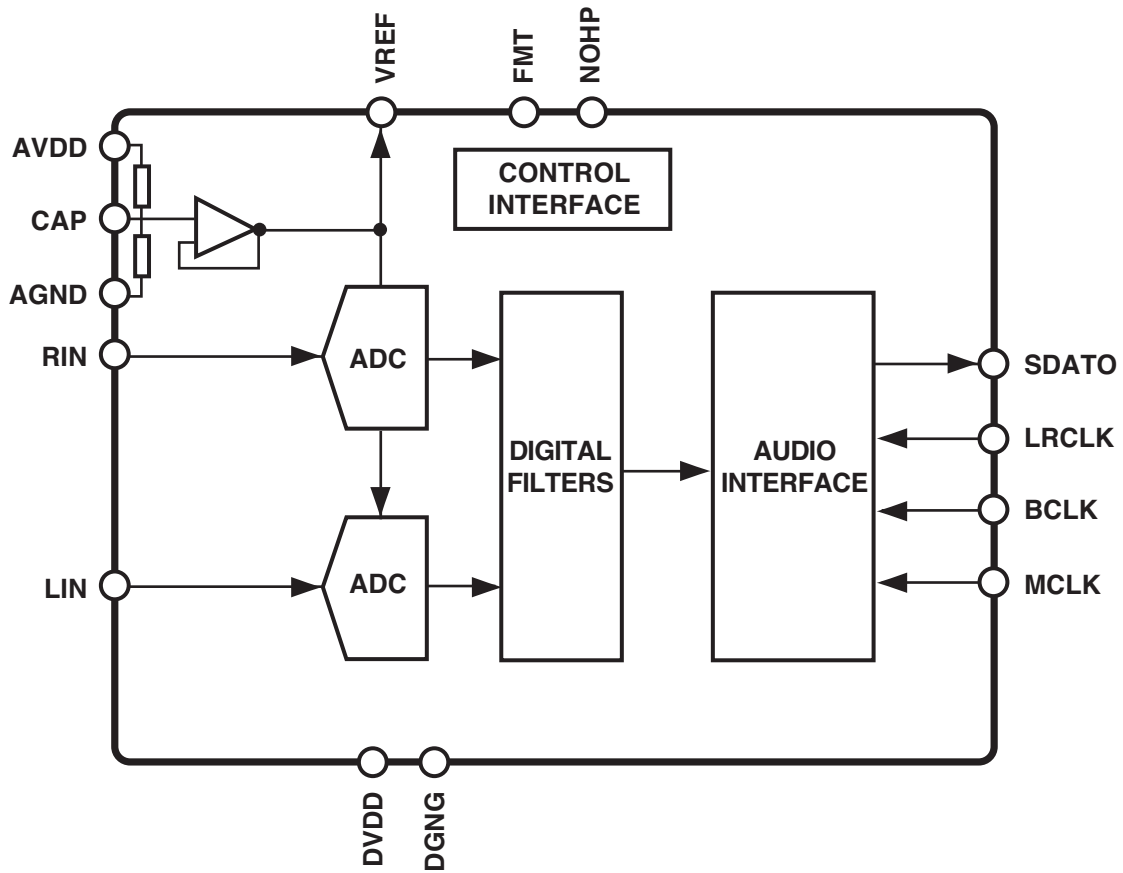

TROUBLESHOOTING FLOW CHARTS

NO POWER

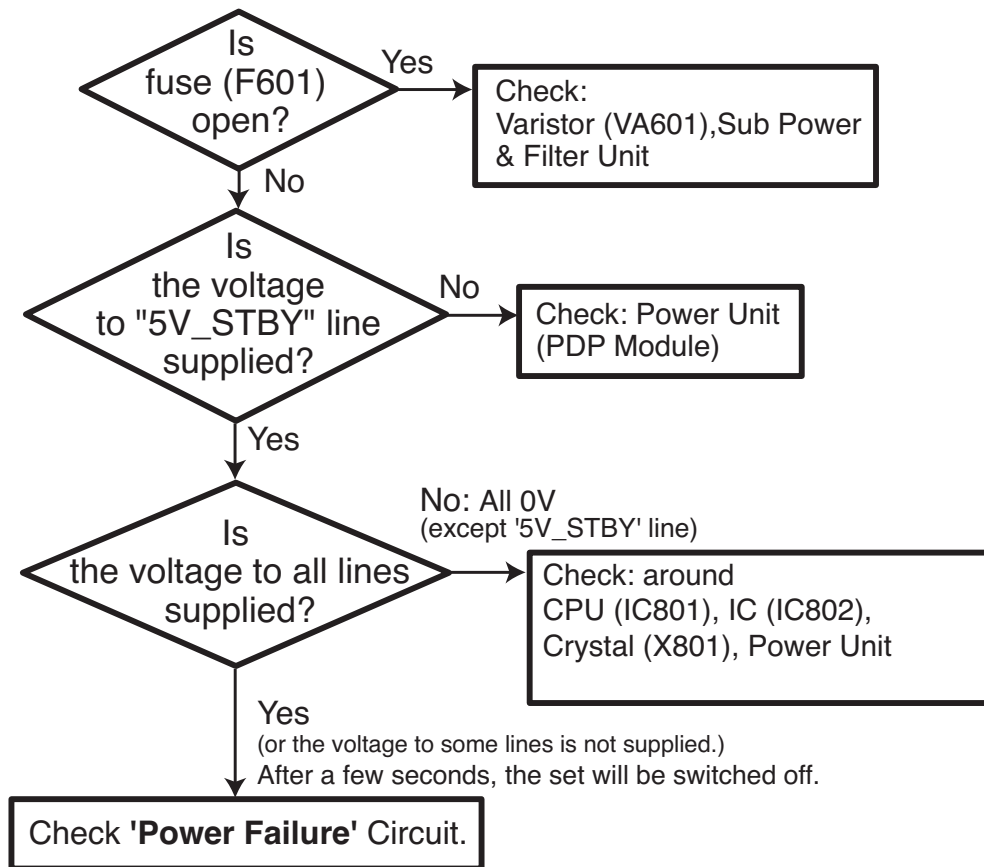

Power Failure Line


CPU (IC801) 32pin

Q803-Q804


Diode	Detected Voltage
D1602/D1604	D3.3V
D1651	12V_AMP
D1640	A9V
D1631	A5V
D1621	TU33V

TROUBLESHOOTING FLOW CHARTS (Cont.)

NO AUDIO

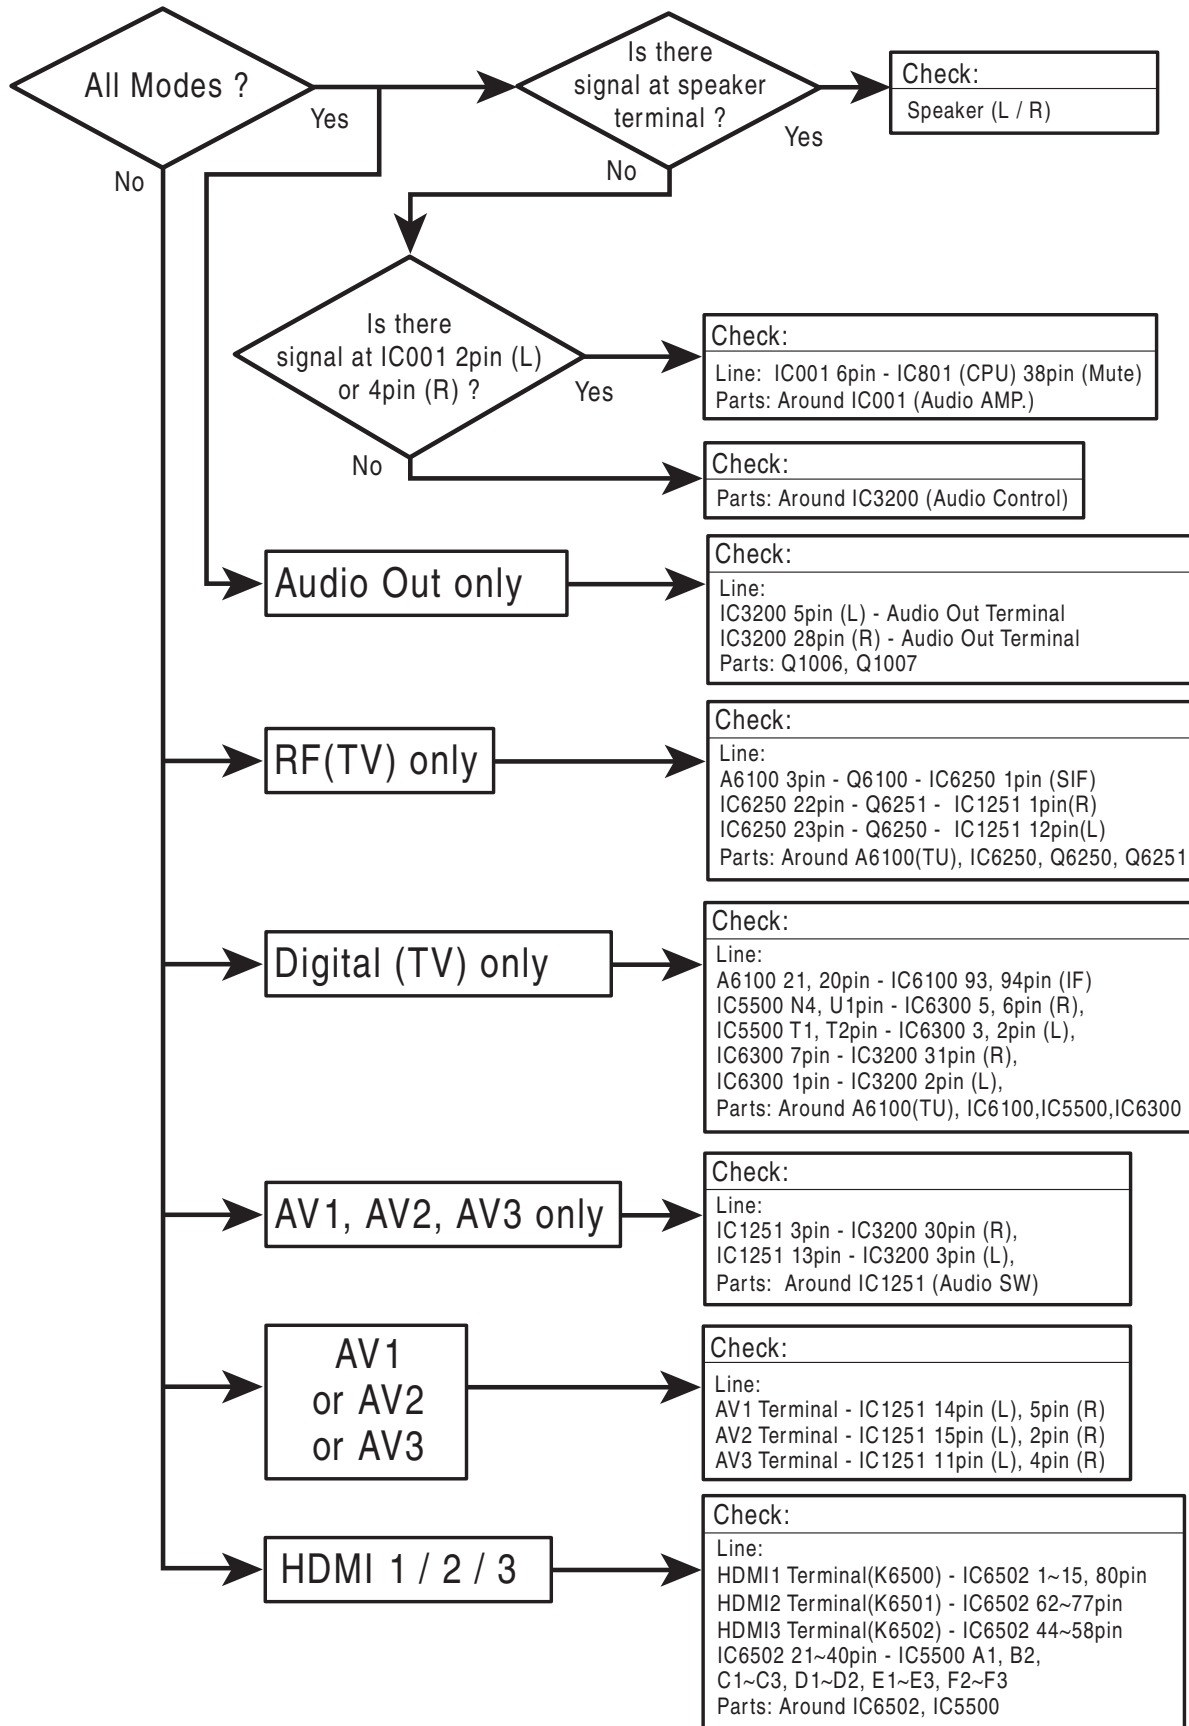

NO VIDEO

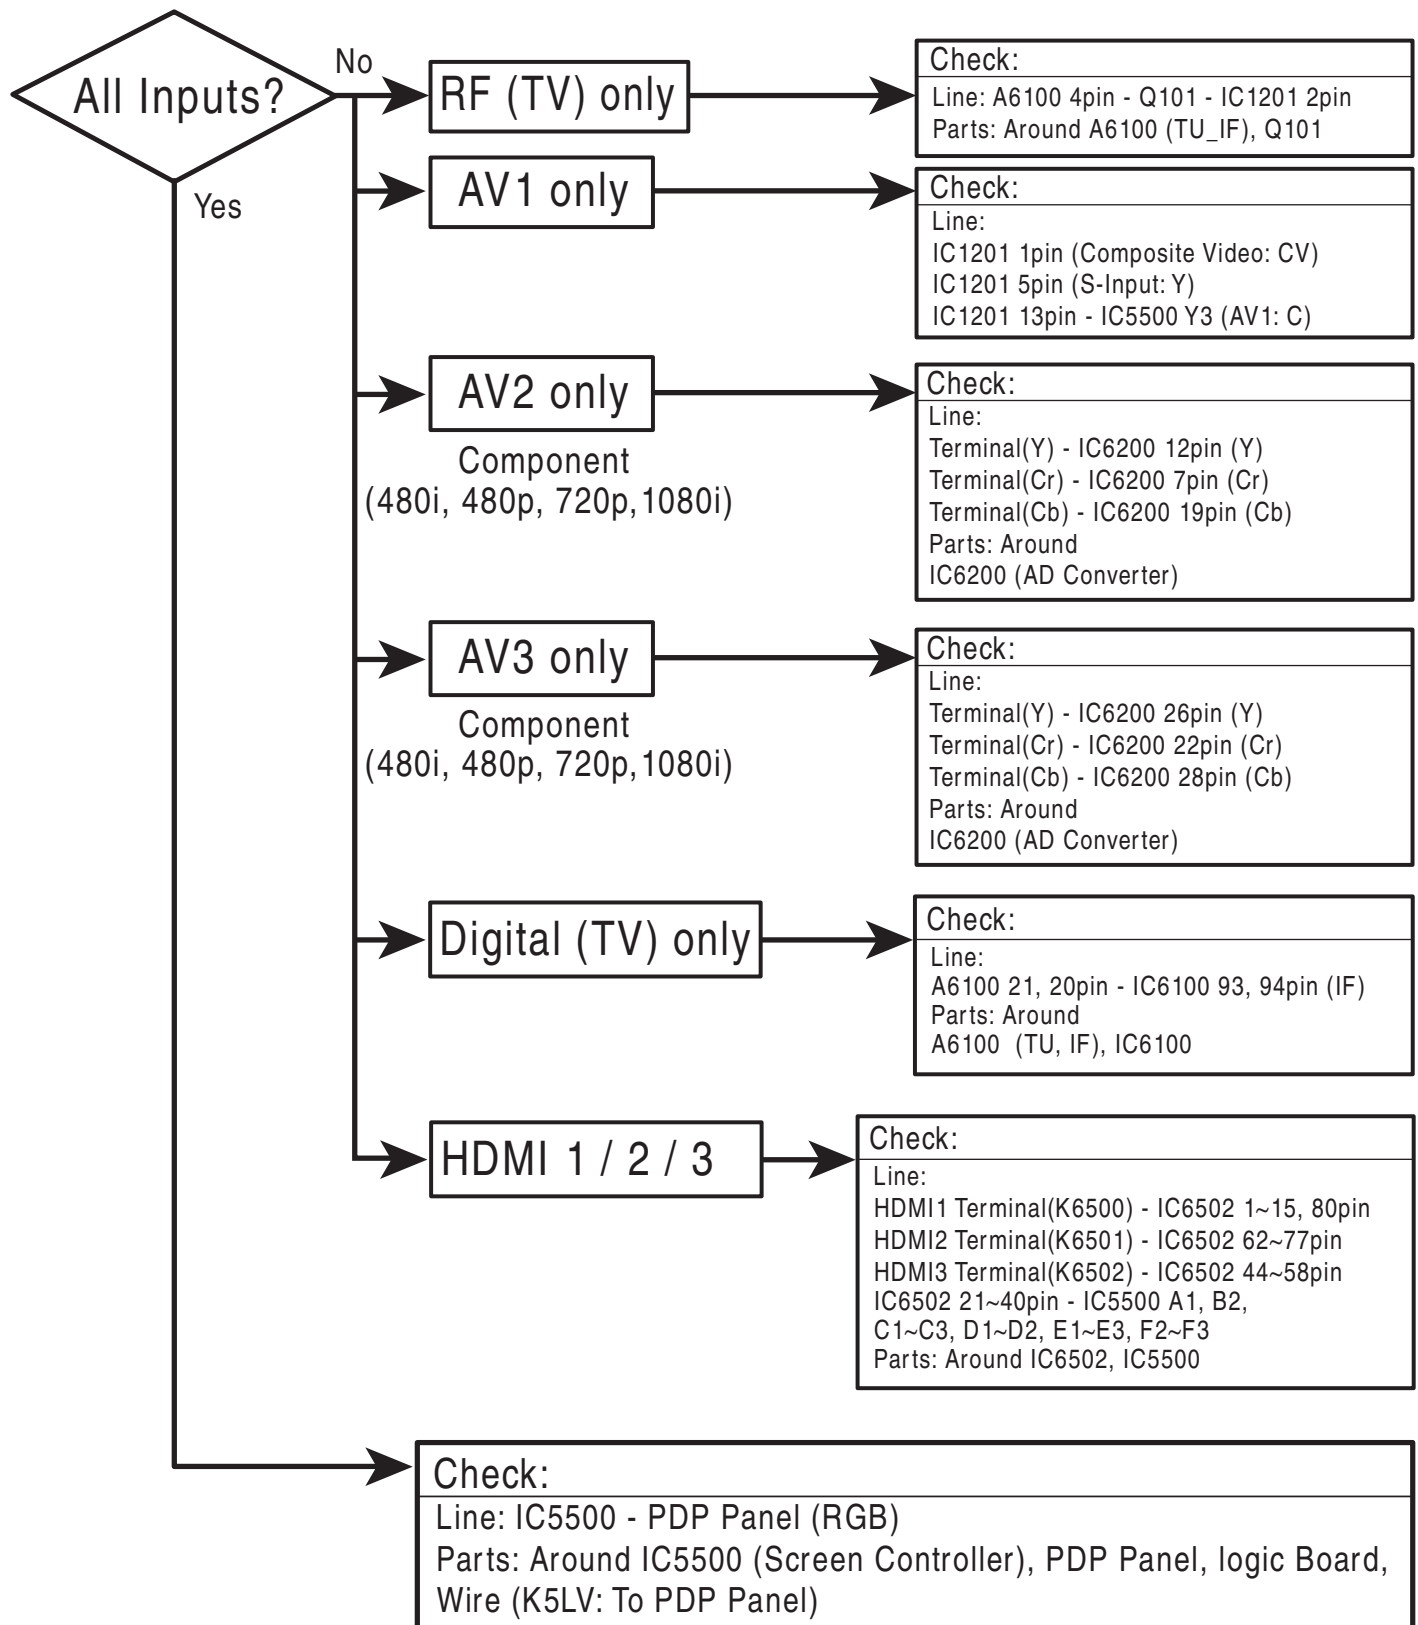

CONTROL PORT FUNCTIONS

System Control (CPU : IC801)


Pin	Name	Function	I/O	Description
1	CVin	Reserve	IN	GND (0Vdc)
2	P70/INT0/TOLCP	LINE OFF	IN	Detect AC Voltage Reduction (Normal: High)
3	P71/INT1/TOHCP	Reserve	OUT	(Open)
4	P72/INT2/TOIN	Display Enable	OUT	(Unused)
5	P73/INT3/TOIN	RC in	IN	RC Input
6	AN0	Key in	IN	Key Input
7	AN1	AFT S-Figure in	IN	AFT S-Figure Input
8	P82/AN2	Tuner Switch	OUT	Tuner Bus SW (Analog-RF: High, Other: Low)
9	P83	Reserve	OUT	(Open)
10	P84/AN4	Reserve	OUT	(Open)
11	P85/AN5	VS-ON	OUT	(Unused)
12	P86/AN6	Panel Ready	IN	(Unused)
13	P87/AN7	S IN	IN	S-Detect
14	P30/SO6	TV Relay out	OUT	POWER ON/OFF SW (Power On: High)
15	SB6	IIC-BUS for NV	I/O	(DATA) Active 'L' for IIC data NV
16	SCK6	IIC-BUS for NV	OUT	(CLOCK) Active 'L' for IIC clock NV
17	SB6	IIC-BUS for TV	I/O	(DATA) Active 'L' for IIC data TV
18	SCK6	IIC-BUS for TV	OUT	(CLOCK) Active 'L' for IIC clock TV
19	DBGP0	DBGP0	I/O	Terminal for De-Bug 1
20	DBGP1	DBGP1	I/O	Terminal for De-Bug 2
21	DBGP2	DBGP2	IN	Terminal for De-Bug 3
22	PC0	ENA/DATA1	I/O	Writing on board (ENA/DATA1)
23	PC1	DATA0	I/O	Writing on board (DATA0)
24	PC2	CLK	IN	Writing on board (CLK)
25	PC3	TB in	IN	Detection for Video Signal (Time base: H)
26	PC4	Reserve	OUT	(Open)
27	P00	WDT out	OUT	Watch dog timer (Reserved: Open)
28	P01	AV SW1	OUT	Selection for AV Selector 1
29	P02	AV SW2	OUT	Selection for AV Selector 2
30	P03	AV SW3	OUT	Selection for AV Selector 3
31	P04	AV SW4	OUT	Selection for AV Selector 4
32	P05	Power Fail-1 in	IN	TV Power Error (Error: Low)
33	P06	STATUS in	IN	For factory use
34	P07	Ack out	OUT	For factory use
35	P20/SO1	5V Discharge	OUT	
36	P21/S11/SB1	Power Fail-2 in	IN	(Unused)
37	P22/SCK1	A-OUT Mute	OUT	Audio Out Mute (On: High)
38	P23	Audio MUTE	OUT	Audio Mute (On: High)
39	UTX	UART OUT	OUT	Digital Module microcomputer piece confidence
40	URX	UART IN	IN	Digital Module microcomputer piece confidence
41	P26/OSDCK1	REG SW	OUT	REG On/Off SW (On: High)
42	BL2	Reserve	OUT	(Open)
43	VSS2	Vss	IN	GND (0Vdc)
44	VDD2	Power IN	IN	5V (5Vdc±10%)
45	P10/SO0	Reserve	OUT	(Open)
46	P11/SI0/SB0	Reserve	OUT	(Open)

CONTROL PORT FUNCTIONS (Cont.)


System Control (CPU : IC801 Cont.)

Pin	Name	Function	I/O	Description
47	P12/SCK0	PDP/LCD	IN	Option Setting (PDP: High, LCD: Low)
48	P13	Panel Size 3	IN	Panel size
49	P14	Panel Size 2	IN	Panel size
50	P15	Panel Size 1	IN	Panel size
51	P16	Panel Size 0	IN	Panel size
52	P17	Reserve	OUT	(Open)
53	BL1	Reserve	OUT	(Open)
54	B	Reserve	OUT	(Open)
55	G	Reserve	OUT	(Open)
56	R	Reserve	OUT	(Open)
57	HSB	Hsync	IN	GND (0Vdc)
58	VSb	Vsync	IN	GND (0Vdc)
59	VSS1	Vss	IN	GND (0Vdc)
60	XT1	Xin	IN	Main Clock IN/OUT Fosc=8MHz
61	XT2	Xout	OUT	(Should be connected between IN/OUT pins.)
62	VDD1	Power IN	IN	5V (5Vdc±10%)
63	RESB	RESET in	IN	Reset terminal
64	FILT	FILT out	OUT	PLL Filter

WHEN A DIGITAL-RF CHANNEL IS SELECTED




WHEN AN ANALOG-RF CHANNEL IS SELECTED

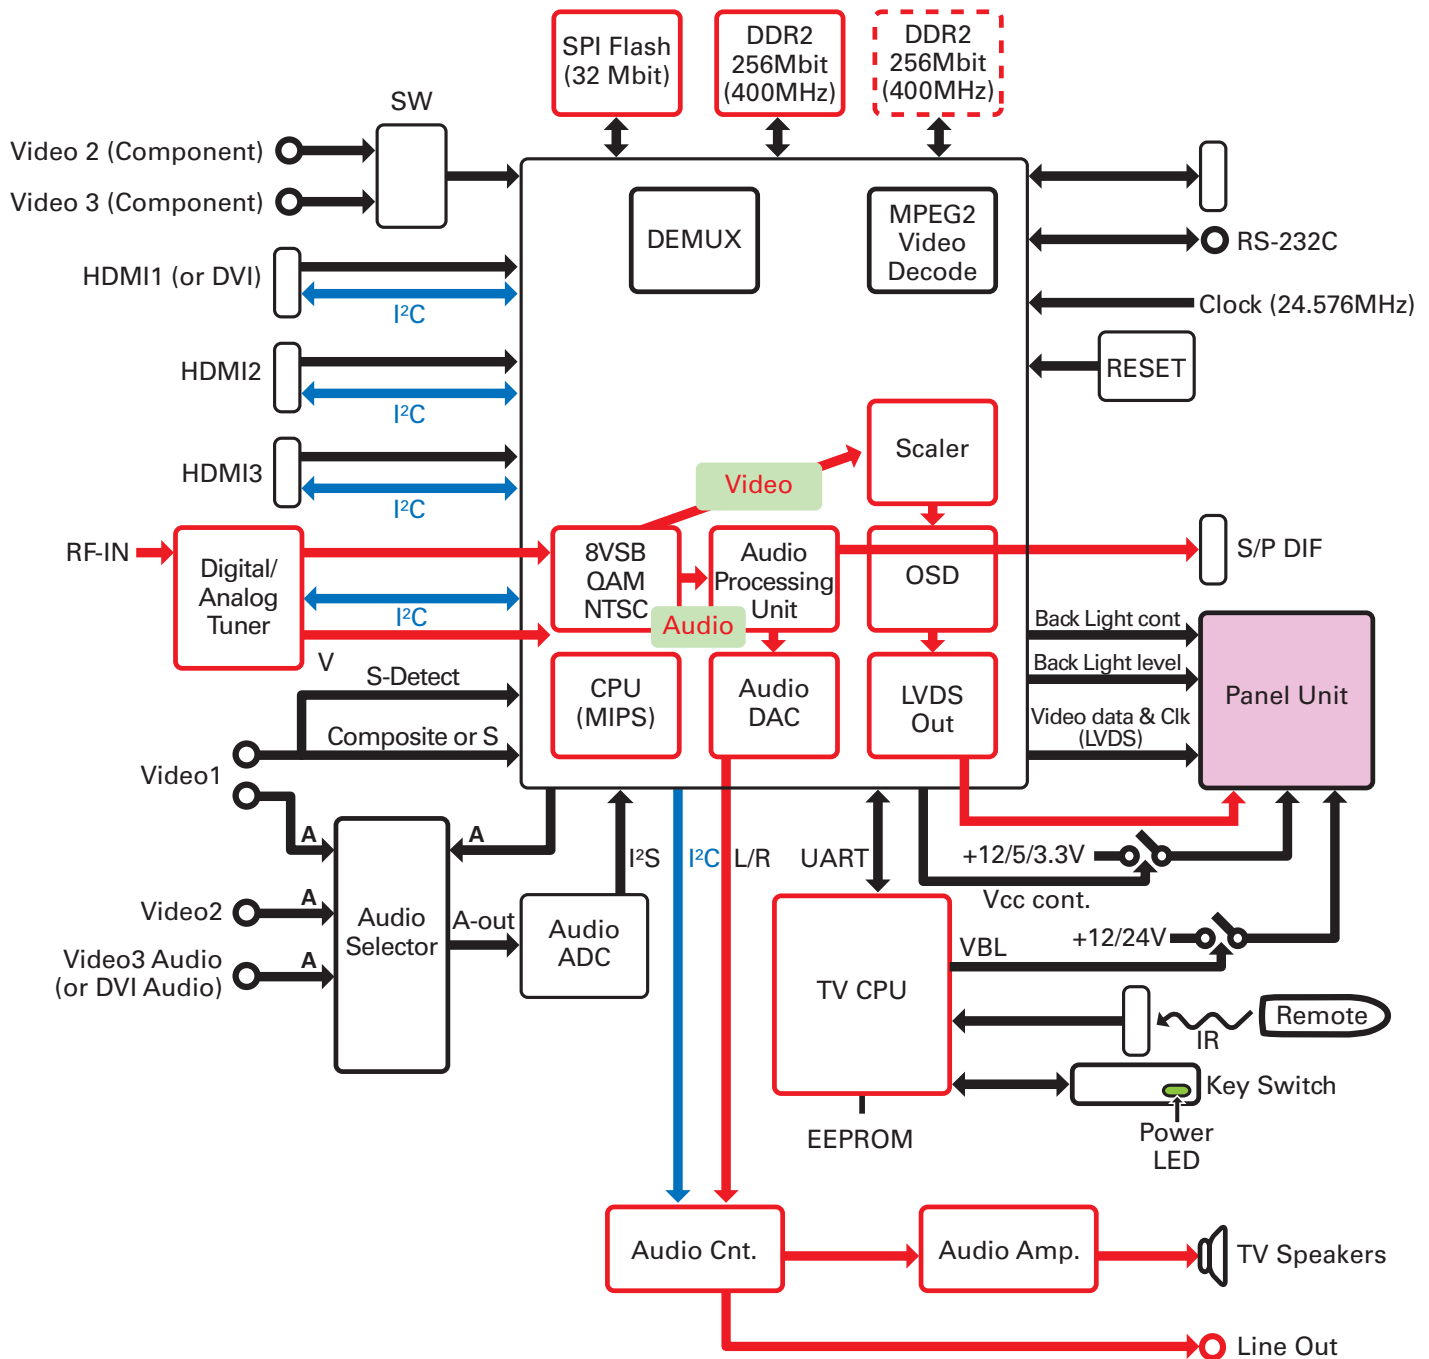


SIGNAL FLOW CHARTS (CONT.)

WHEN A VIDEO INPUT (VIDEO1) IS SELECTED

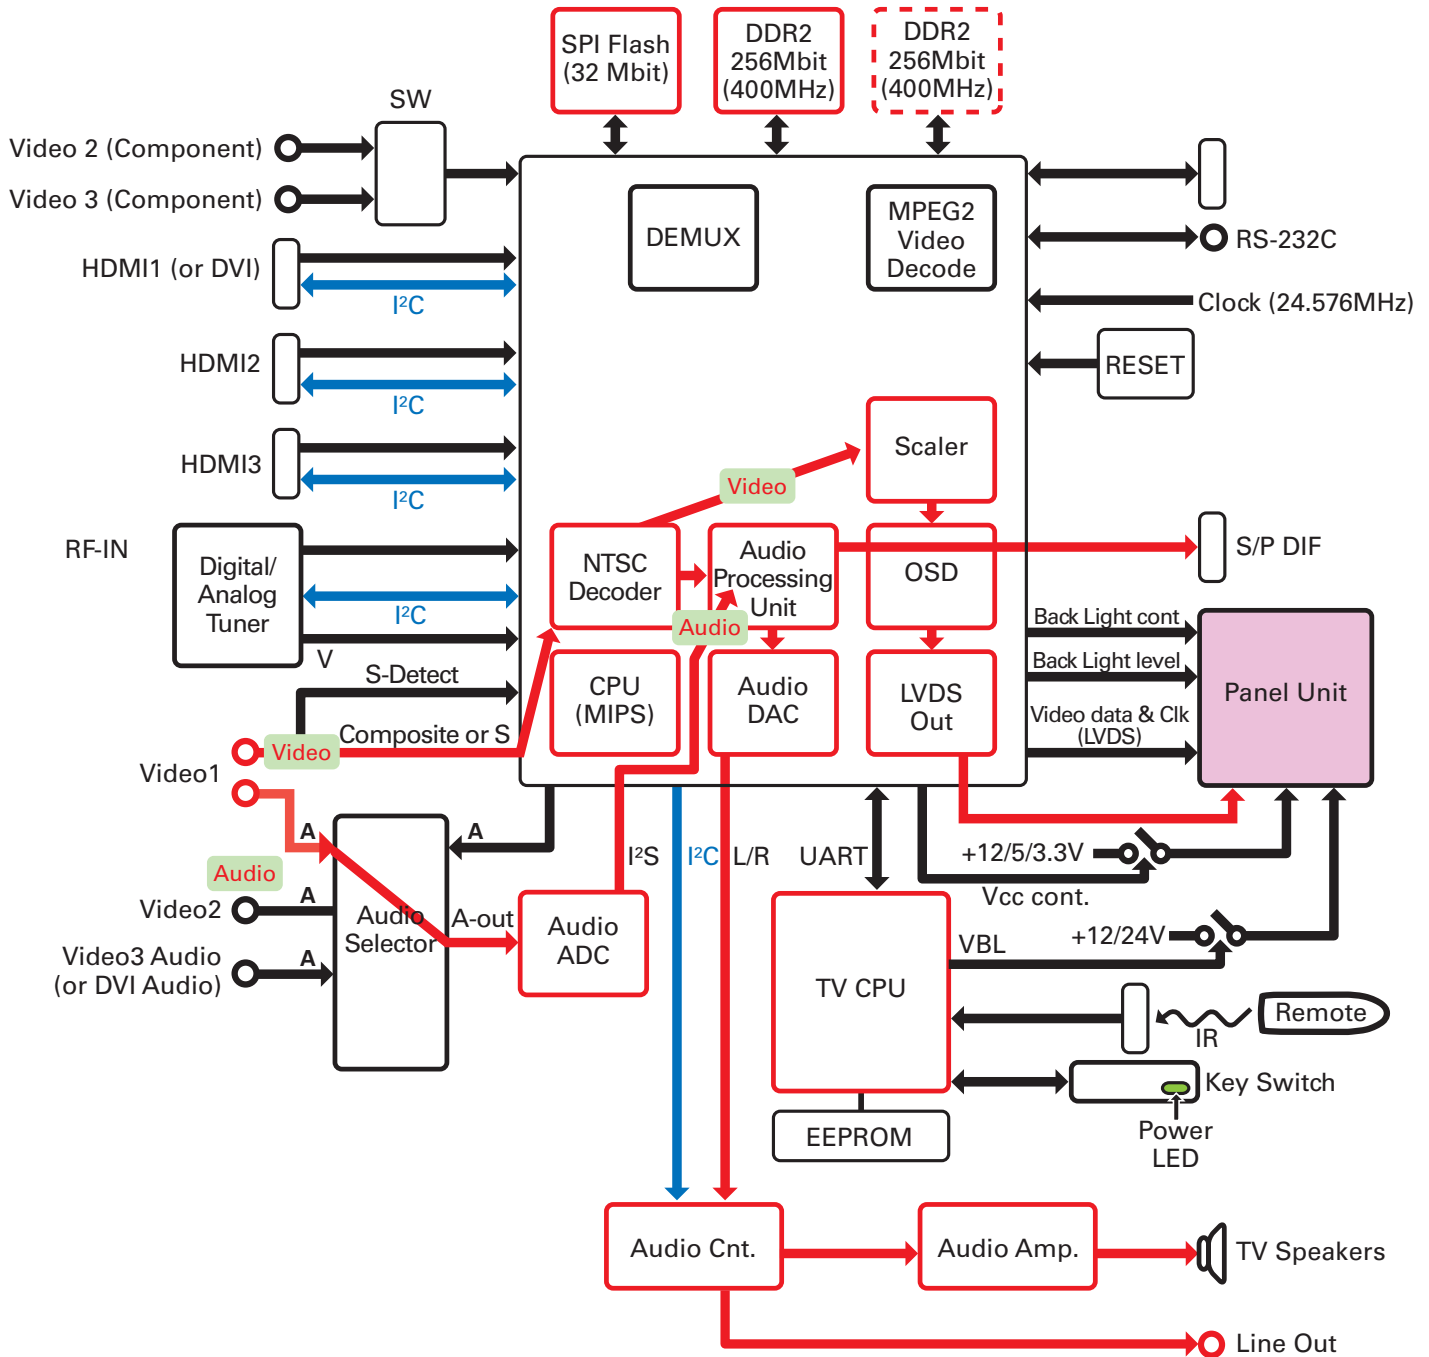


WHEN VIDEO 2 IS SELECTED

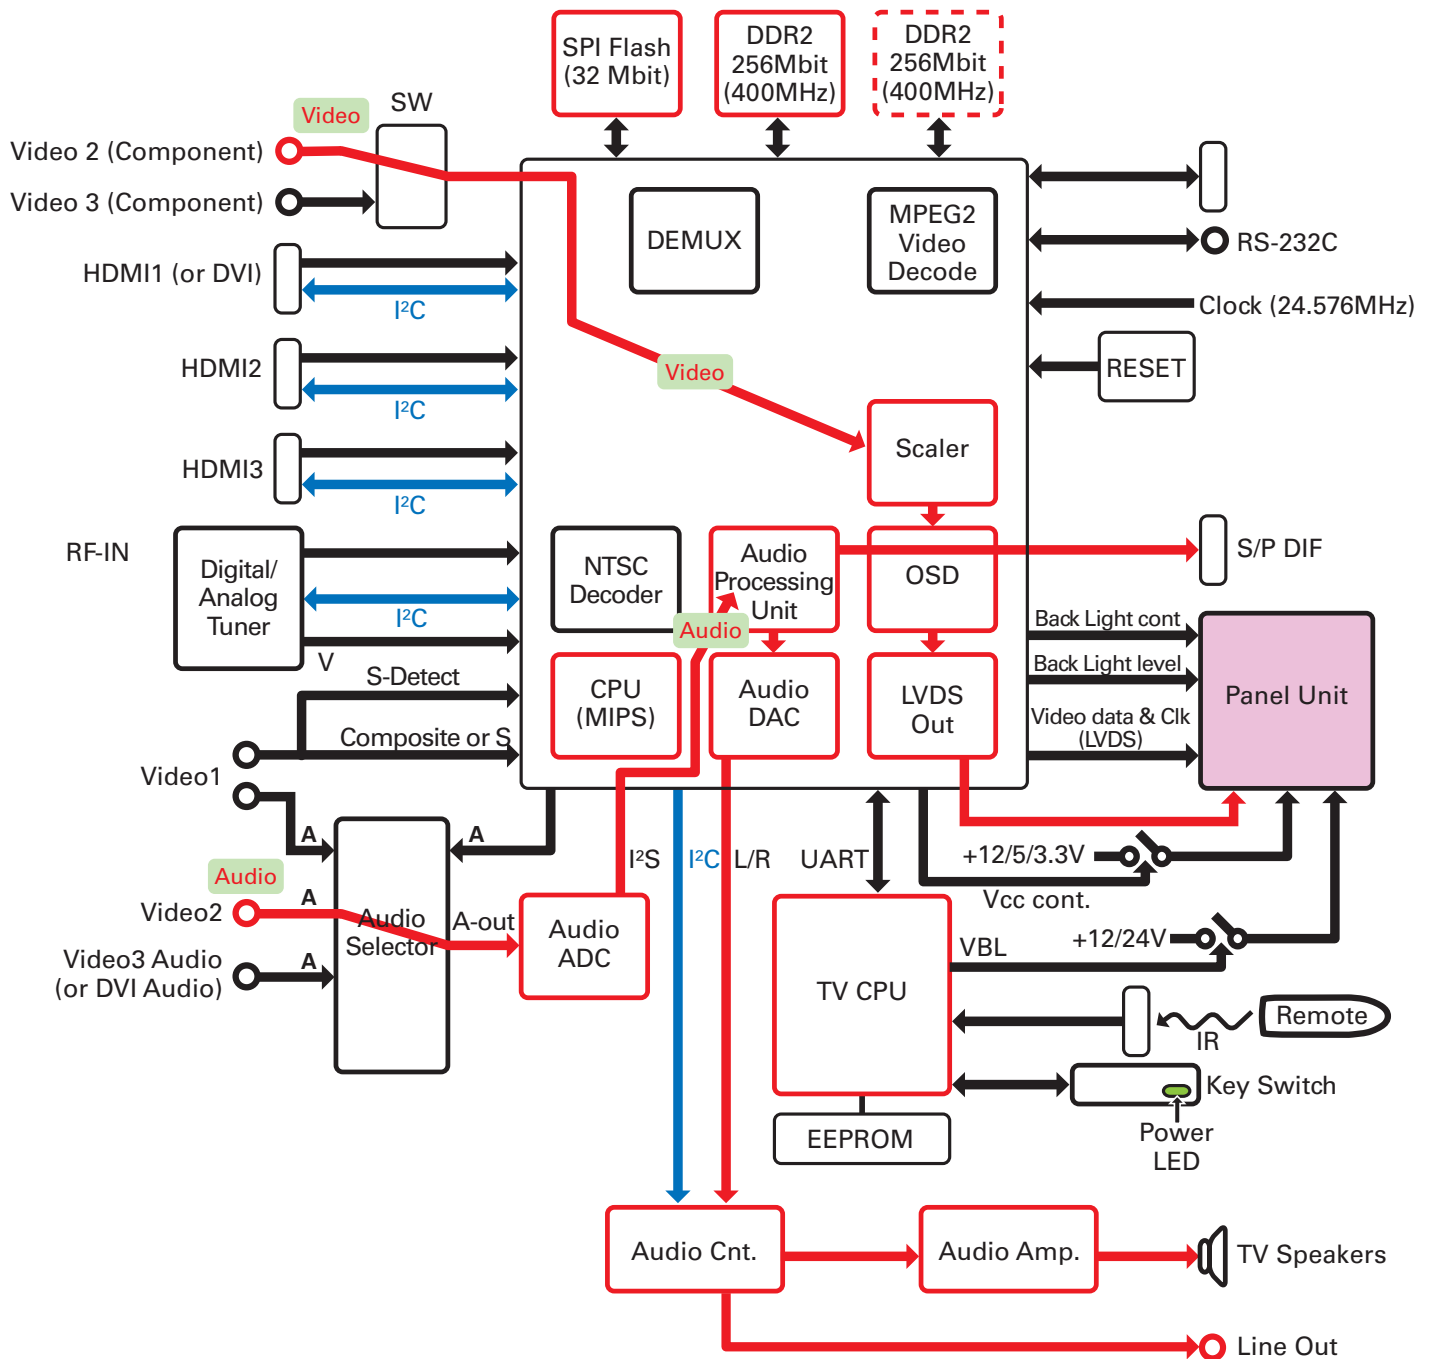


SIGNAL FLOW CHARTS (CONT.)

WHEN VIDEO 3 IS SELECTED

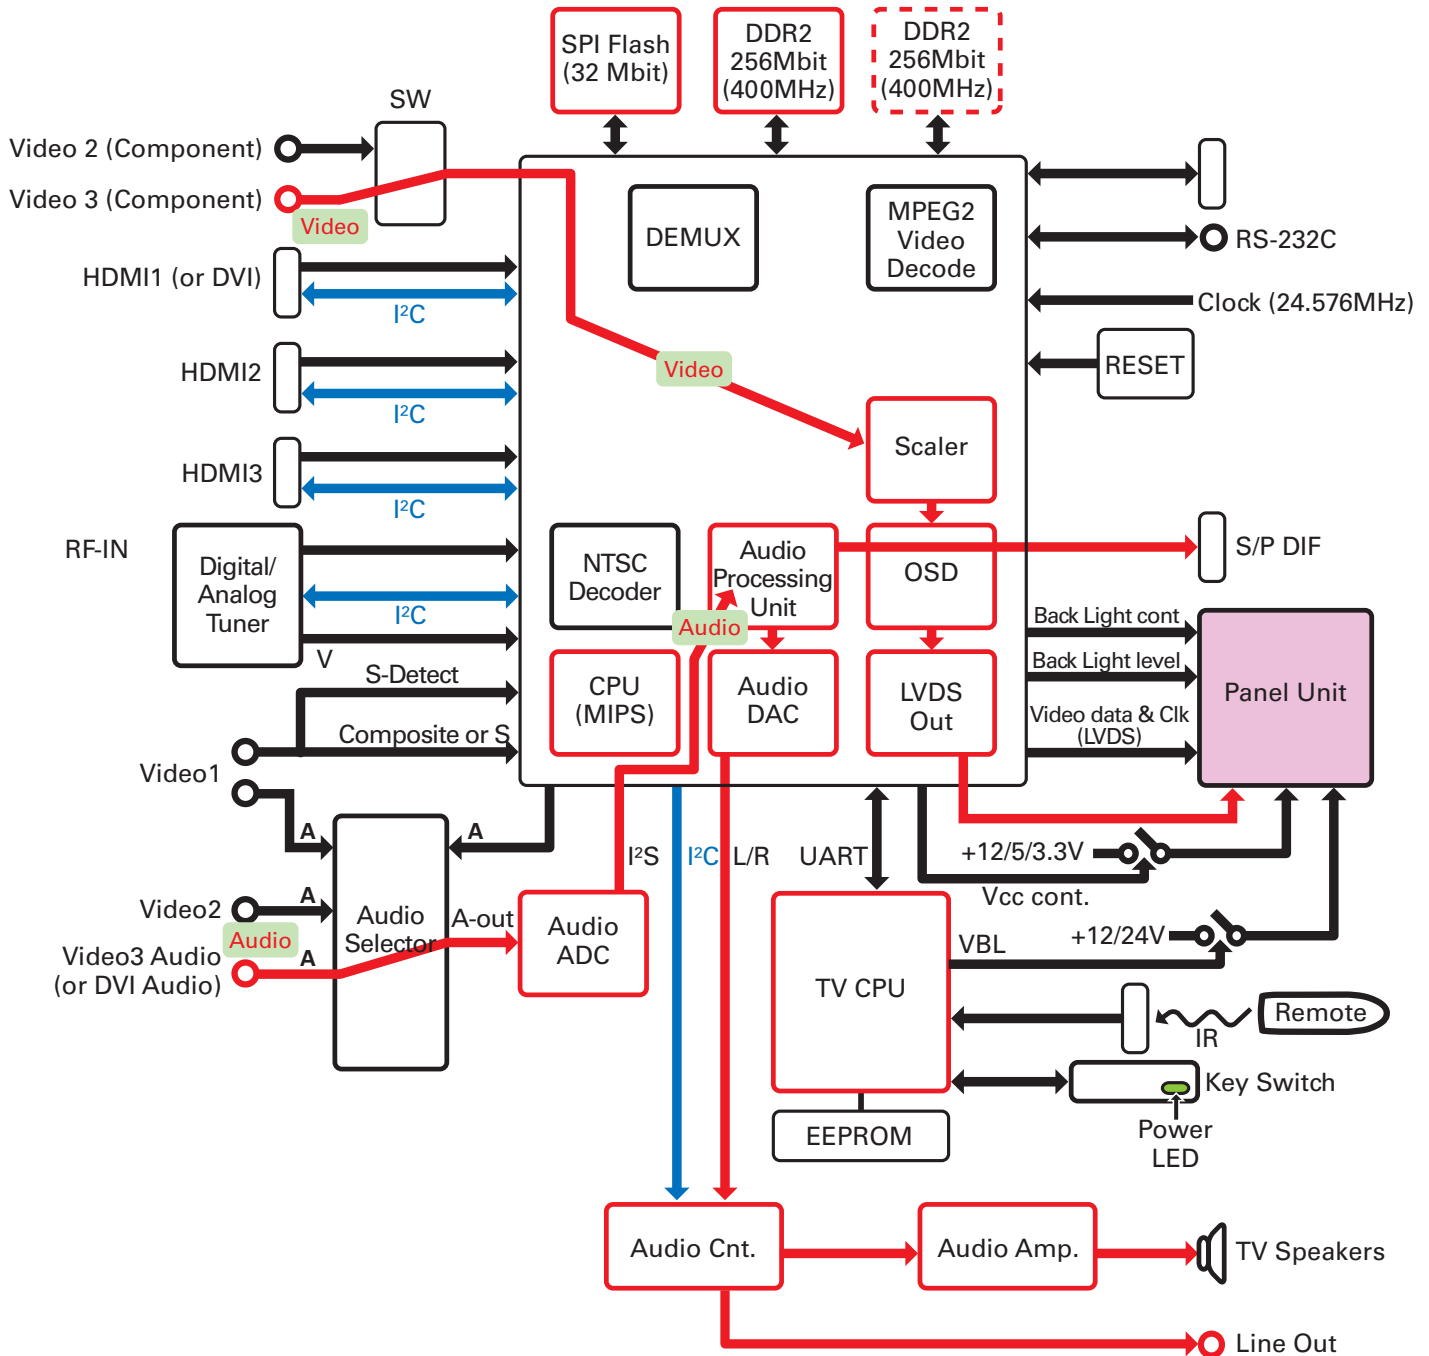


WHEN HDMI-3 IS SELECTED

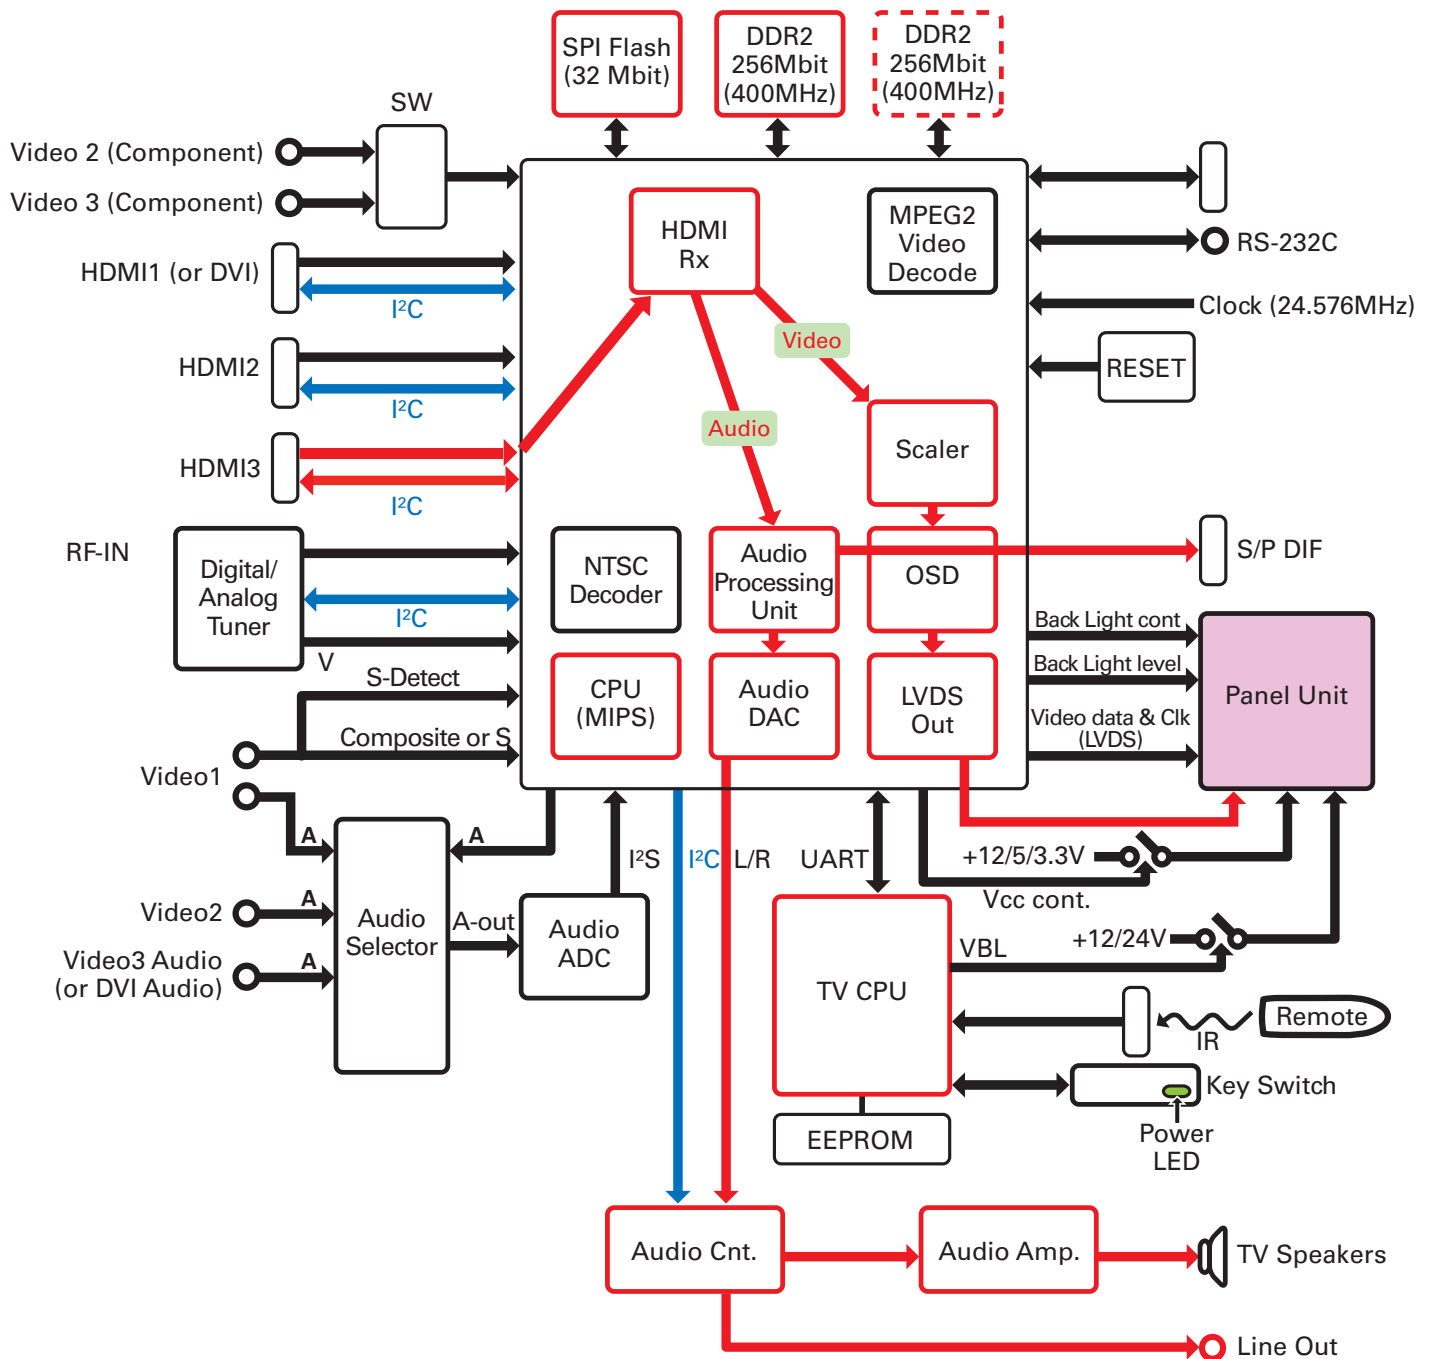


SIGNAL FLOW CHARTS (CONT.)

WHEN HDMI-2 IS SELECTED

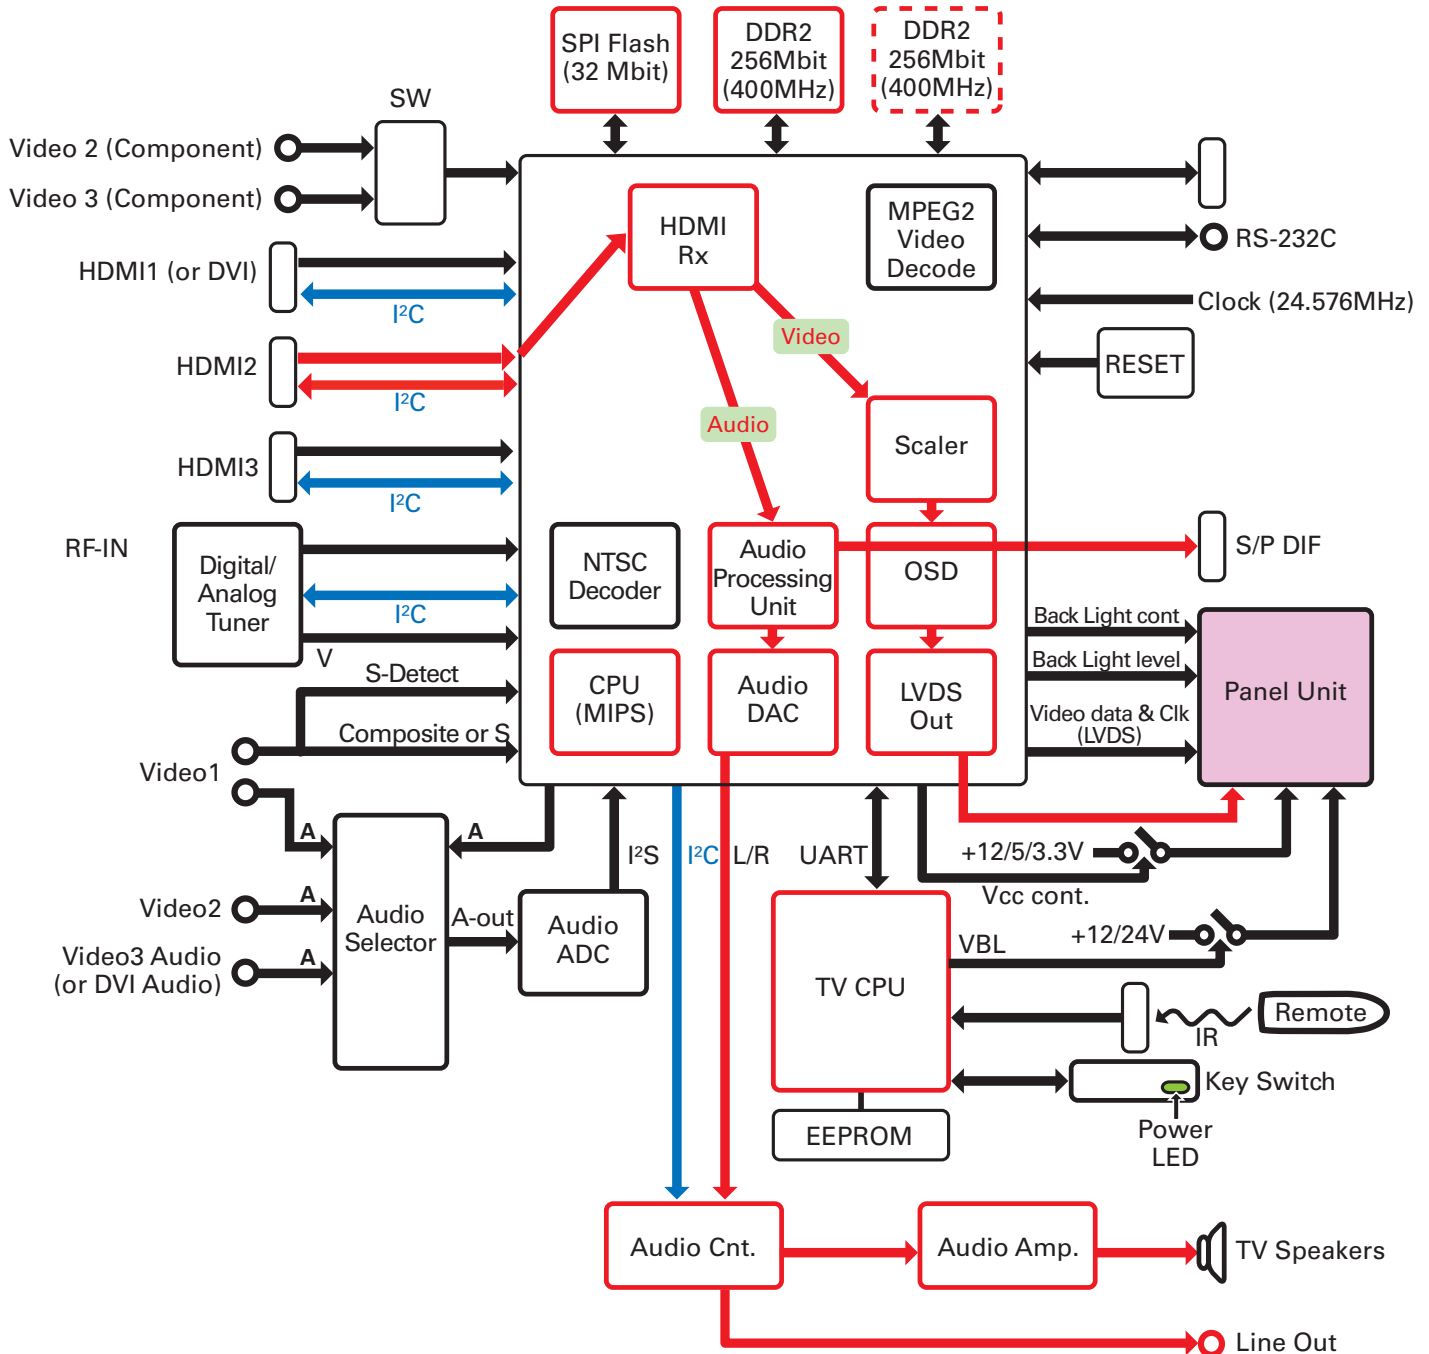

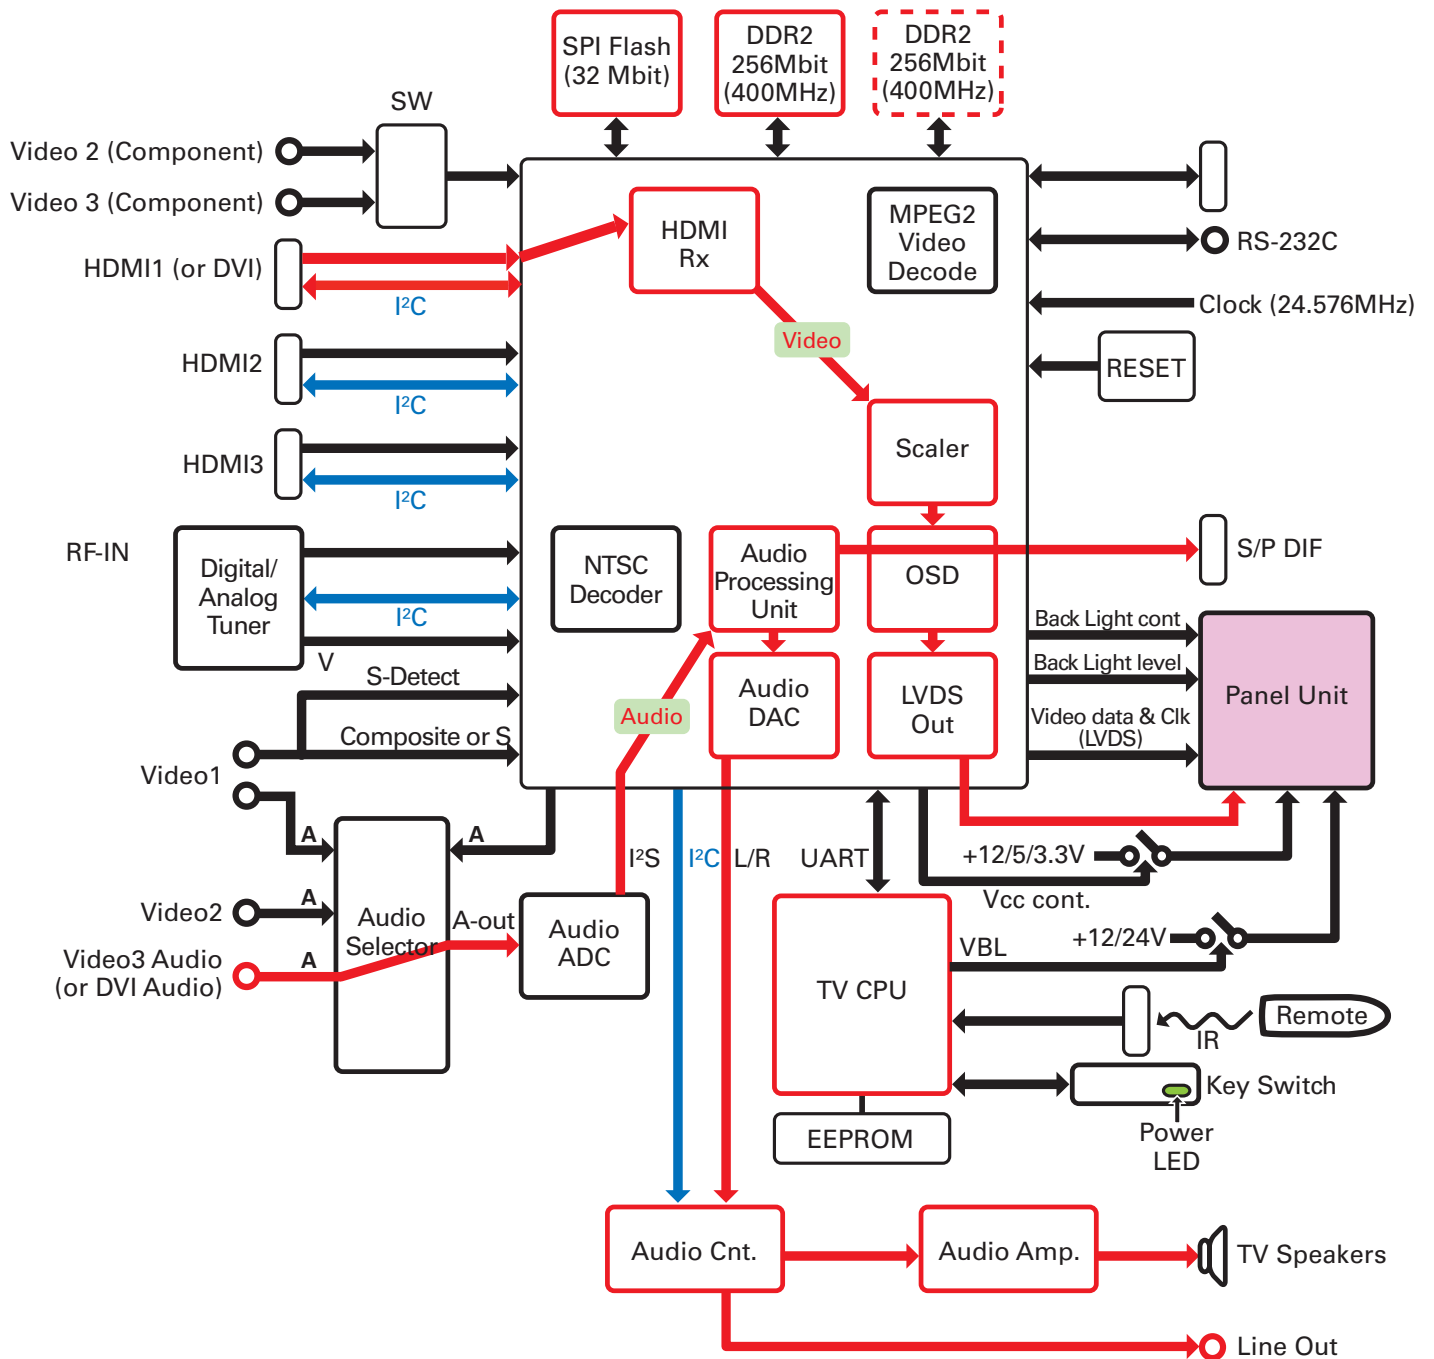


WHEN HDMI-1 IS SELECTED (DVI)



SCHEMATIC NOTES

NOTES ON SCHEMATIC DIAGRAMS

1. All resistance values in ohms K=1,000 M=1,000,000.
2. Resistors specified with resistance value are "1/6DJ."
3. Resistors specified with type of resistor, tolerance and resistance value are "1/4."
4. Unless otherwise noted on schematic, all capacitor values less than 1 are expressed in μF (Micro Farad), and the values more than 1 are in pF.
5. All capacitors are 50 WV rating unless otherwise noted.
6. Unless otherwise noted on schematic, voltage reading taken with VOM from point indicated to chassis ground. Voltage reading taken using color-bar signal VHF channel 5, all controls at normal. Line voltage at 120 volts. Some voltages may vary with signal strength.
7. Waveforms were taken with color-bar signal and controls set for normal picture. Waveforms marked with an * may vary with signal strength.
8. The Symbol  indicates a fusible resistor, which protects the circuit from possible short circuits.
9. Parts enclosed with  are related with X-radiation.
10. Isolation border line. Cold Side  Hot Side
11. Schematic part location numbers may not always match the schematic symbols.
The schematic symbols and part descriptions are correct and should be used.
The part descriptions will be listed under the location number in the parts list.





ELECTROSTATICALLY SENSITIVE DEVICES

Many solid-state devices (especially Integrated Circuits) are Electrostatically Sensitive, and, therefore, require special handling techniques as described under "Servicing Electrostatically Sensitive Devices," on page two in this service literature.

SERVICE NOTES:


1. When replacing parts on circuit boards, clamp the lead wires to terminals before soldering.
2. When replacing high wattage resistors on circuit board, keep the resistor body 10 mm (3/8) from circuit board.
3. Keep wires away from high voltage and high temperature components.

PRODUCT SAFETY NOTICE


THE COMPONENTS DESIGNATED BY A  ON THIS SCHEMATIC DIAGRAM DESIGNATE COMPONENTS WHOSE VALUES ARE OF SPECIAL SIGNIFICANCE TO PRODUCT SAFETY. SHOULD ANY COMPONENT DESIGNATED BY A  NEED TO BE REPLACED, USE ONLY THE PART DESIGNATED IN THE PARTS LIST. DO NOT DEVIATE FROM THE RESISTANCE, WATTAGE AND VOLTAGE RATINGS SHOWN.

IC, DIODE, AND TRANSISTOR PIN LAYOUTS


INTEGRATED CIRCUITS

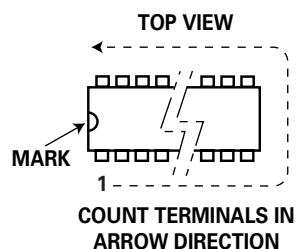

SIDE VIEW

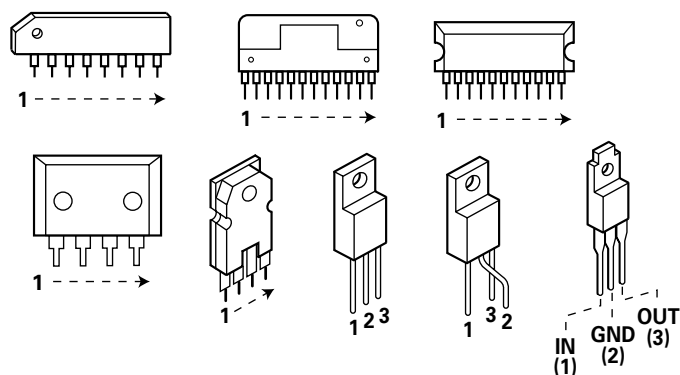


TRANSISTORS

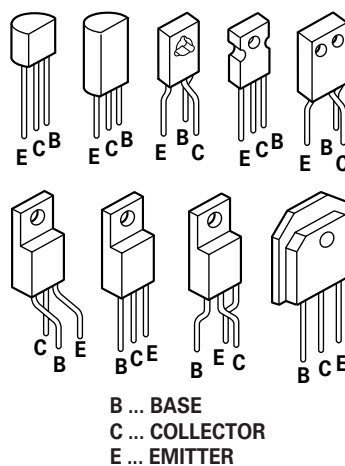


CHIP TRANSISTORS

TOP VIEW

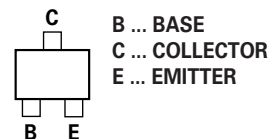


DIODES

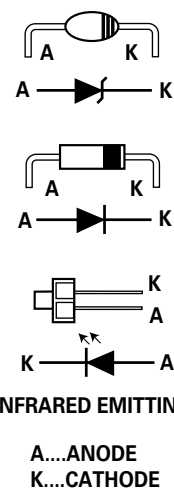


CHIP RESISTORS

TOP VIEW




PC BOARD CONNECTIONS AND LOCATIONS

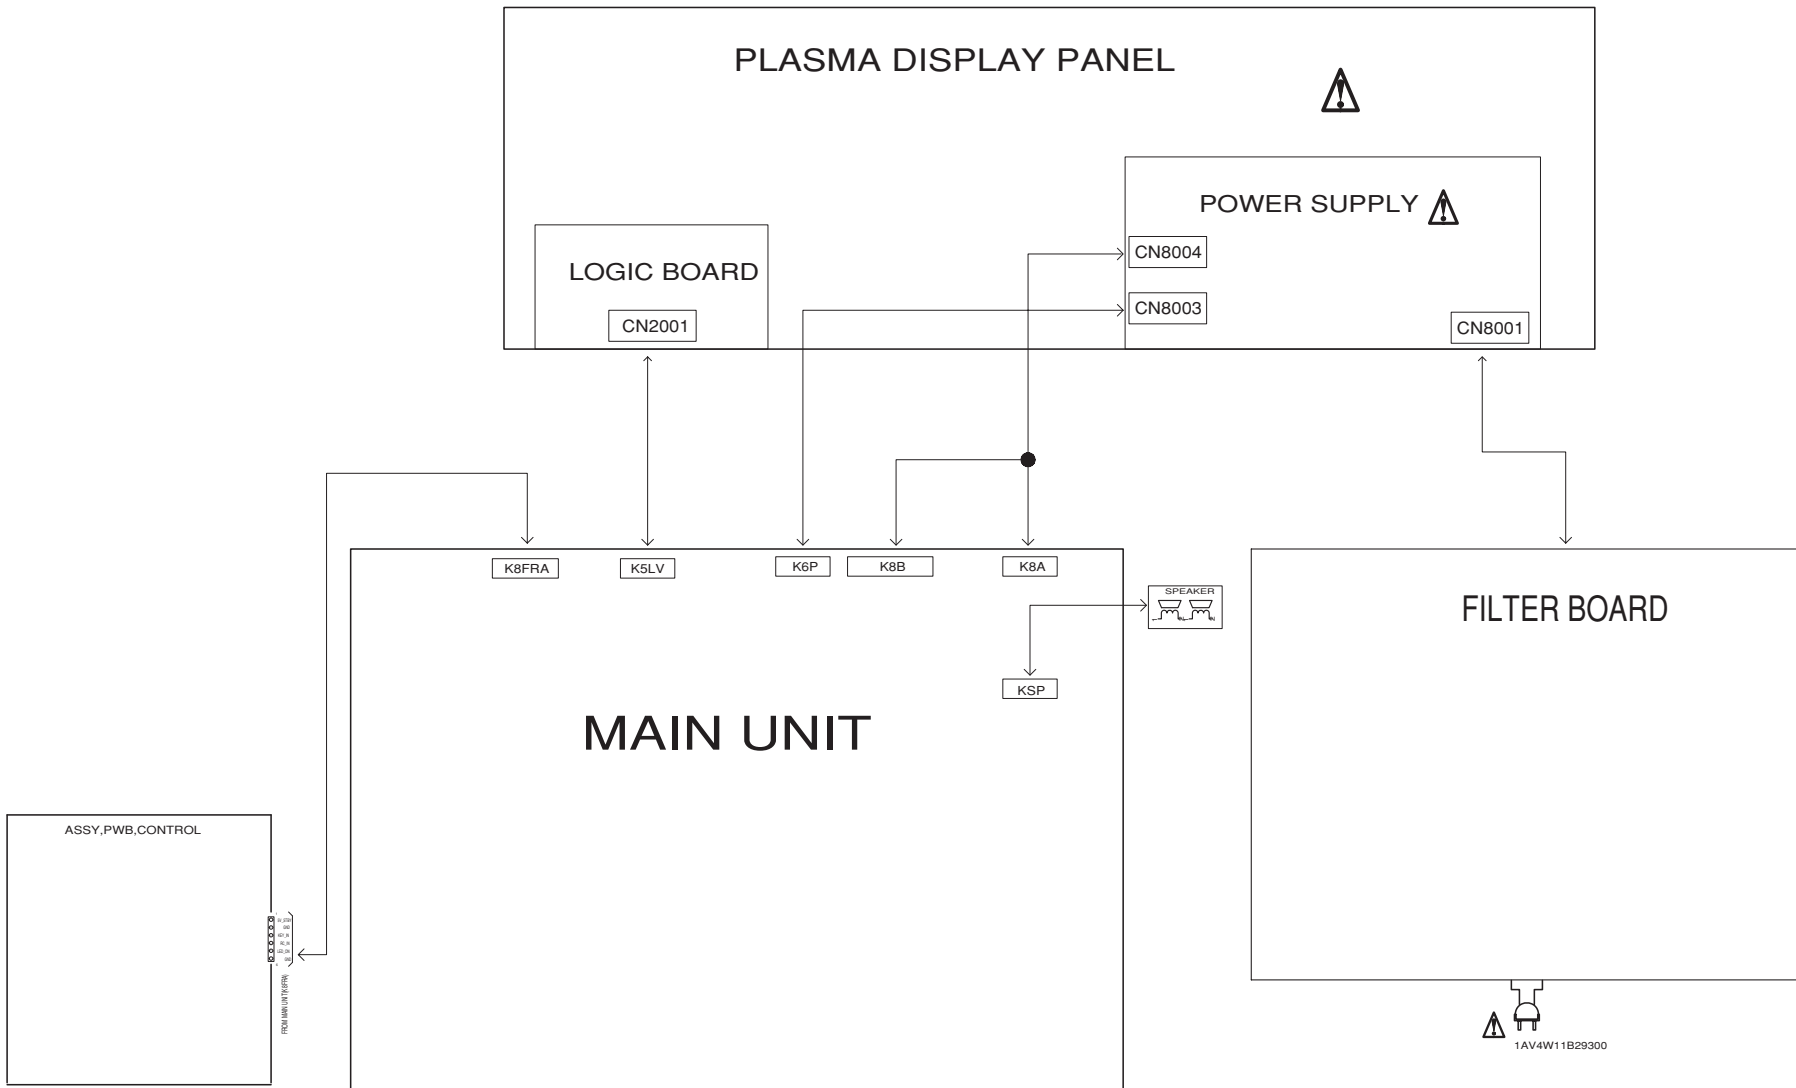


CAPACITOR AND RESISTOR CODE CHART

CAPACITOR (Example)

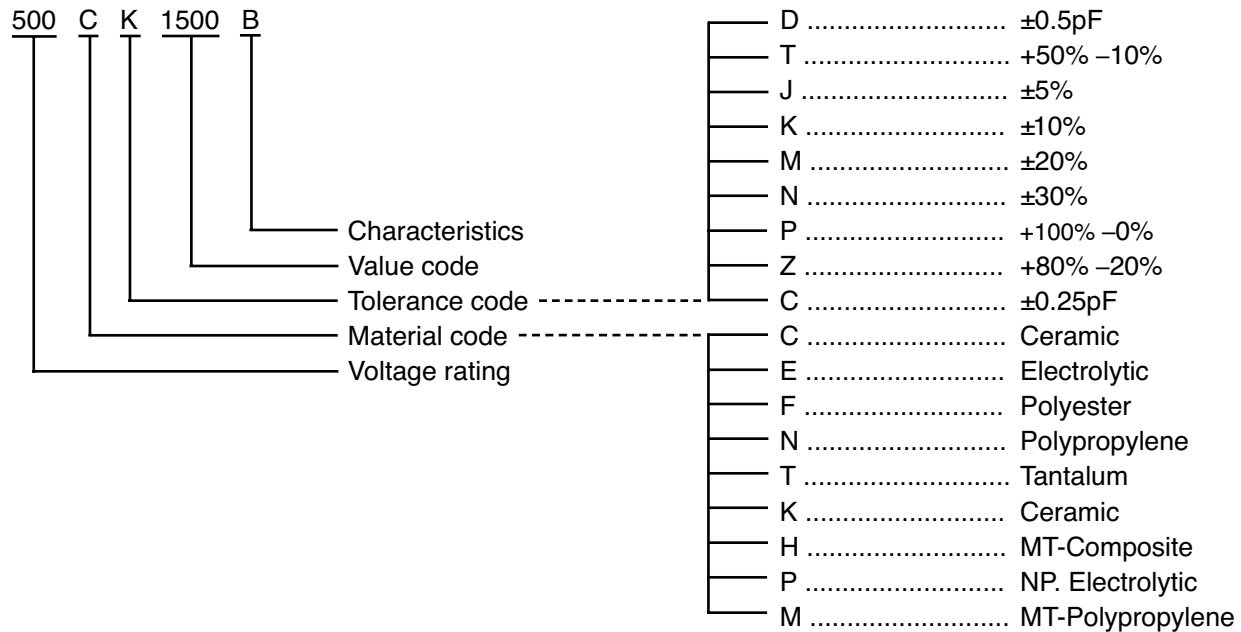

RESISTOR (Example)

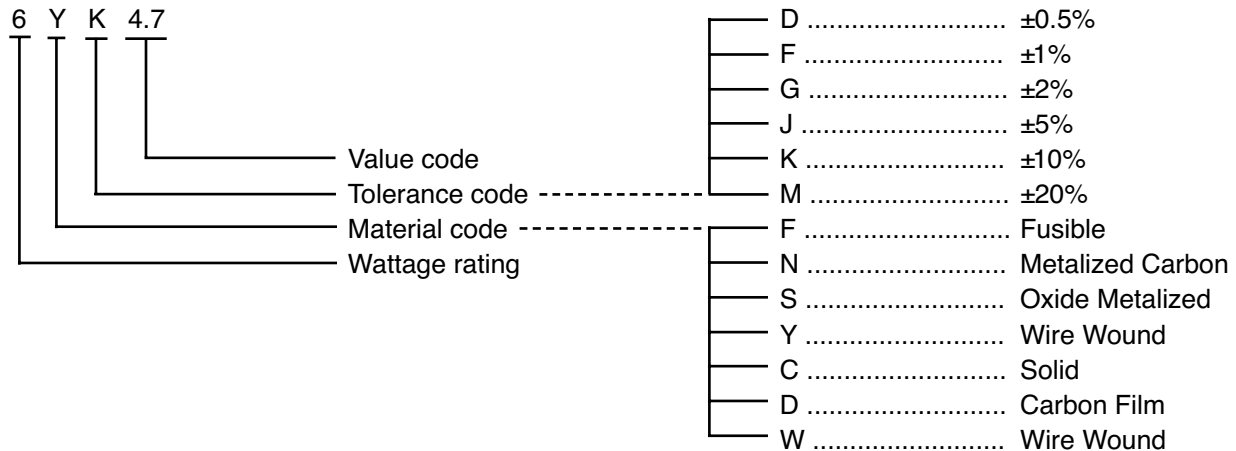

For parts or service contact

Sanyo Manufacturing Corporation
P.O. Box 2000
3333 Sanyo Road
Forrest City, Arkansas 72335-2000

